


Whirlpool 1CWTW5800SG0 02 - CONTROLS AND REAR PANEL PARTS

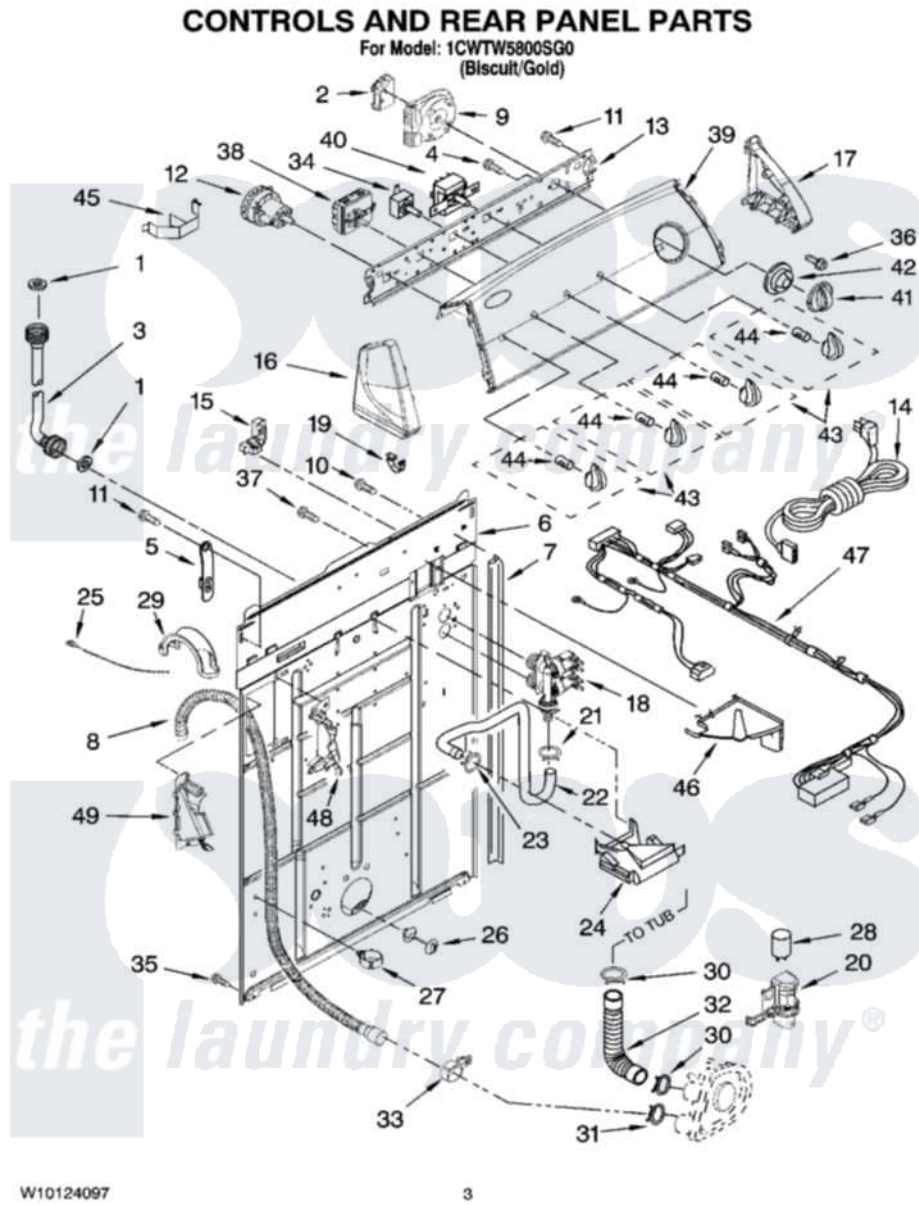

Whirlpool [Residential Whirlpool 1CWTW5800SG0 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	8576472			Circuit Board, Agitation Delay
3	8571377	89503		Hose-Inlet
"	8571378	89503		Hose-Inlet
4	3400073			Screw, Ground
5	8568314			Strap, Console
6	8318015			Panel, Rear
7	62747			Pad, Rear Panel
8	8559373	W10096921		Drain Hose Assembly
9	8577787			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
12	8577842	W10339250		Switch-WL

13	8566003		Bracket, Control
14	8578842	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8566036	8565958	Cap, End
17	8566033	8565955	Cap, End
18	3979347	3979346	Valve, Water Inlet And Thermistor Assembly
19	8312709		Clip-Console
20	8318046		Clip, Capacitor
21	301958	596669	Clamp, Manifold
22	8317974	8317926	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	3347868	W10339879	Tie, Cable
26	8519200		Support, Rear Panel
27	8541667		Clamp, Hose
28	8572718	8572720	Capacitor, Motor Start
29	8577378		U-Bend, Drain Hose
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8541668		Clamp, Hose
34	3949187	W10168262	Switch, Rotary
35	62863	3390631	Screw, 10-16 X 3/8
36	3400818		Screw, Timer Mounting
37	9740848		Screw, Mixing Valve Mounting
38	8577786		Switch, Water Temperature
39	8578812		Panel, Console
40	8578536		Switch, Rotary
41	W10034740		Knob, Timer
42	8566018		Dial,
43	W10034390		Knob, Control
44	8536939		Clip, Knob
45	8055003		Clip, Harness And Pressure Switch
46	8539874		Shield, Suds
47	3958083		Harness, Wiring
48	8541669		Bucket, Drain Hose
49	8541658		Bucket, Drain Hose

the laundry company[®]