


Whirlpool 2DLXR7244MQ2 01 - TOP AND CABINET PARTS

TOP AND CABINET PARTS

For Model: 2DLXR7244MQ2
(Designer White)

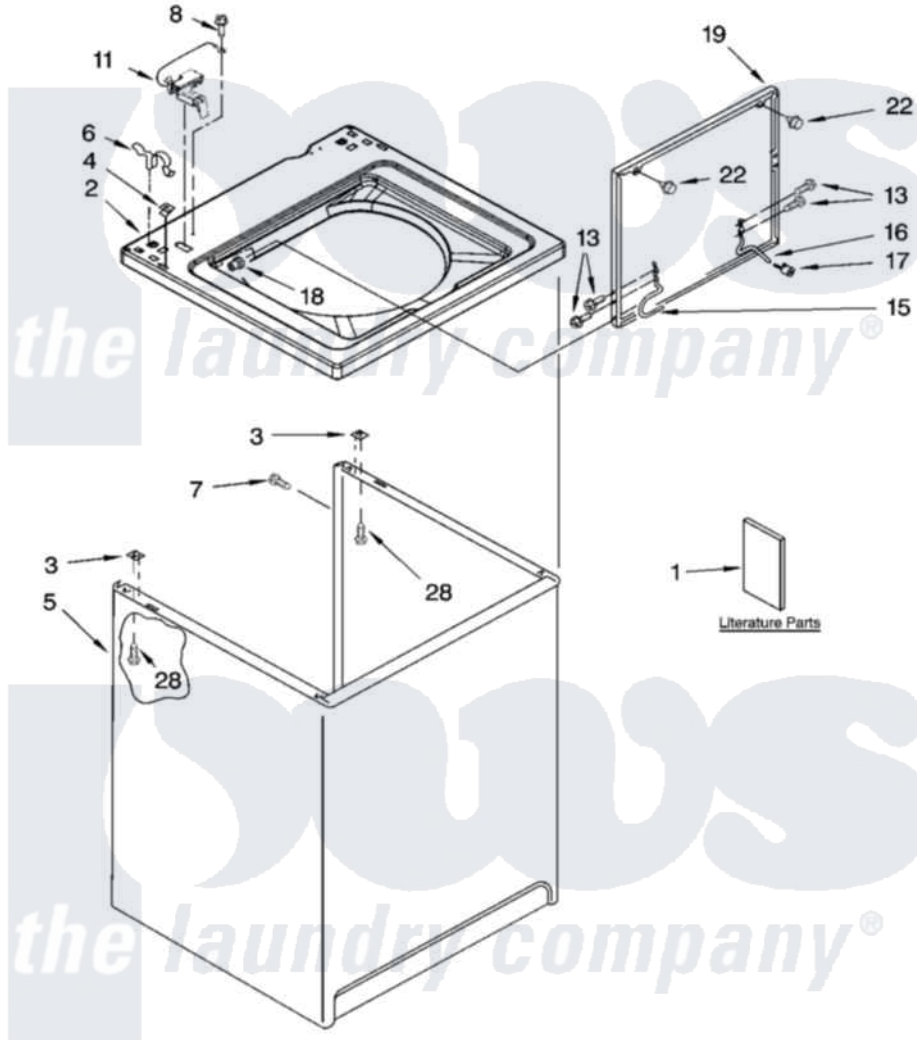

8545830

2

Whirlpool [Residential Whirlpool 2DLXR7244MQ2 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318342		Not Available	Installation Instructions
"	8539781		Not Available	Use & Care Guide
"	8542738		Not Available	Wiring Diagram
"	8545830		Not Available	Repair Parts List
2	8318068			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63424			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	3357011	308685		Side Trim)
8	3351614			Screw, Gearcase Cover Mounting
11	8318084			Switch, Lid
13	3351355	W10119828		Screw, Lid Hinge Mounting
15	8318088			Hinge, Lid
16	54583			Hinge, Lid

17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8542383	W10193857	Lid
22	9724509		Bumper, Lid
28	3390631		Screw, 10-16 X 3/8

