


Whirlpool 3DWED4800YQ0 01 - TOP AND CONSOLE PARTS

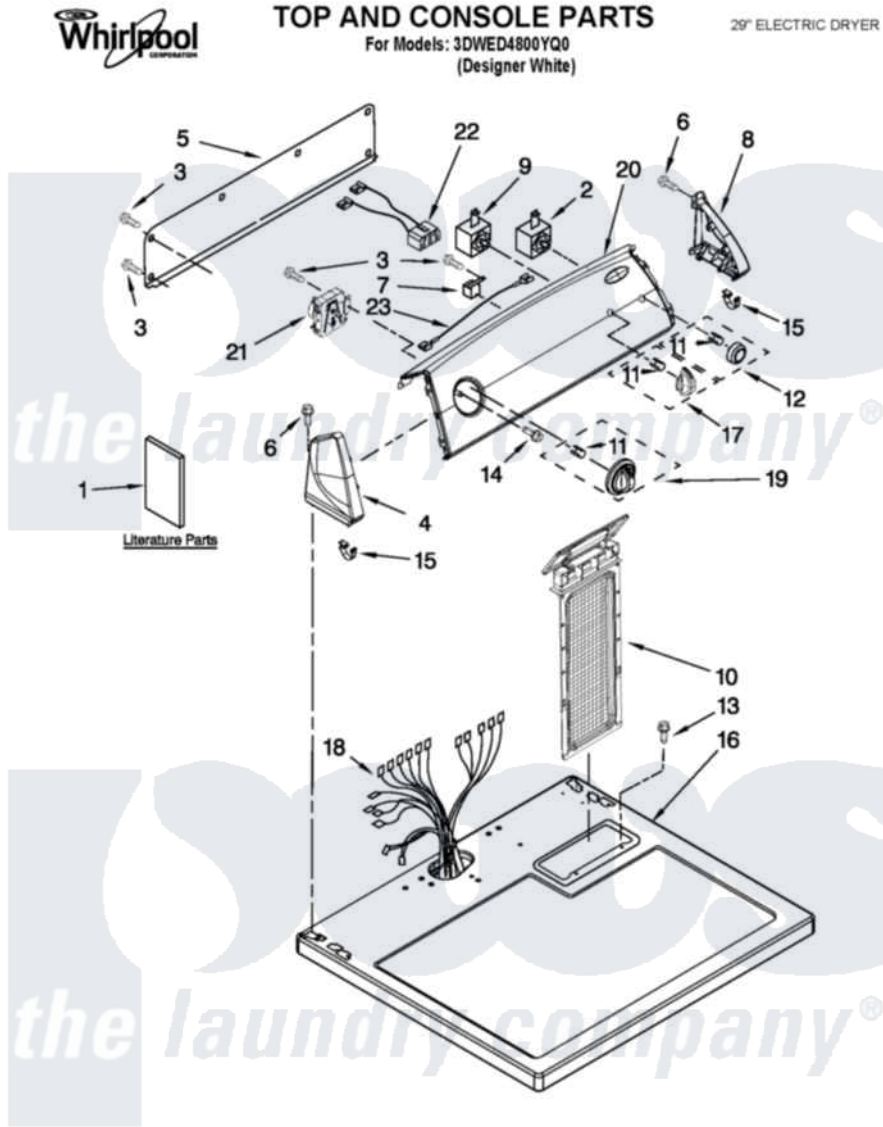

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

2-12 Litho in U.S.A. (LT) (psw)

1

Part No. W10481537 Rev. A

Whirlpool [Residential Whirlpool 3DWED4800YQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10454268		Not Available	INSTRUCTIONS, INSTALLATION
"	W10454267		Not Available	USE & CARE GUIDE
"	W10185985		Not Available	Wiring Diagram
2	W10112668			Switch, Push-To-Start
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	W10103406			Panel, Rear Console
6	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	3952439			Buzzer, Mini
8	8566032	8565954		Cap, End
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	W10034790			Knob, Push-To-Start
13	688082	487210		Screw, For Mtg. Service

13	000903	407440	Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	8312709		Clip-Console
16	8559800	8563663	Top
17	W10034380		Knob, Control
18	W10386312		Harness, Wiring
19	W10034750		Timer Knob Assembly
20	W10464658		Control Panel And Bracket Assembly
21	W10463293		Timer Assembly
22	8539893		Wire, Jumper
23	3401684		Jumper, Wire

