


Whirlpool 3DWED5605SQ0 01 - TOP AND CONSOLE PARTS

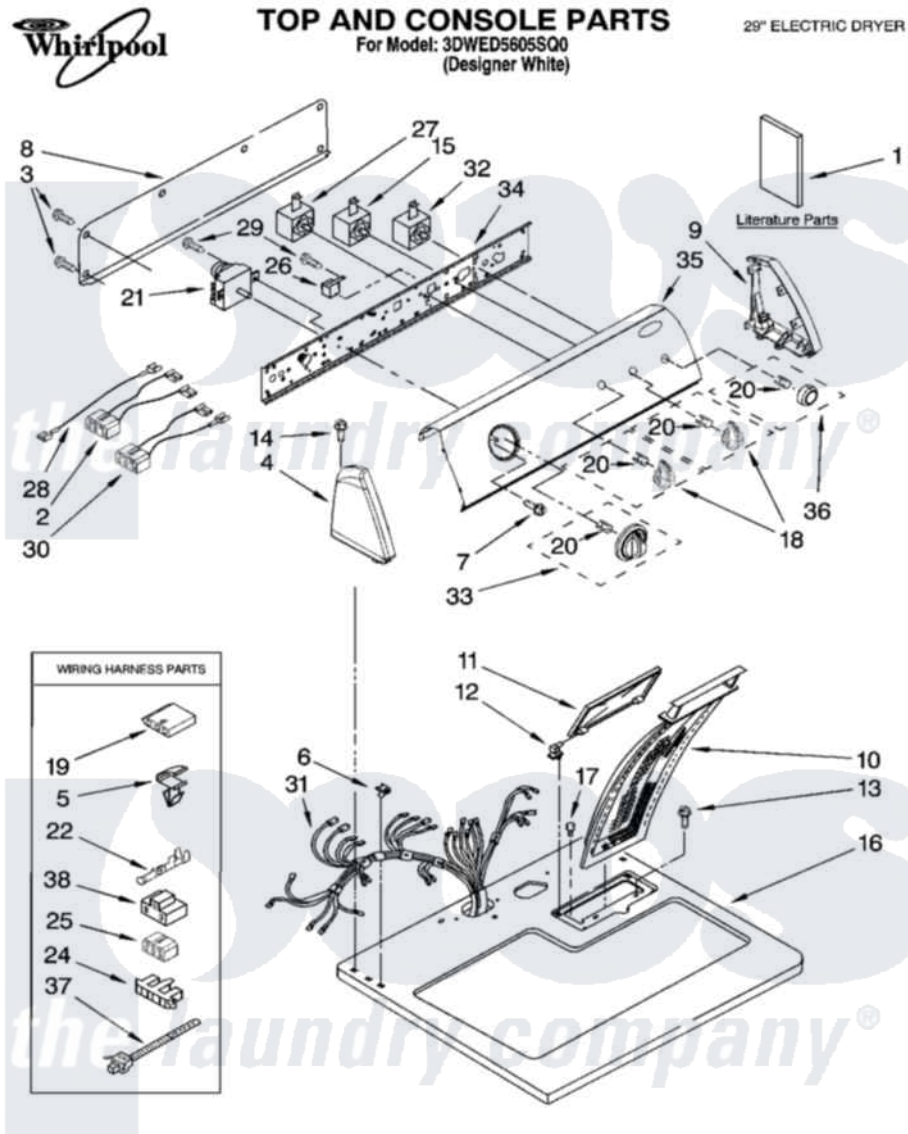

9-06 Litho in U.S.A. (ebk)

1

Part No. W10114524

Whirlpool [Residential Whirlpool 3DWED5605SQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10112128		Not Available	Use & Care Guide
"	3397626		Not Available	Installation Instructions (Spanish)
"	3397627		Not Available	Installation Instructions (English)
"	8533211		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3396029	8539893		Wire, Jumper
3	693995			Screw, Hex Head
4	8271369	279962		Endcap
5	3394427			Clip-Harness
6	357213			Nut, Push-In
7	8533951	3400859		Screw, Grounding
8	8274261			Do-It-Yourself Repair Manuals

9	8271363	279962	Endcap
10	349639		HAndle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	8316076	W10168170	Switch, Rotary
16	8271390	8521918	Top
17	297535	17258	Bumper
18	8565944		Knob, Control
19	3936144		Do-It-Yourself Repair Manuals
20	8536939		Clip, Knob
21	3406282		Timer Assembly
22	94614		Terminal
24	3397269		Connector, Timer
25	3347243		Block, Disconnect
26	3952439		Buzzer, Mini
27	3399642	W10168169	Switch, Wrinkle Guard
28	3401684		Jumper, Wire
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	3397695		Wire, Jumper
31	8529855		Harness, Wiring
32	8318447	W10112633	Switch, Push-To-Start
33	8566061		Timer Knob Assembly
34	8544895		Bracket, Control
35	8566078	Not Available	Panel, Control
36	8566065		Knob, Push-To-Start
37	3391249		Cable Tie, Push Mount
38	3401144		Connector

