


Whirlpool 3DWGD4800YQ0 01 - TOP AND CONSOLE PARTS

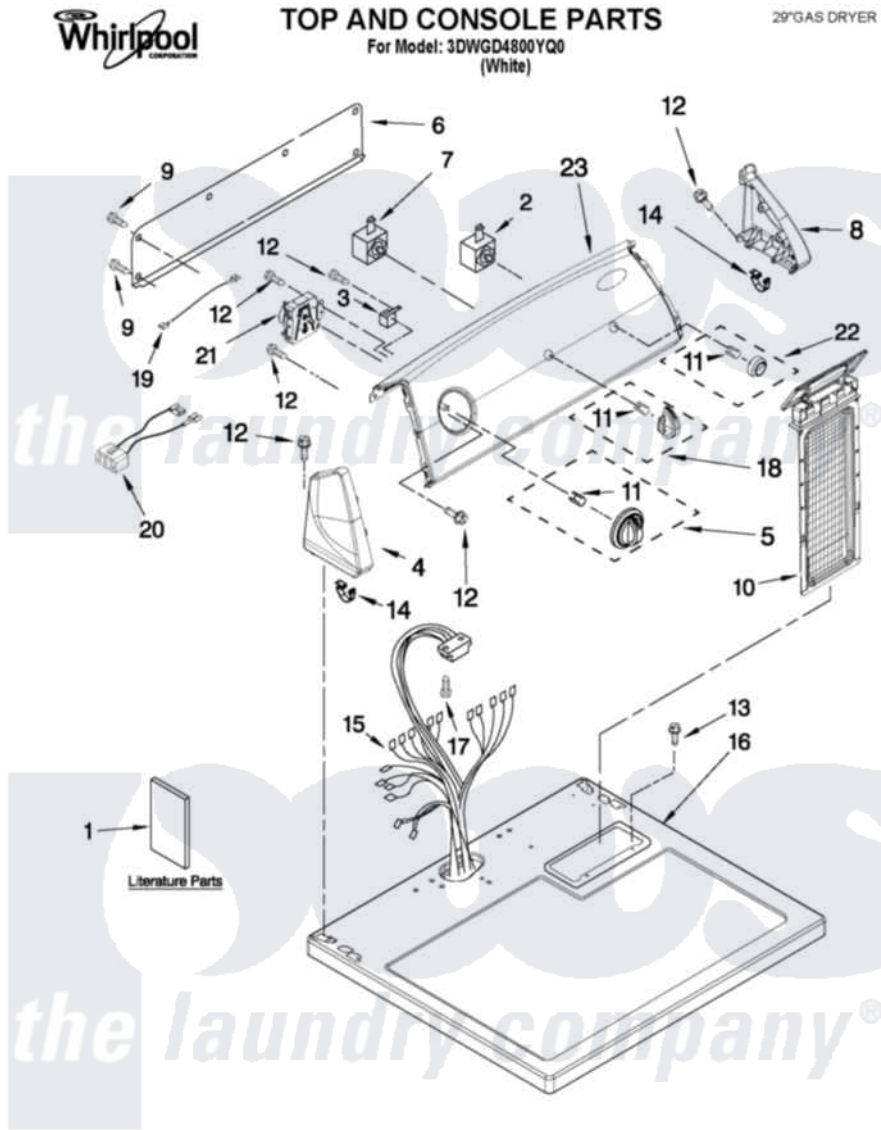

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST
 5-12 Litho in U.S.A. (BMN)(bay) 1 Part No. W10509485 Rev. A

Whirlpool [Residential Whirlpool 3DWGD4800YQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10454268		Not Available	INSTRUCTIONS, INSTALLATION
"	W10454267		Not Available	USE & CARE GUIDE
"	8578889		Not Available	Wiring Diagram
2	W10112668			Switch, Push-To-Start
3	3952439			Buzzer, Mini
4	8566035	8565957		Cap, End
5	W10034750			Timer Knob Assembly
6	W10103406			Panel, Rear Console
7	3399639			Switch, Rotary Temperature
8	8566032	8565954		Cap, End
9	693995			Screw, Hex Head
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688082	487240		Screw, For Mtg. Service

13	000903	407440	Capacitor
14	8312709		Clip-Console
15	W10450284		Harness, Wiring
16	8559800	8563663	Top
17	359625	487240	Screw, For Mtg. Service Capacitor
18	W10034380		Knob, Control
19	W10113080		Wire, Jumper
20	8539893		Wire, Jumper
21	W10463293		Timer Assembly
22	W10034790		Knob, Push-To-Start
23	W10464658		Control Panel And Bracket Assembly

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®