


# Whirlpool 3DWGD4800YQ0 02 - CABINET PARTS

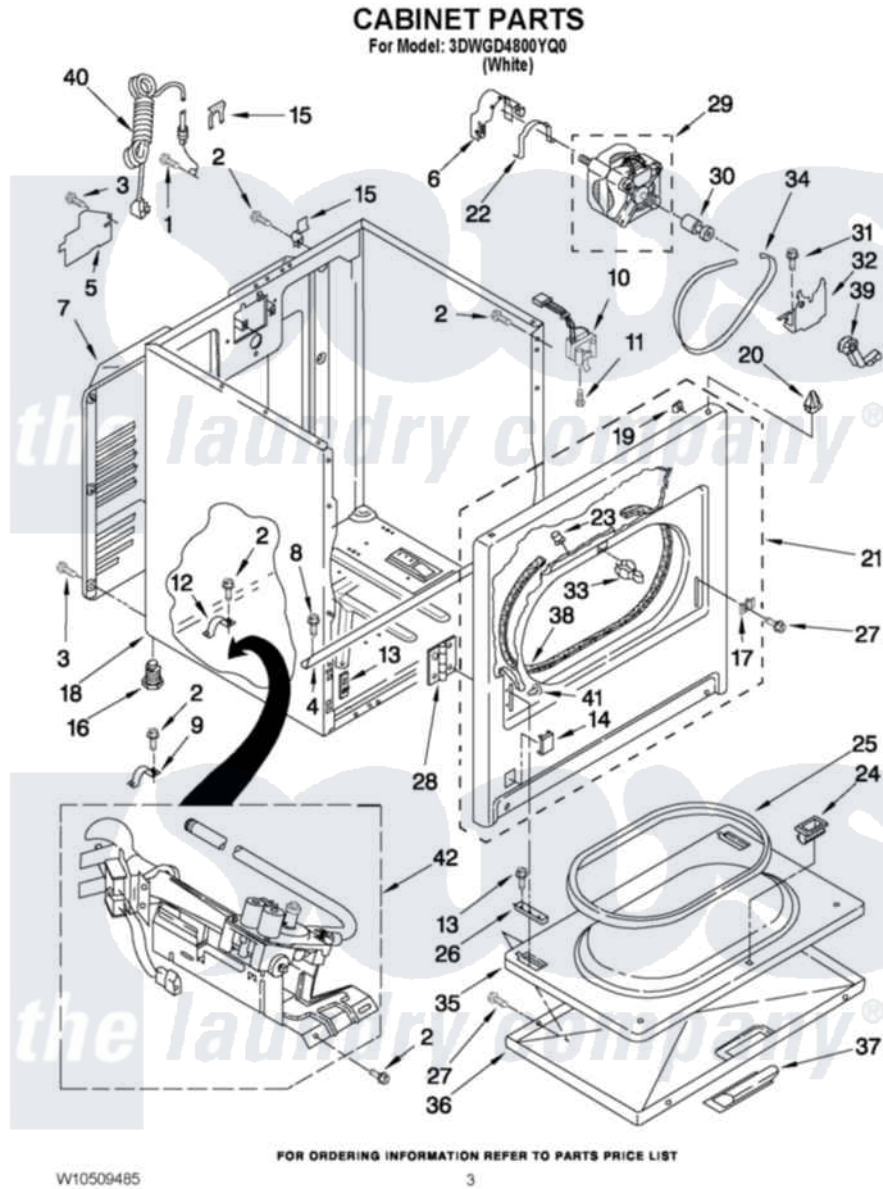

Whirlpool [Residential Whirlpool 3DWGD4800YQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
2	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
3	<a href="#">693995</a>			Screw, Hex Head
4	<a href="#">W10236073</a>			Bracket, Cabinet
5	<a href="#">3396795</a>			Cover, Terminal Block
6	<a href="#">3404162</a>			Clamp, Motor
7	3396805	<a href="#">280043</a>		Panel-Rear
8	<a href="#">3390631</a>			Screw, 10-16 X 3/8
9	<a href="#">3980175</a>			Clamp, Elbow
10	<a href="#">3406107</a>			Door Switch Assembly
11	697773	<a href="#">3395530</a>		Screw
12	<a href="#">341029</a>			Clamp, Pipe Door Spring
13	<a href="#">3394083</a>			Clip, Front Panel
14	<a href="#">8564457</a>			Plug, Front Panel
15	<a href="#">694415</a>			Clip, Strain Relief
16	3392100	<a href="#">49621</a>		Feet-Leveling

NI	<a href="#">279810</a>		Foot-Optional
17	<a href="#">3403630</a>		Plug, Strike Hole
18	8530603	<a href="#">8533643</a>	Cabinet
19	<a href="#">98234</a>		Clip, U-Bend
20	<a href="#">8066092</a>		Lock, Front Top
21	W10224855	<a href="#">W10248059</a>	Panel
22	<a href="#">W10121316</a>		Plug, Multivent
23	685203	<a href="#">279220</a>	Clip
24	<a href="#">3389441</a>		Door Catch Assembly
25	<a href="#">3405246</a>		Seal, Door Push-To-Start
26	<a href="#">337189</a>		Clip, Hinge
27	342055	<a href="#">488627</a>	Screw
28	<a href="#">W10362431</a>		Hinge And Pin Assembly
29	W10289660	<a href="#">W10416572</a>	Motor-Drive
30	<a href="#">685064</a>		Pulley, 50 Hz
31	<a href="#">3400500</a>		Bolt, 3405245 5/16-18 X 3/4
32	<a href="#">348780</a>		Base, Motor
33	<a href="#">3403431</a>		Strike, Panel
34	W10131364	<a href="#">341241</a>	Belt
35	<a href="#">3402341</a>		Door, Inner
36	<a href="#">3402335</a>		Door, Front
37	<a href="#">8566059</a>		Handle, Door
38	<a href="#">3406129</a>		Seal And Bearing Assembly
39	<a href="#">691366</a>		Idler And Pulley Assembly
40	<a href="#">W10476824</a>		Cord, Power
NI	N/P	Not Available	(PARTS NOT SHOWN)
"	<a href="#">W10476820</a>		10A Cord Adapters:
"	<a href="#">W10476822</a>		10A Cord Adapters:
41	<a href="#">3404413</a>		Plug, Hinge Hole
42	W10495626	Not Available	BURNER ASSEMBLY, 60 HZ. (SEE PAGES 7 & 8 FOR FURTHER BURNER BREAKDOWN)

