


Whirlpool 3DWTW4840YW0 02 - CONTROLS AND WATER INLET PARTS

CONTROLS AND WATER INLET PARTS

For Model: 3DWTW4840YW0
(White)

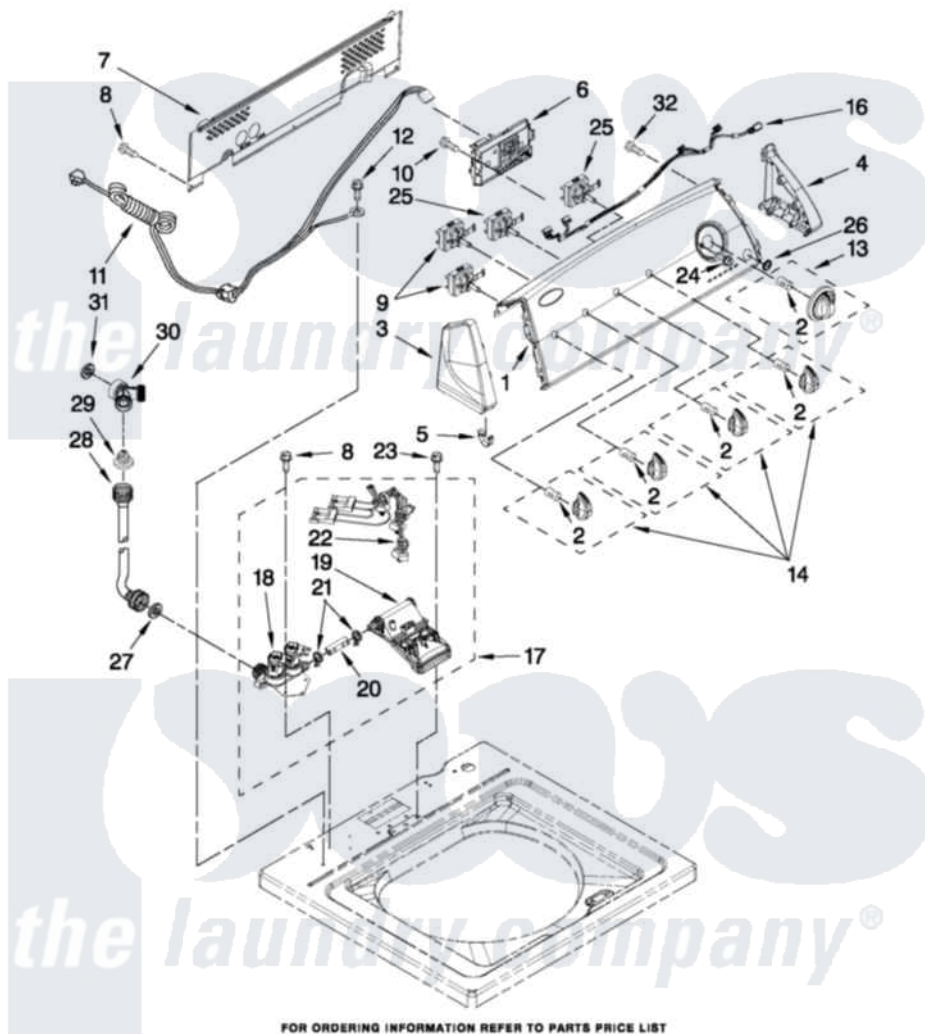

W10488854

3

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Whirlpool [Residential Whirlpool 3DWTW4840YW0 Washer Parts](#) Parts Diagram 02 - CONTROLS AND WATER INLET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10365093			Panel, Console
2	8536939			Clip, Knob
3	8566035	8565957		Cap, End
4	8566032	8565954		Cap, End
5	8312709			Clip-Console
6	W10470990	W10480695		Control-Elec
7	W10420985			Panel, Console Rear Cover
8	1157158	489069		Xxscrew, 10-12 X 1/2
9	W10285512			Switch, Rotary Encoder
10	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
11	W10422755			Cord, Power
NI	N/P		Not Available	(PARTS NOT SHOWN)
"	W10446855			10A Cord Lock
"	W10474959			10A Cord Adapters:
"	W10476822			10A Cord Adapters:

"	W10476820		10A Cord Adapters:
12	3400076		Screw, Bracket Mounting
13	W10034750		Timer Knob Assembly
14	W10034380		Knob, Control
16	W10291176		Harness, Upper
17	W10337066		Inlet Assembly, Water
18	W10336726	Not Available	VALVE, WATER MIXING
19	W10441423		Vacuum Break
20	W10238347		Hose, Vacuum Break
21	W10117298	596669	Clamp, Manifold
22	W10344775		Harness, Valve
23	8281163		Screw, Dispenser Housing Mounting
24	3400818		Screw, Timer Mounting
25	W10285511		Switch, Rotary Encoder
26	W10251309		Pushbutton, Start
27	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
28	W10194210	89503	Hose-Inlet
"	W10196191	89503	Hose-Inlet
29	353362	285452	Hose Screen
30	W10269488		Connector- Hose, Y
31	3357450		Washer, Water Inlet Hose
32	3400073		Screw, Ground

twos
the laundry company®

twos
the laundry company®