


Whirlpool 3DWTW4840YW0 03 - BASKET AND TUB PARTS

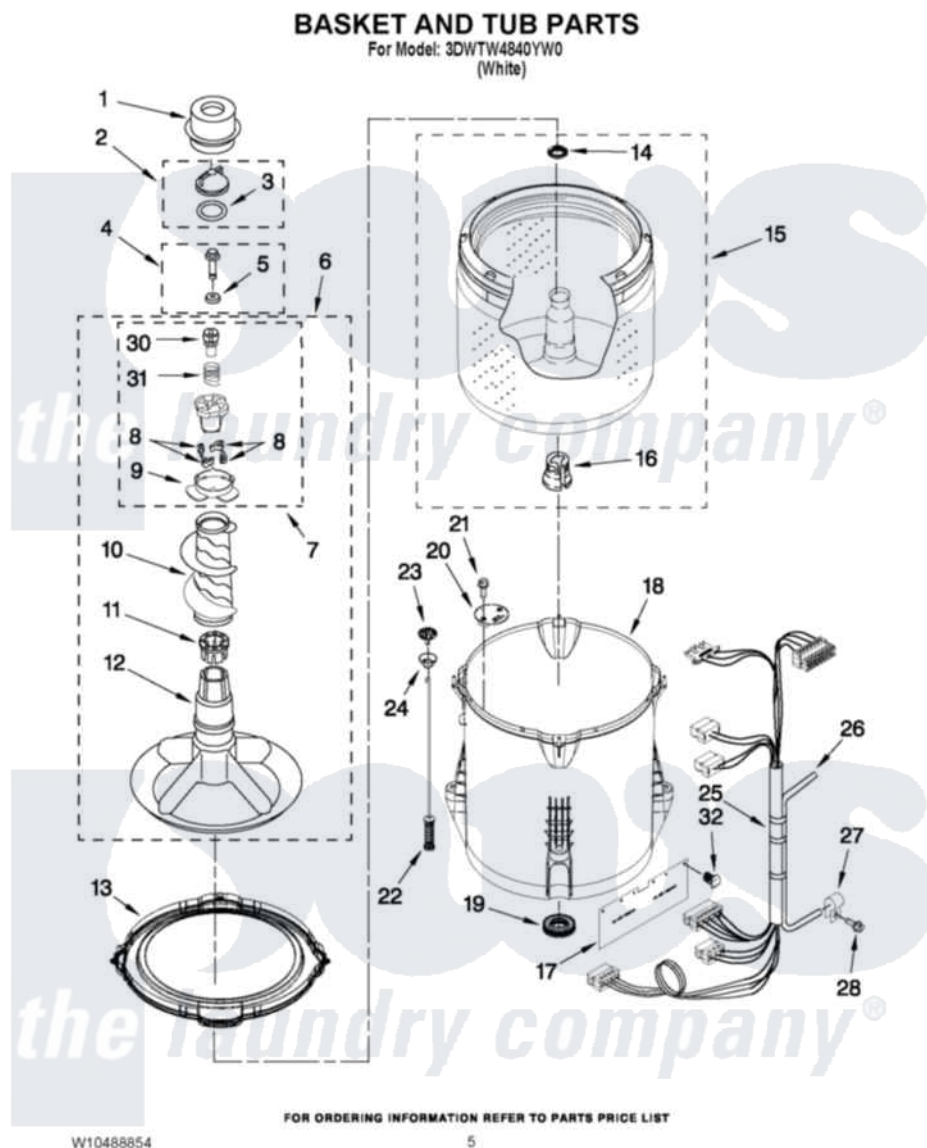

Whirlpool [Residential Whirlpool 3DWTW4840YW0 Washer Parts](#) Parts Diagram 03 - BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8580006			Dispenser, Fabric Softener
2	3354733	W10074580		Cap, Barrier
3	W10072840			Fabric Softener
4	W10003790			Screw And Washer
5	3949550			Washer
6	8578210			Agitator, Complete Assembly
7	8537434			Cam, Driven
8	3366877	80040		Dog-Agitator
9	8055141			Bearing-Driven Cam
10	8054468			Auger, Agitator
11	8055228			Spacer, Thrust
12	8578209			Agitator, Complete Assembly
13	W10215108			Ring, Tub
14	21366			Nut, Spanner
15	W10358261	W10349185		Basket
16	389140			Tub Block, Basket Drive

17	W10339098		Shield, Splash
18	W10238320	W10371566	Tub-Outer
19	W10006371	W10324647	Seal-Tub
20	W10215093		Filter, Drain Pump
21	8533928		Screw, 8-18 X 3/4
22	W10257088	W10349191	Suspension
23	W10405423	W10440729	Suspension
24	W10256551	W10440729	Suspension
25	W10422646		Harness, Lower
26	353244		Hose, Pressure Switch
27	W10005430		Clamp, Pressure Hose Retainer
28	8533943	W10109200	Screw, Baffle Mounting
30	8533540		Retainer, Spring
31	8055140		Spring, Compression
32	W10429200		Retainer, Push In

