


Whirlpool 3HLER5437JQ2 01 - TOP AND CONSOLE PARTS

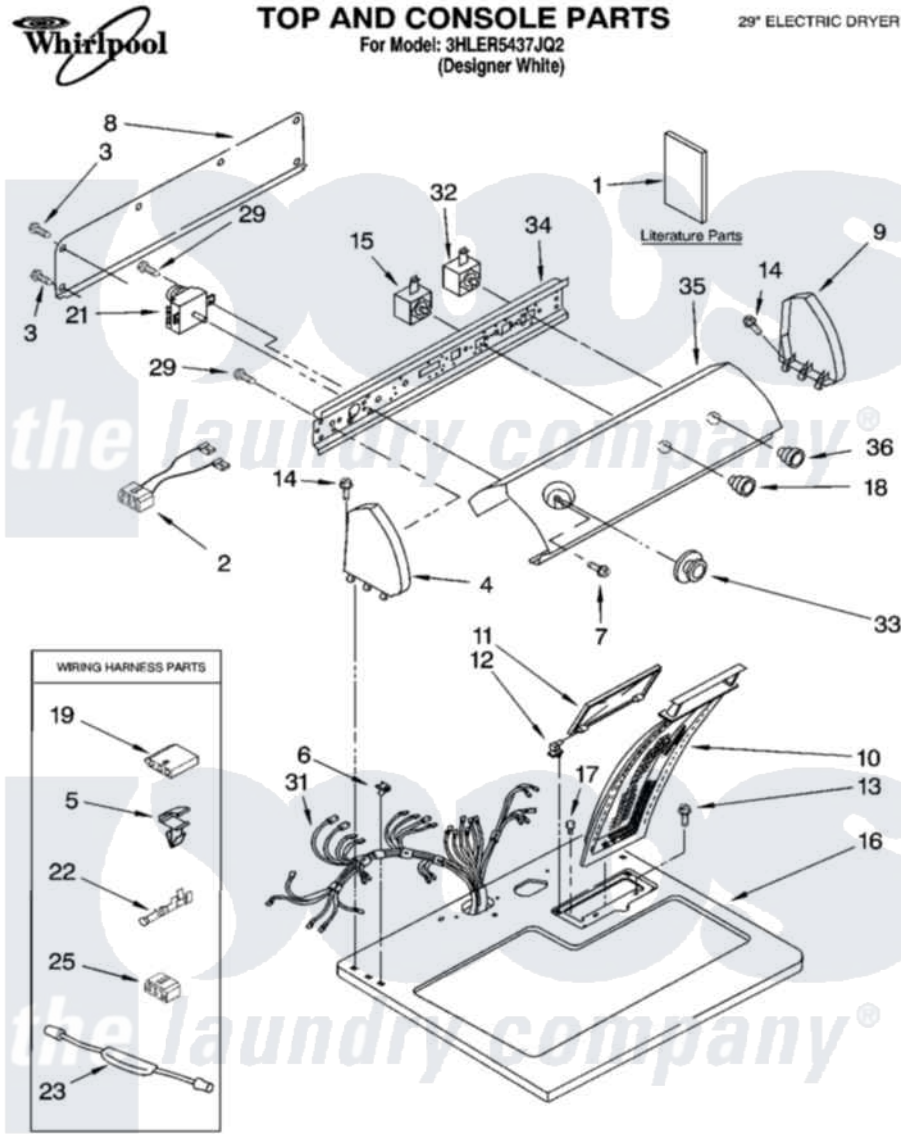

02-04 Litho in U.S.A. (djc)

1

Part No. 8180226

Whirlpool [Residential Whirlpool 3HLER5437JQ2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8318354		Not Available	Literature Parts (Use & Care Guide)
"	LIT3397626		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT3397627		Not Available	Literature Parts (Installation Instructions (English))
"	LIT8533212		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3396028	8283286		Wire-Jumper
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
5	3394427			Clip-Harness
6	357213			Nut, Push-In
7	3400859			Screw, Grounding
8	8274261			Do-It-Yourself Repair Manuals

9	8271359	279962	Endcap
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3399638		Switch, Temperature
16	8271390	8521918	Top
17	297535	17258	Bumper
18	8271339	3957799	Knob, Control
19	3936144		Do-It-Yourself Repair Manuals
21	3396215		Timer 60 Hz
22	94614		Terminal
23	3406626	279872	Resistor
25	3347243		Block, Disconnect
29	3390646	W10139210	Screw, 8-18 X 5/16
31	8529856		Harness, Wiring
32	3395382		Switch, Push-To-Start
33	8312687	3957754	Timer Knob Assembly
34	8271418		Bracket, Control
35	8318381		Panel, Control
36	8271341	3957804	Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	3406839		Dry Rack Assembly
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

