


Whirlpool 3LCED9100WQ0 01 - TOP AND CONSOLE PARTS

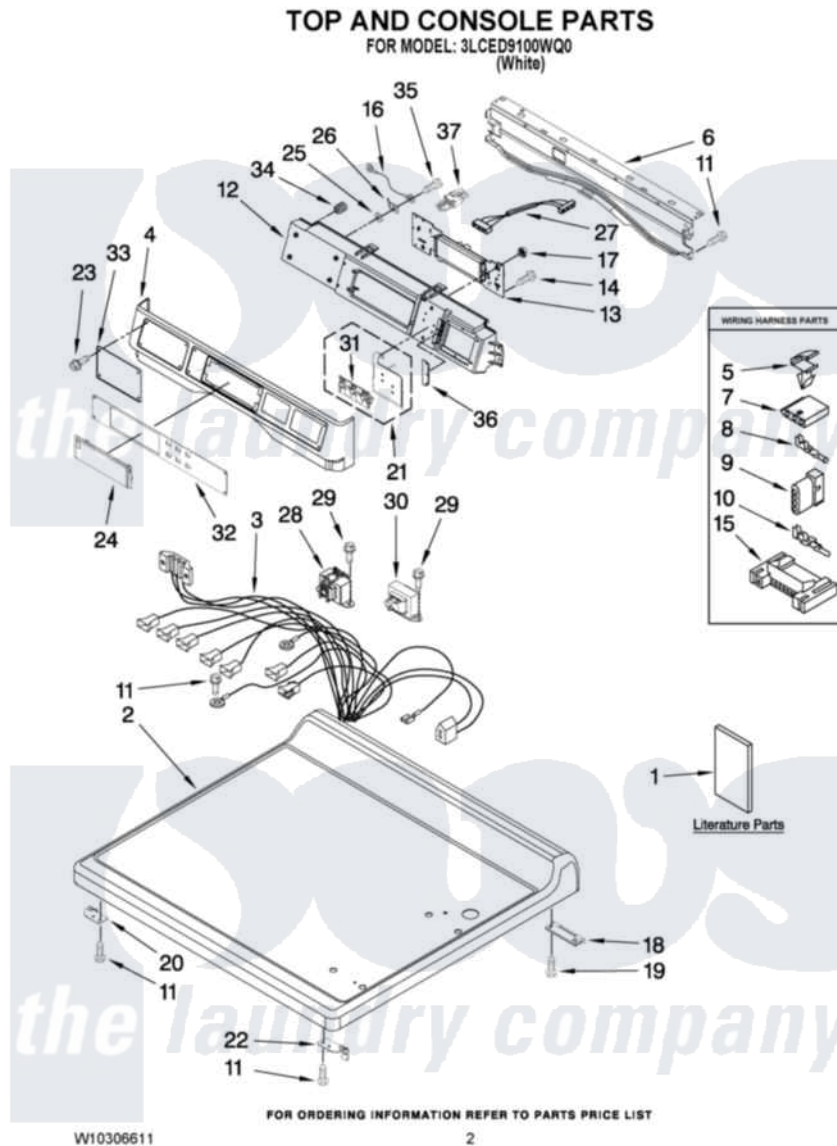

Whirlpool Residential Whirlpool 3LCED9100WQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10306613			USER INSTRUCTION
"	W10306597		Not Available	INSTALLATION INSTRUCTION
"	W10306604		Not Available	TECH SHEET
"	W10306611			PARTS LIST
2	W10137410			Top
3	W10111045			Harness, Main
4	W10137459			Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	W10080700			Screw, 8-18 X 1/2
12	W10137427			Console
13	W10166346			User-Interface Assembly

14	489136		Screw, 3-24 X 1/32
15	3395683		Receptacle, Multi-Terminal
16	W10188087		Ground Wire Assembly
17	W10139046		Nut 6-32
18	8565018		Assembly, Hinge And Pin
19	W10080310		Screw, 8-18 X 1/2
20	W10137445		Bracket - Top Panel, Left
21	W10135255		Assembly, Membrane Switch And Backer Plate
22	W10137444		Bracket - Top Panel, Right
23	W10137457		Screw, 8-32 X 3/64
24	W10131114		Cover, Display
25	W10189075		Washer, Brass
26	3373818		Tab-Grounding
27	W10166307		Harness, Communication
28	W10205520		Transformer, 120 To 22.5
29	W10080820		Screw, 8-18 X .298
30	W10237958		Transformer, 240 - 120
31	W10137455		Push Button
32	W10296434	W10348376	Fascia-Console
33	W10296436		Fascia-Dispenser
34	W10189313		Inserts
35	488234		Screw 8-32 X 1/4
36	W10187276		Seal, Console
37	W10133282		Switch, Jumper Service Vault

the laundry company[®]

the laundry company[®]