


Whirlpool 3LCED9100WQ0 02 - CABINET PARTS

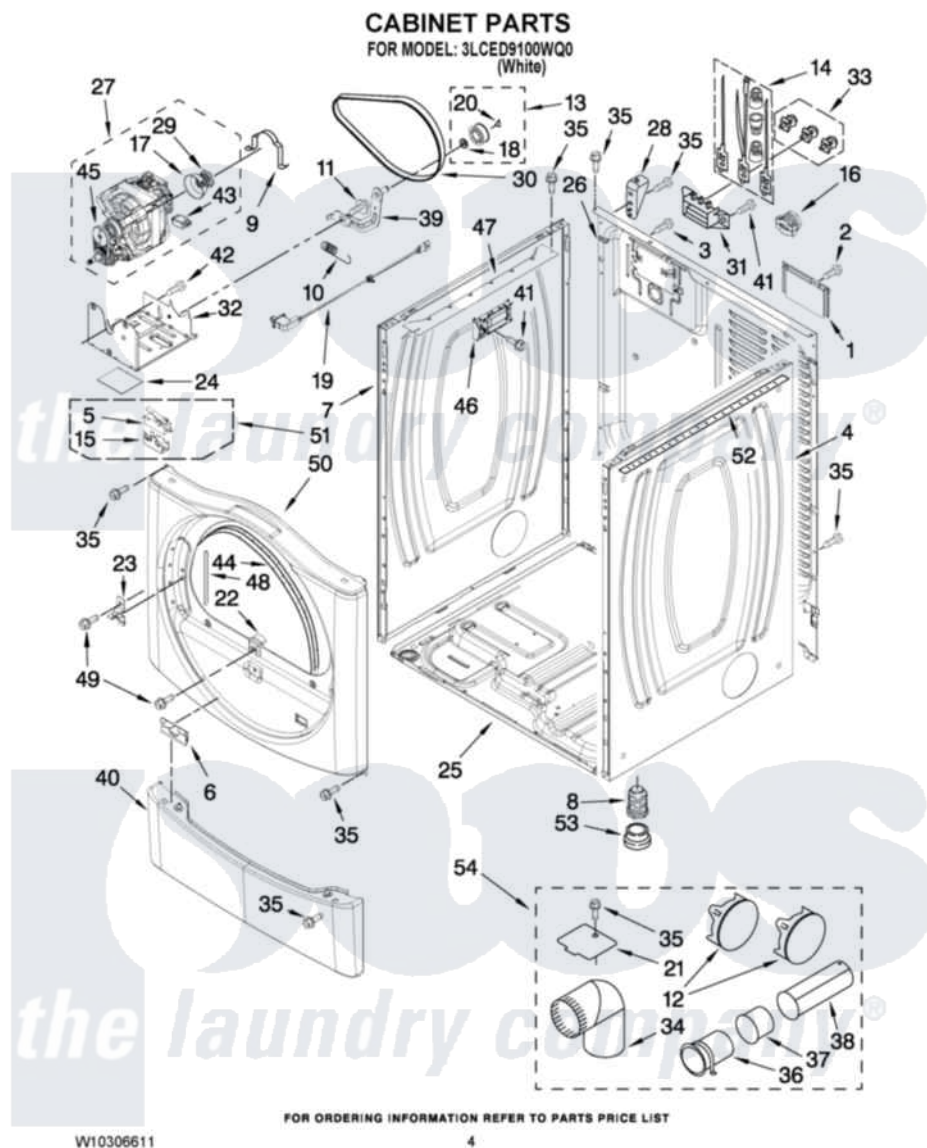

Whirlpool [Residential Whirlpool 3LCED9100WQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096918			Cover, Terminal Block
2	3390814	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	W10080830			Screw, 10-32 X 5/8
4	8565048			Panel, Side
5	8564010			Assembly, Switch And Actuator
6	8519459			Clip, Toe Panel
7	8565054			Panel, Side
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	49252			Plug, Multivent
13	3388672	279640		Pulley-ldr

14	279318		Terminal Tinned And Brass Panel
15	8564011		Bracket-Switch
16	8316644		Power Cord, Strain Relief
17	3393657		Restrainer, Belt
18	233520		Washer, Thrust
19	W10251066		Assembly, Door Switch
20	690997		Washer, Thrust
21	8066115	3394331	Plate Cover
22	8565083		Ramp, Door
23	8565122		Strike, Door
24	W10212660		Pad, Sound Dampening
25	W10225178		Base, Cabinet
26	W10225180		Panel, Rear
27	W10142402	W10416574	Motor-Drive
28	W10137398		Stop, Top Panel
29	W10167237		Pulley
30	W10131172		Belt, Drive
31	3397659		Block, Terminal
32	W10135695		Bracket, Motor
33	279393		Terminal Block Screw Kit
34	49026		4" - 90° Elbow
35	W10080700		Screw, 8-18 X 1/2
36	8563747		Exhaust Pipe Medium Pipe
37	8563750		Exhaust Pipe
38	8563749		Exhaust Pipe
39	W10141380	W10344192	Idler Assembly
40	8540621		Panel, Toe
41	W10142290		Screw, 8-18 X 5/16
42	3400934		Assembly, Screw And Insulator
43	3388235		Switch, Centrifugal
44	3387242		Seal, Front Panel
45	3405160		Belt, Drive
46	W10166301		Control Board
47	8563727		Bracket, Control
48	8565043		Plug, Strip Front Panel
49	W10080710		Screw, 10-16 X 1/2
50	W10255282		Front Panel
51	W10259136		Switch, Assembly
52	8318396		Foam-Seal
53	3391943		Boot, Foot
54	279818	W10470674	Dryer Exhaust Kit

the laundry company[®]