


Whirlpool 3LCED9100WQ1 01 - TOP AND CONSOLE PARTS

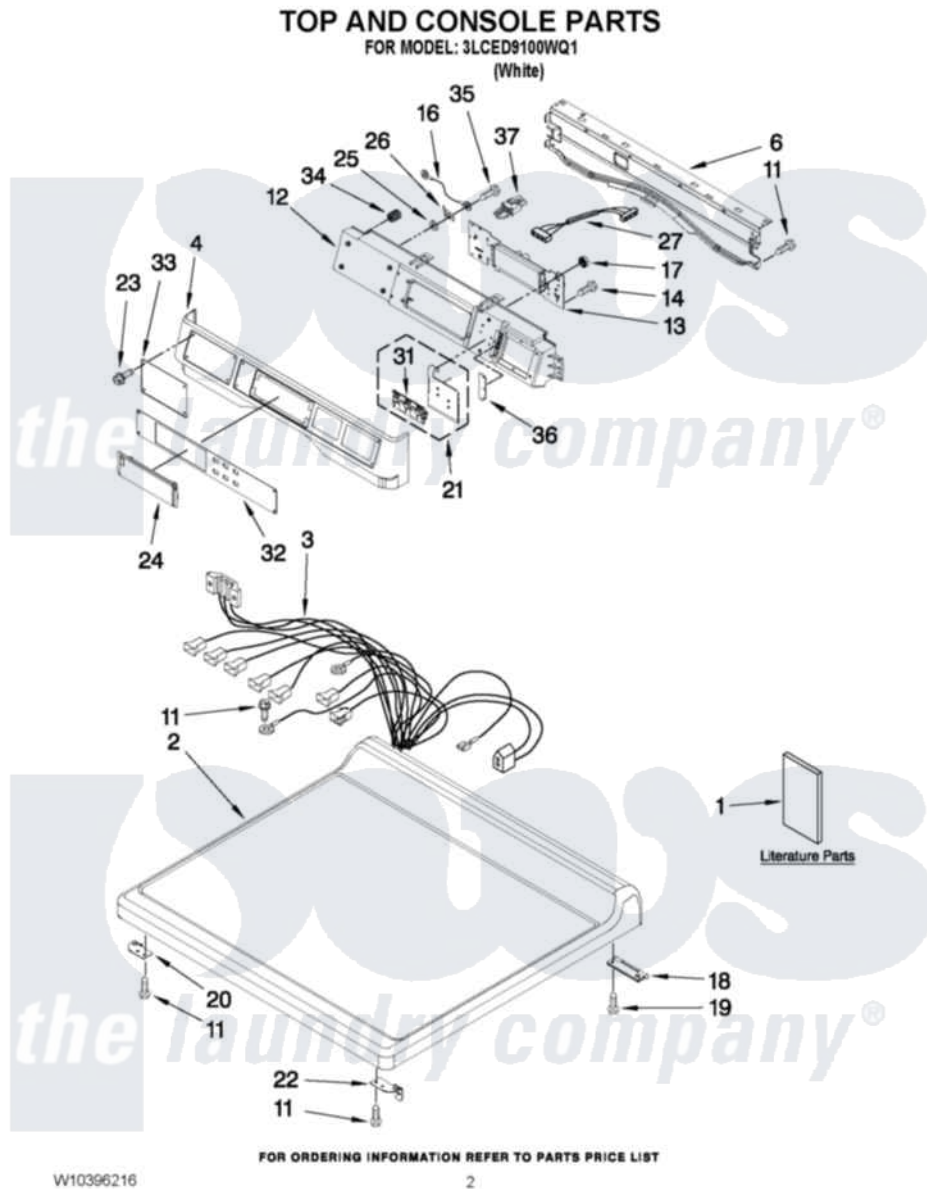

Whirlpool [Residential Whirlpool 3LCED9100WQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10306613			USER INSTRUCTION
"	W10306597		Not Available	INSTALLATION INSTRUCTION
"	W10306604		Not Available	TECH SHEET
2	W10137410			Top
3	W10386326			Harness, Main
4	W10137459			Console
6	8565237			Bracket, Console
11	342055	488627		Screw
12	W10137427			Console
13	W10166346			User-Interface Assembly
14	489136			Screw, 3-24 X 1/32
16	W10188087			Ground Wire Assembly
17	W10139046			Nut 6-32
18	8565018			Assembly, Hinge And Pin
19	3390647	488729		Screw
20	W10137445			Bracket - Top Panel, Left

21	W10135255	Assembly, Membrane Switch And Backer Plate
22	W10137444	Bracket - Top Panel, Right
23	W10137457	Screw, 8-32 X 3/64
24	W10267645	Cover, Display
25	W10189075	Washer, Brass
26	3373818	Tab-Grounding
27	W10166307	Harness, Communication
31	W10137455	Push Button
32	W10348376	Fascia-Console
33	W10348373	Fascia-Dispenser
34	W10189313	Inserts
35	488234	Screw 8-32 X 1/4
36	W10187276	Seal, Console
37	W10133282	Switch, Jumper Service Vault

