


# Whirlpool 3LCGD9100WQ1 01 - TOP AND CONSOLE PARTS

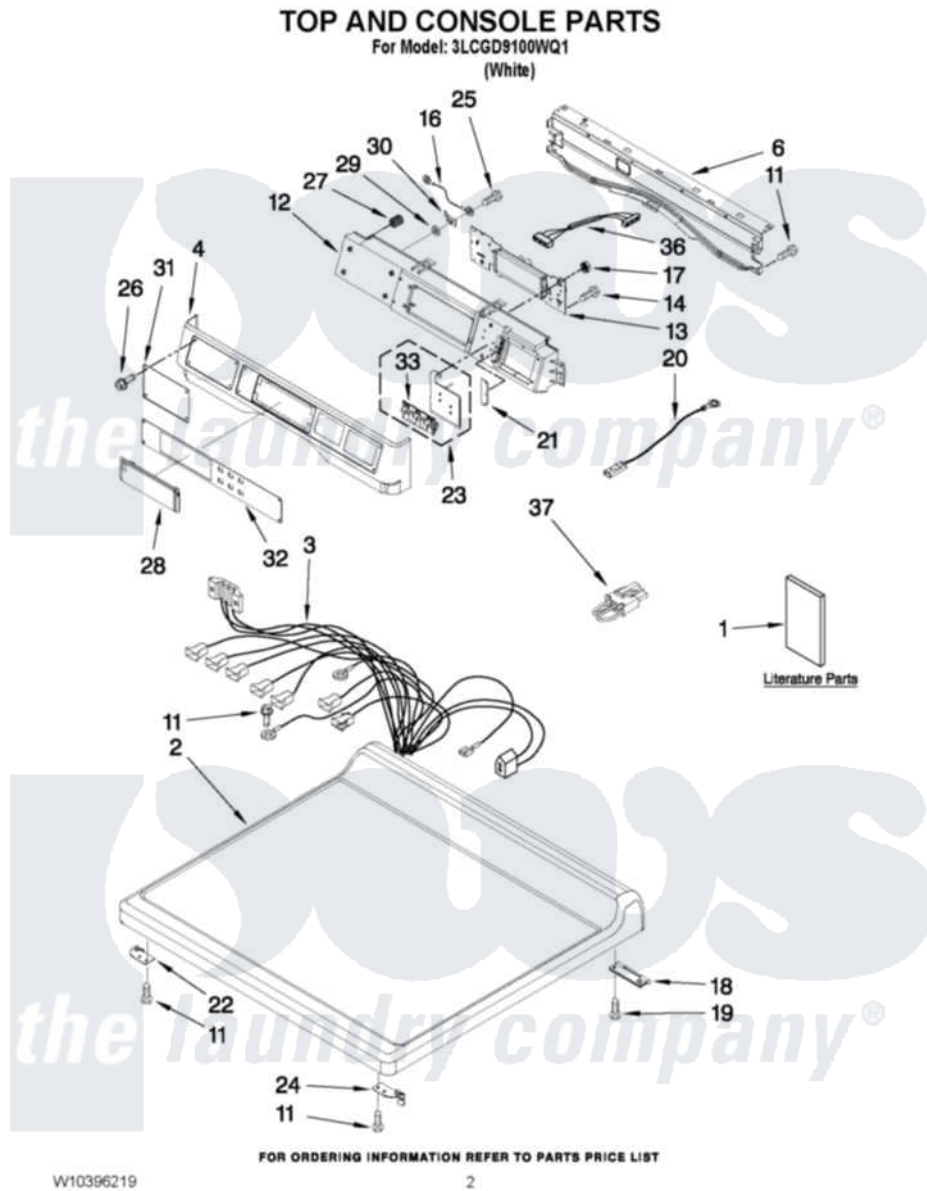

Whirlpool [Residential Whirlpool 3LCGD9100WQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10310116			USER INSTRUCTION
"	W10310126		Not Available	INSTALLATION INSTRUCTION
"	W10306604		Not Available	TECH SHEET
2	<a href="#">W10137410</a>			Top
3	<a href="#">W10386327</a>			Harness, Main
4	<a href="#">W10137459</a>			Console
6	<a href="#">8565237</a>			Bracket, Console
11	342055	<a href="#">488627</a>		Screw
12	<a href="#">W10137427</a>			Console
13	<a href="#">W10166346</a>			User-Interface Assembly
14	<a href="#">489136</a>			Screw, 3-24 X 1/32
16	<a href="#">W10188087</a>			Ground Wire Assembly
17	<a href="#">W10139046</a>			Nut 6-32
18	<a href="#">8565018</a>			Assembly, Hinge And Pin
19	3390647	<a href="#">488729</a>		Screw
20	<a href="#">W10257051</a>			Jumper, Static

21	<a href="#">W10187276</a>	Seal, Console
22	<a href="#">W10137445</a>	Bracket - Top Panel, Left
23	<a href="#">W10135255</a>	Assembly, Membrane Switch And Backer Plate
24	<a href="#">W10137444</a>	Bracket - Top Panel, Right
25	<a href="#">488234</a>	Screw 8-32 X 1/4
26	<a href="#">W10137457</a>	Screw, 8-32 X 3/64
27	<a href="#">W10189313</a>	Inserts
28	<a href="#">W10267645</a>	Cover, Display
29	<a href="#">W10189075</a>	Washer, Brass
30	<a href="#">3373818</a>	Tab-Grounding
31	<a href="#">W10348373</a>	Fascia-Dispenser
32	<a href="#">W10348376</a>	Fascia-Console
33	<a href="#">W10137455</a>	Push Button
36	<a href="#">W10166307</a>	Harness, Communication
37	<a href="#">W10133282</a>	Switch, Jumper Service Vault

