


Whirlpool 3LWTW4840YW0 02 - CONTROLS AND WATER INLET PARTS

CONTROLS AND WATER INLET PARTS

For Model: 3LWTW4840YW0
(White)

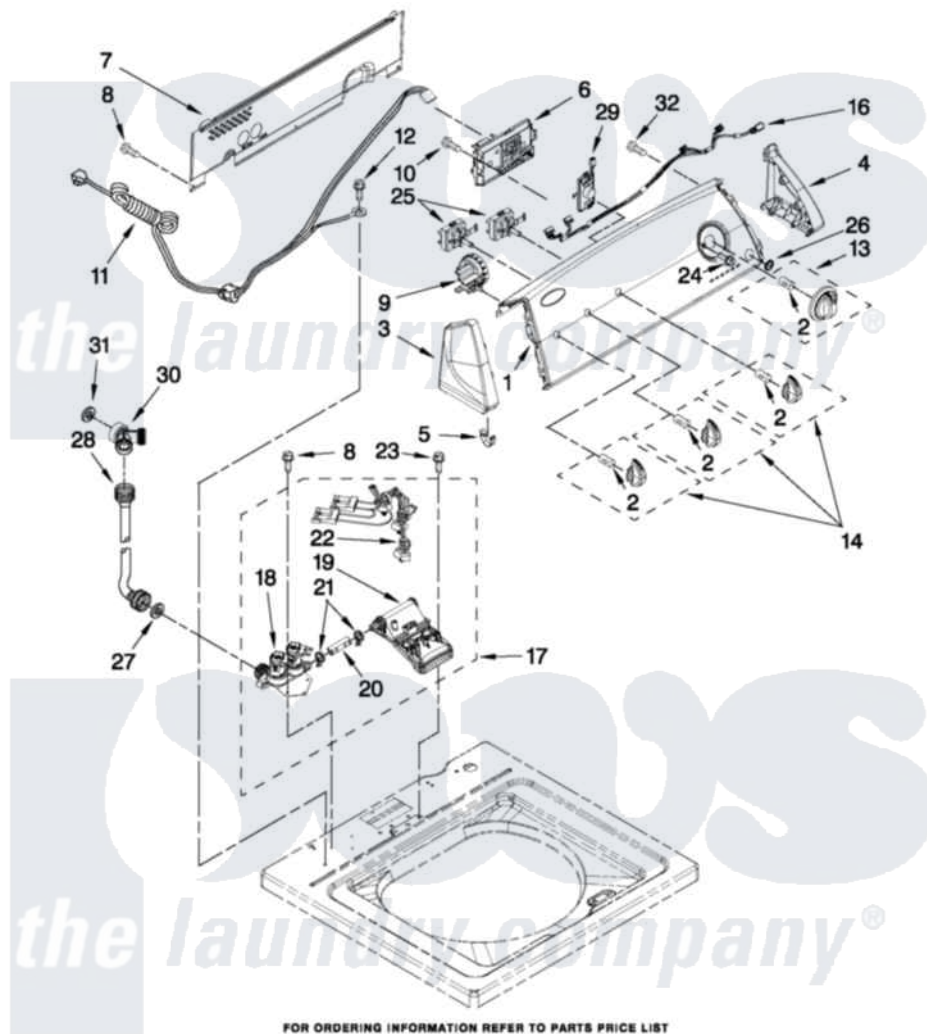

W10492249

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3

Whirlpool Residential Whirlpool 3LWTW4840YW0 Washer Parts Parts Diagram 02 - CONTROLS AND WATER INLET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10464670			Panel, Console
2	8536939			Clip, Knob
3	8565957			Cap, End
4	8565954			Cap, End
5	8312709			Clip-Console
6	W10480674			Control Unit Assembly, Machine And Motor
7	W10420985			Panel, Console Rear Cover
8	1157158	489069		Xxscrew, 10-12 X 1/2
9	W10268911			Hose, Pressure Switch
10	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
11	W10446856			Cord, Power
12	3400076			Screw, Bracket Mounting
13	W10034750			Timer Knob Assembly
14	W10034380			Knob, Control

16	W10291174		Harness, Upper
17	W10465928		Inlet Assembly, Water
18	W10465728	Not Available	VALVE, WATER MIXING
19	W10441423		Vacuum Break
20	W10238347		Hose, Vacuum Break
21	W10117298	596669	Clamp, Manifold
22	W10474662	Not Available	HARNESS, VALVE
23	8281163		Screw, Dispenser Housing Mounting
24	3400818		Screw, Timer Mounting
25	W10285512		Switch, Rotary Encoder
26	W10251309		Pushbutton, Start
27	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
28	3949383		Hose, Water Inlet
"	3949382		Hose, Water Inlet
29	W10434306		Filter, Line Assembly
30	W10269488		Connector- Hose, Y
31	3357450		Washer, Water Inlet Hose
32	3400073		Screw, Ground

