


Whirlpool 3RAWZ480EMQ0 01 - TOP AND CONSOLE PARTS

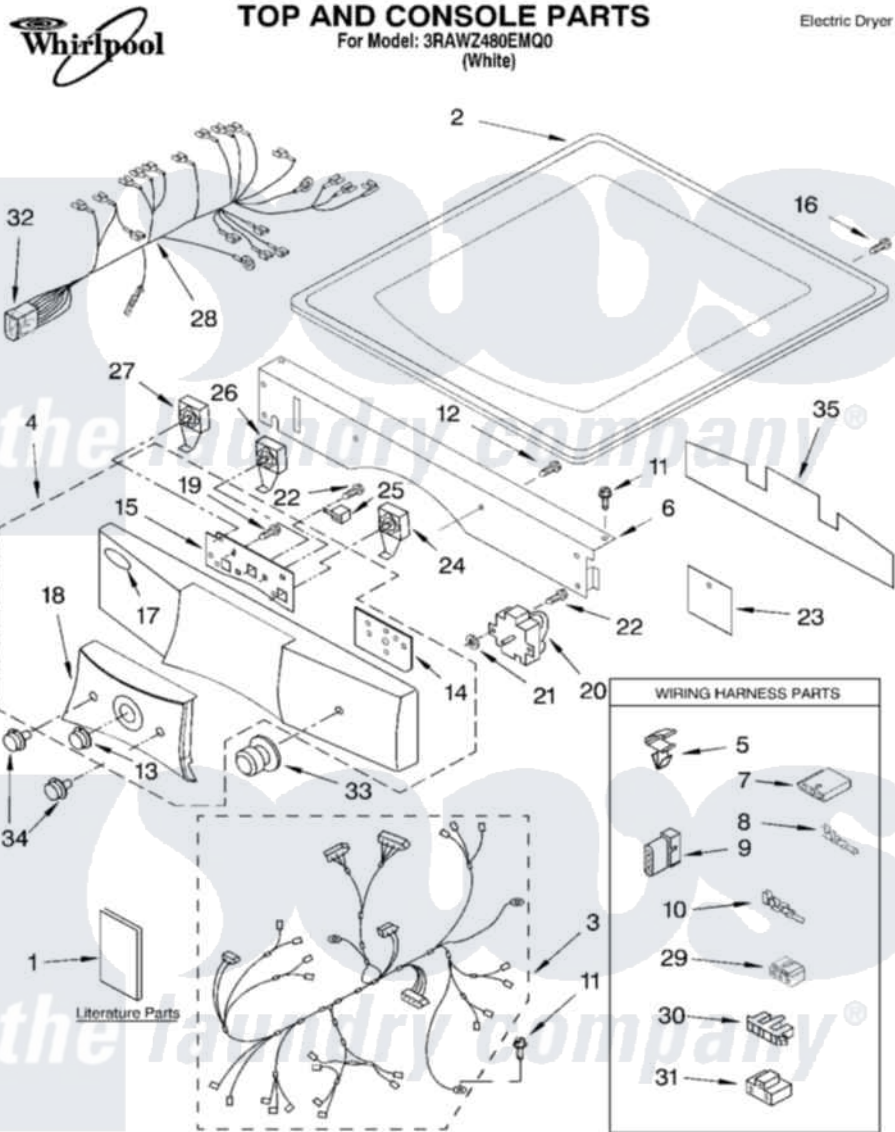

7-03 Printed in U.S.A. (djc)

1

Part No. 8180077

Whirlpool [Residential Whirlpool 3RAWZ480EMQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8545902		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8543078		Not Available	Literature Parts (Use & Care Guide)
"	LIT8543089		Not Available	Literature Parts (Installation Instructions)
"	LIT8315975		Not Available	Literature Parts (Guide, User & Installation (UK))
2	8519251	W10117263		Top
3	8543289	W10110980		Harness, Main
4	3979739	W10118062		Panel, Console
5	3394427			Clip-Harness
6	3980123	W10118067		Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw

12	488886	488787	Screw
13	3980121		Button, Push-To-Start
14	3979738	W10118063	Bracket, Timer
15	3979743	W10118064	Bracket, Switch Mounting
16	8281225		Screw, 8-18 X 1/2
17	8543319		Medallion
18	3956540		Console, Center
19	3400238		Screw, 2-28 X 1/2
20	3980205	W10116280	Timer
21	3392186	4159590	Washer
22	3390646	W10139210	Screw, 8-18 X 5/16
23	8543133		Shield, Timer
24	8316076	W10168170	Switch, Rotary
25	8522378		Mini Buzzer
26	3980425	W10112668	Switch, Push-To-Start
27	3399642	W10168169	Switch, Wrinkle Guard
28	8543291	W10110978	Harness, Console
29	3347243		Block, Disconnect
30	3397269		Connector, Timer
31	3401144		Connector
32	692997		Plug, Multi- Terminal
33	3980217	3957756	Knob, Timer Assembly
34	3980129	3957803	Knob, Control
35	3980339		Shield, Drip

the laundry company[®]

the laundry company[®]