


Whirlpool 3RAWZ480ESQ0 01 - TOP AND CONSOLE PARTS

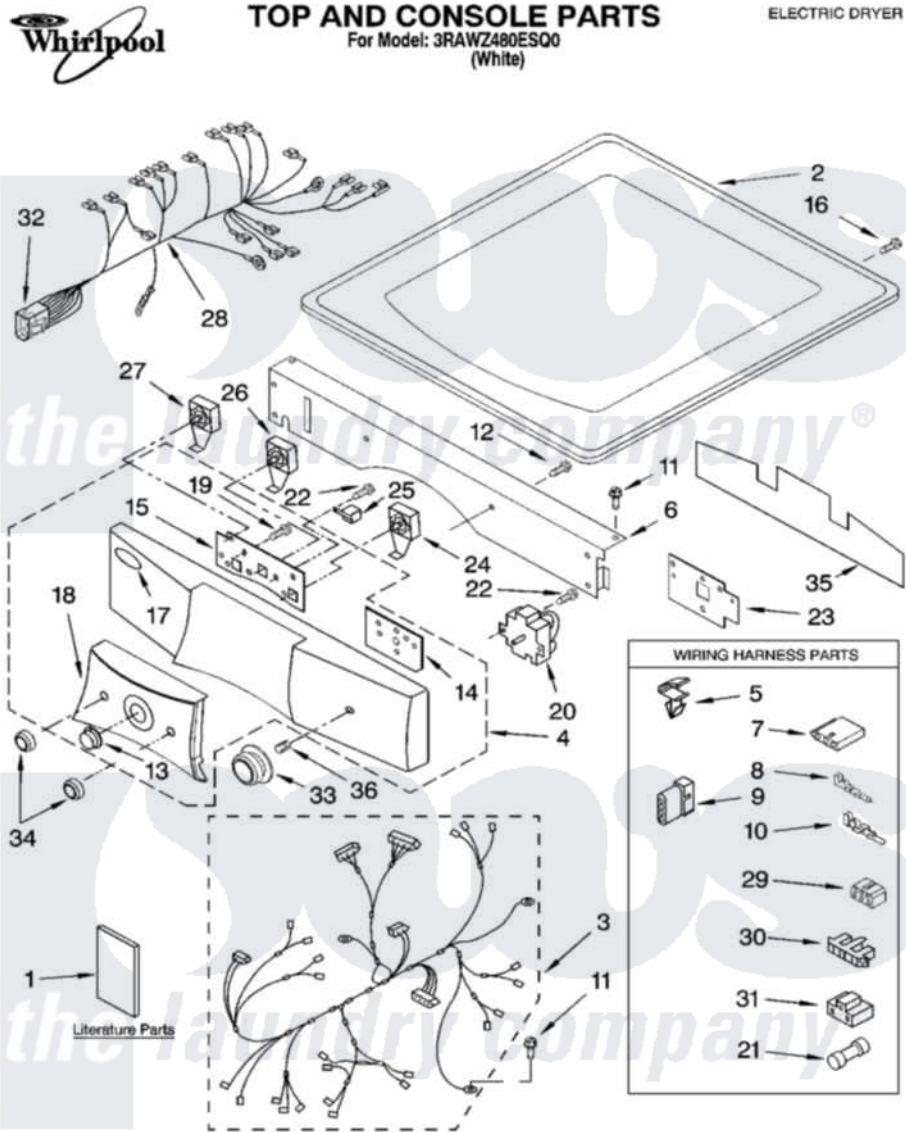

Whirlpool Residential Whirlpool 3RAWZ480ESQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8545902		Not Available	Label, Wiring Diagram
"	8577079		Not Available	Use & Care Guide
"	8563878		Not Available	Installation Instructions
"	8315975		Not Available	Guide, User & Installation (UK)
2	8519251	W10117263		Top
3	W10110980			Harness, Main
4	W10118062			Panel, Console
5	3394427			Clip-Harness
6	W10118067			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	W10080700			Screw, 8-18 X 1/2
12	W10080370		Not Available	Screw, 8-18 x 1/2
13	3980121			Button, Push-To-Start

14	W10118063		Bracket, Timer
15	W10118064		Bracket, Switch Mounting
16	W10080930		Screw, 8-18 X 1/2
17	3400981	8183253	Medallion
18	3956540		Console, Center
19	3400238		Screw, 2-28 X 1/2
20	W10116280		Timer
21	3951198		Fuse
22	W10080820		Screw, 8-18 X .298
23	3980421		Spacer Plate
24	8316076	W10168170	Switch, Rotary
25	8522378		Mini Buzzer
26	W10112668		Switch, Push-To-Start
27	3399642	W10168169	Switch, Wrinkle Guard
28	W10110978		Harness, Console
29	3347243		Block, Disconnect
30	3397269		Connector, Timer
31	3401144		Connector
32	692997		Plug, Multi- Terminal
33	3957756		Knob, Timer Assembly
34	3957803		Knob, Control
35	3980339		Shield, Drip
36	688805		Clip, Spring Knob

