


Whirlpool 3RAWZ481EML3 01 - TOP AND CONSOLE PARTS

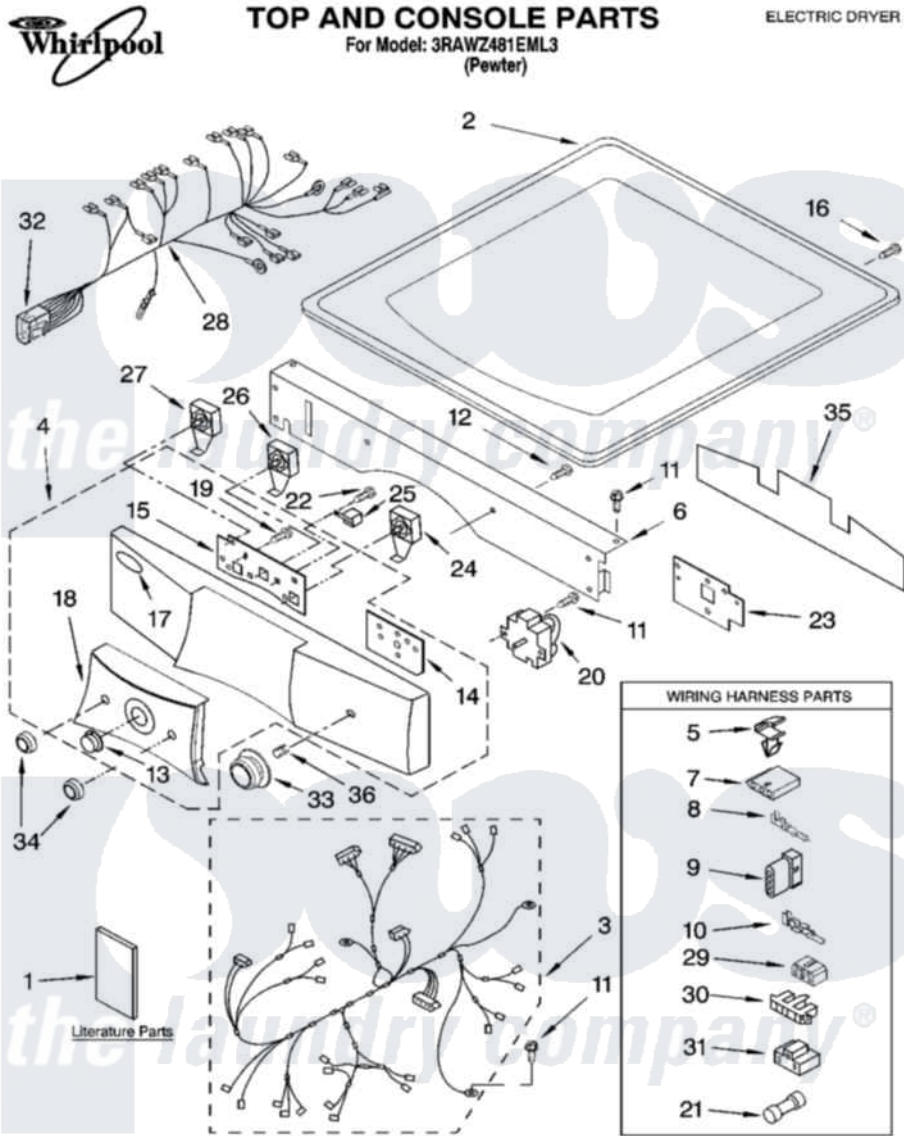

1-07 Printed in U.S.A. (LT)

1

Part No. 8180751

Whirlpool [Residential Whirlpool 3RAWZ481EML3 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8545902		Not Available	Label, Wiring Diagram
"	8577079		Not Available	Use & Care Guide
"	8563878		Not Available	Installation Instructions
"	8315975		Not Available	Guide, User & Installation (UK)
2	3980096	3980357		Top
3	8543289	W10110980		Harness, Main
4	3979740			Panel, Console
5	3394427			Clip-Harness
6	3980123	W10118067		Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	3390647	488729		Screw
12	488886	488787		Screw
13	3980121			Button, Push-To-Start

14	3979738	W10118063	Bracket, Timer
15	3979743	W10118064	Bracket, Switch Mounting
16	8281225		Screw, 8-18 X 1/2
17	8543319		Medallion
18	3956540		Console, Center
19	3400238		Screw, 2-28 X 1/2
20	3980205	W10116280	Timer
21	3951198		Fuse
22	3390646	W10139210	Screw, 8-18 X 5/16
23	3980421		Spacer Plate
24	8316076	W10168170	Switch, Rotary
25	8522378		Mini Buzzer
26	8562100	W10112668	Switch, Push-To-Start
27	3399642	W10168169	Switch, Wrinkle Guard
28	8543291	W10110978	Harness, Console
29	3347243		Block, Disconnect
30	3397269		Connector, Timer
31	3401144		Connector
32	692997		Plug, Multi- Terminal
33	3957757		Knob, Timer Assembly
34	3957803		Knob, Control
35	3980339		Shield, Drip
36	688805		Clip, Spring Knob

