


Whirlpool 3RAWZ481ETH0 01 - TOP AND CONSOLE PARTS

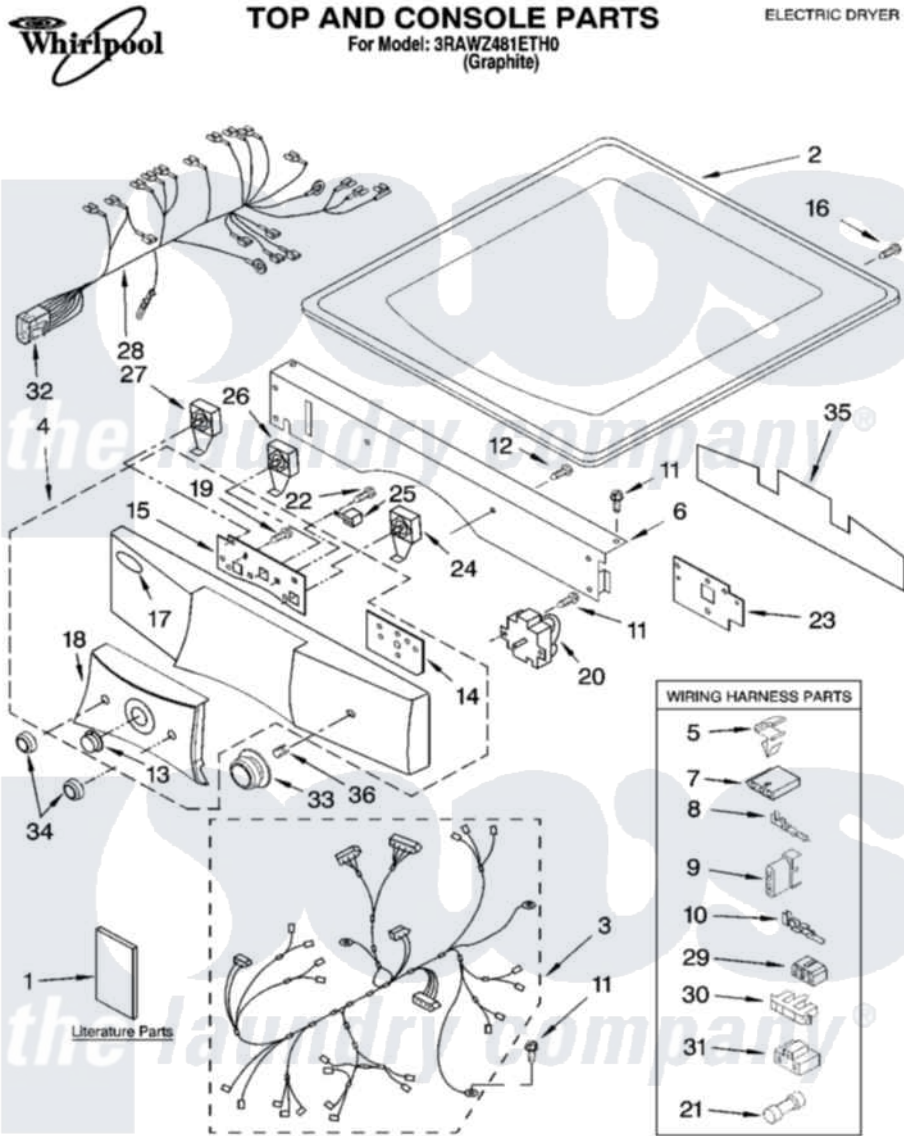

5-07 Printed in U.S.A. (LT)

1

Part No. W10129603 Rev. A

Whirlpool [Residential Whirlpool 3RAWZ481ETH0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8545902		Not Available	Label, Wiring Diagram
"	W10127718		Not Available	Use & Care Guide
"	8563878		Not Available	Installation Instructions
"	W10131548		Not Available	Guide, User & Installation (UK)
2	8519253	W10192481		Top
3	W10110980			Harness, Main
4	W10118949			Panel, Console
5	3394427			Clip-Harness
6	W10118067			Bracket, Console
7	353424			Plug, Terminal
8	94614			Terminal
9	3936144			Do-It-Yourself Repair Manuals
10	94613	596797		Terminal
11	W10080700			Screw, 8-18 X 1/2
12	488886	488787		Screw
13	W10129617			Button, Push-To-Start

14	W10118063		Bracket, Timer
15	W10118064		Bracket, Switch Mounting
16	W10080930		Screw, 8-18 X 1/2
17	W10117943	8303811	Badge, Assembly
18	W10129618		Console, Center
19	3400238		Screw, 2-28 X 1/2
20	W10116280		Timer
21	W10111181		Fuse
22	W10080820		Screw, 8-18 X .298
23	3980421		Spacer Plate
24	8316076	W10168170	Switch, Rotary
25	8522378		Mini Buzzer
26	W10112668		Switch, Push-To-Start
27	3399642	W10168169	Switch, Wrinkle Guard
28	W10110978		Harness, Console
29	3347243		Block, Disconnect
30	3397269		Connector, Timer
31	3401144		Connector
32	692997		Plug, Multi- Terminal
33	W10129615		Knob, Timer Assembly
34	W10129614		Knob, Control
35	3980339		Shield, Drip
36	688805		Clip, Spring Knob

