


# Whirlpool 3RAWZ481ETH0 02 - CABINET PARTS

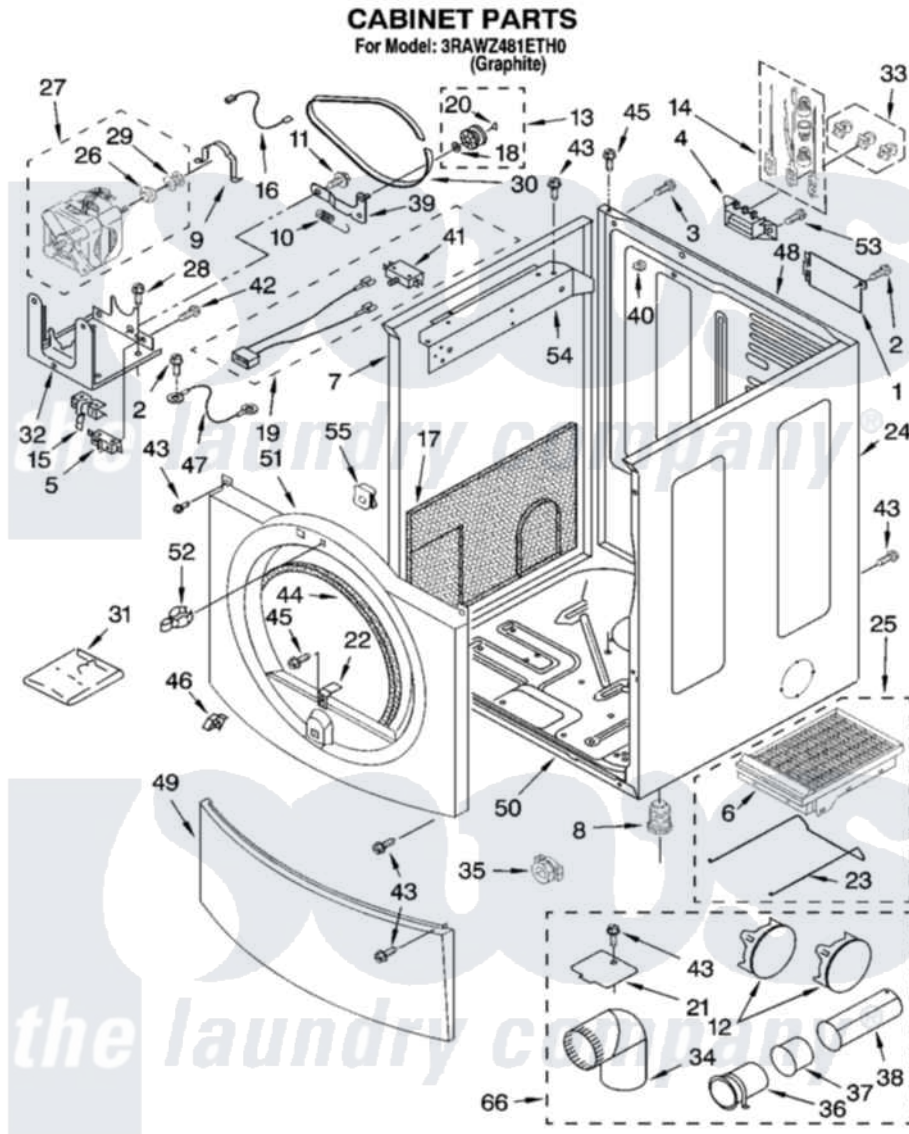

W10129603

3

Whirlpool Residential Whirlpool 3RAWZ481ETH0 Dryer Parts Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">W10119283</a>			Cover, Terminal Block
2	<a href="#">W10130935</a>			Screw, 8-32 X 5/16
3	<a href="#">W10080550</a>			Screw, 10-32 X 5/8
4	<a href="#">3397659</a>			Block, Terminal
5	<a href="#">8318457</a>			Switch, Broken Belt
6	8521947	<a href="#">W10139360A</a>		Rack-Dry
7	8578439	<a href="#">W10117274</a>		Panel
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">W10080670</a>			Retainer, Idler
12	<a href="#">3979261</a>			Plug, Multivent
13	3388672	<a href="#">279640</a>		Pulley-ldr
14	<a href="#">279318</a>			Terminal Tinned And Brass Panel

15	<a href="#">W10083220</a>		Lever, Snap Switch
16	<a href="#">3394081</a>		Wire, Broken Belt Switch
17	W10128772	<a href="#">8564134</a>	Board, Sound Dampening
18	<a href="#">233520</a>		Washer, Thrust
19	<a href="#">8543119</a>		Jumper, Door Switch
20	<a href="#">W10121334</a>		Washer, Thrust
21	8066115	<a href="#">3394331</a>	Plate Cover
22	<a href="#">8529053</a>		Ramp, Door Door Switch
23	<a href="#">8521961</a>		Support, Dry Rack
24	8578452	<a href="#">W10117275</a>	Panel
25	8521950	<a href="#">W10139360A</a>	Rack-Dry
26	<a href="#">3393657</a>		Restrainer, Belt
27	3404470	<a href="#">W10416573</a>	Motor-Drve
28	<a href="#">3400097</a>		Screw, 10-24 X 3/8
29	<a href="#">3402548</a>		Pulley 50 Hz
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">8541503</a>		Kit, Stack Assembly
32	<a href="#">3387118</a>		Bracket, Motor
33	<a href="#">279393</a>		Terminal Block Screw Kit
34	<a href="#">49026</a>		4" - 90° Elbow
35	<a href="#">8316644</a>		Power Cord, Strain Relief
36	<a href="#">8563747</a>		Exhaust Pipe Medium Pipe
37	<a href="#">8563750</a>		Exhaust Pipe
38	<a href="#">8563749</a>		Exhaust Pipe
39	W10118754	<a href="#">W10118756</a>	Idler Bracket
40	<a href="#">692400</a>		Nut, Push-In
41	<a href="#">8541808</a>		Switch, Door
42	<a href="#">W10118188</a>		Screw, 6-20 X 1 1/16
43	<a href="#">W10080700</a>		Screw, 8-18 X 1/2
44	<a href="#">3387242</a>		Seal, Front Panel
45	<a href="#">W10080710</a>		Screw, 10-16 X 1/2
46	<a href="#">8519459</a>		Clip, Toe Panel
47	340025	<a href="#">687133</a>	Wire
48	W10118075	<a href="#">W10133212</a>	Panel-Rear
49	<a href="#">W10116275</a>		Toe, Panel
50	<a href="#">W10119292</a>		Base, Cabinet
51	8562164	<a href="#">280090</a>	Panel
52	<a href="#">W10080240</a>		Strike, Door
53	<a href="#">W10080280</a>		Screw, 8-18 X 3/8
54	<a href="#">W10119274</a>		Bracket, Control
55	<a href="#">62825</a>		Clip-S Type Control Board
"	BLANK	Not Available	Optional Parts Not Included
66	279969	<a href="#">W10470674</a>	Dryer Exhaust Kit