


# Whirlpool 3RAWZ481GML0 01 - TOP AND CONSOLE PARTS

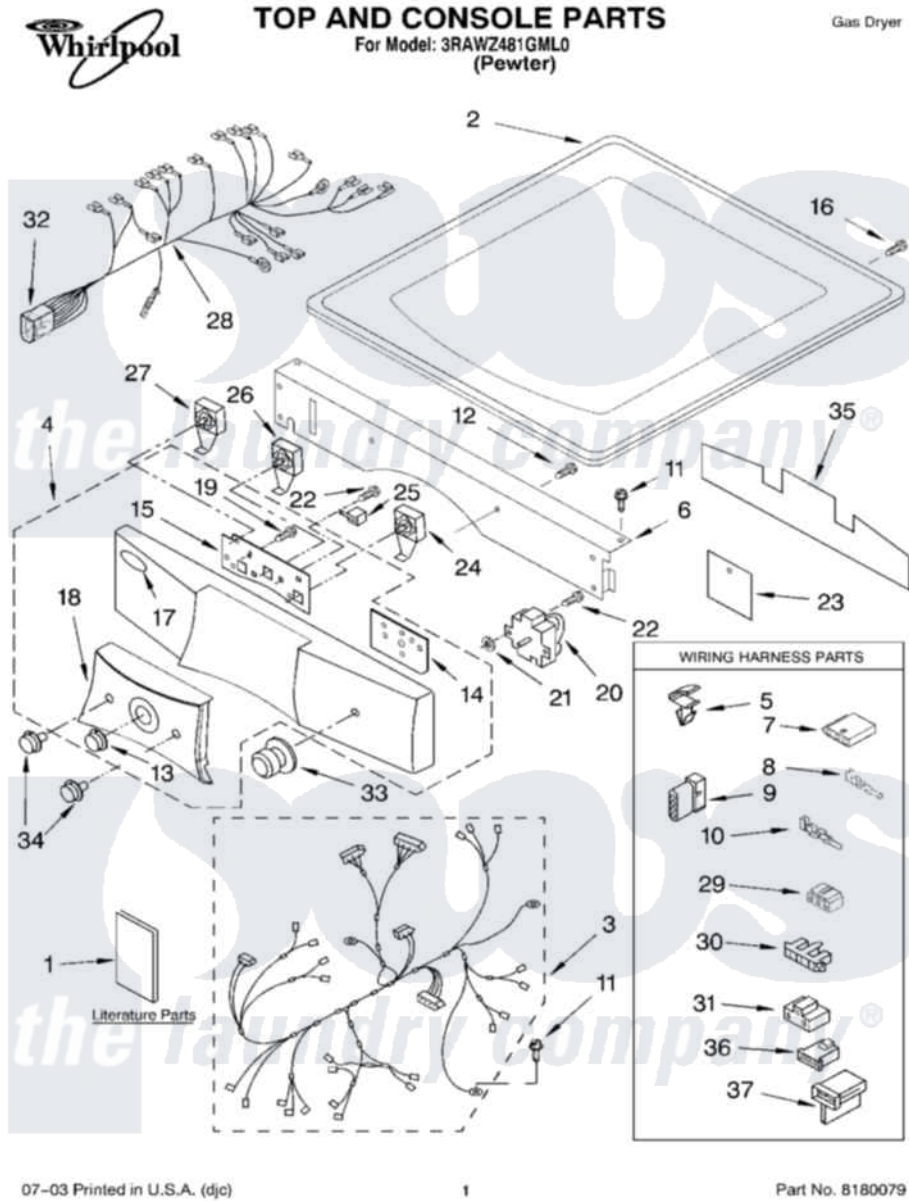

Whirlpool Residential Whirlpool 3RAWZ481GML0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8545902		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT8543078		Not Available	Literature Parts (Use & Care Guide)
"	LIT8543079		Not Available	Literature Parts (Installation Instructions)
"	LIT8315975		Not Available	Literature Parts (Guide, User & Installation (UK))
2	3980096	<a href="#">3980357</a>		Top
3	<a href="#">8543290</a>			Harness, Main
4	<a href="#">3979741</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	3980123	<a href="#">W10118067</a>		Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw

12	488886	<a href="#">488787</a>	Screw
13	<a href="#">3980121</a>		Button, Push-To-Start
14	3979738	<a href="#">W10118063</a>	Bracket, Timer
15	3979743	<a href="#">W10118064</a>	Bracket, Switch Mounting
16	<a href="#">8281225</a>		Screw, 8-18 X 1/2
17	<a href="#">8543319</a>		Medallion
18	<a href="#">3956540</a>		Console, Center
19	<a href="#">3400238</a>		Screw, 2-28 X 1/2
20	3980205	<a href="#">W10116280</a>	Timer
21	3392186	<a href="#">4159590</a>	Washer
22	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
23	<a href="#">8543133</a>		Shield, Timer
24	8316076	<a href="#">W10168170</a>	Switch, Rotary
25	<a href="#">8522378</a>		Mini Buzzer
26	3980425	<a href="#">W10112668</a>	Switch, Push-To-Start
27	3399642	<a href="#">W10168169</a>	Switch, Wrinkle Guard
28	8543291	<a href="#">W10110978</a>	Harness, Console
29	<a href="#">3347243</a>		Block, Disconnect
30	<a href="#">3397269</a>		Connector, Timer
31	<a href="#">3401144</a>		Connector
32	<a href="#">692997</a>		Plug, Multi- Terminal
33	3980218	<a href="#">3957757</a>	Knob, Timer Assembly
34	3980129	<a href="#">3957803</a>	Knob, Control
35	<a href="#">3980339</a>		Shield, Drip
36	<a href="#">3403498</a>		Connector, 3-Position
37	<a href="#">3403499</a>		Connector, 2-Position

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>