


Whirlpool 3RGSC9400SL1 01 - TOP AND CABINET PARTS

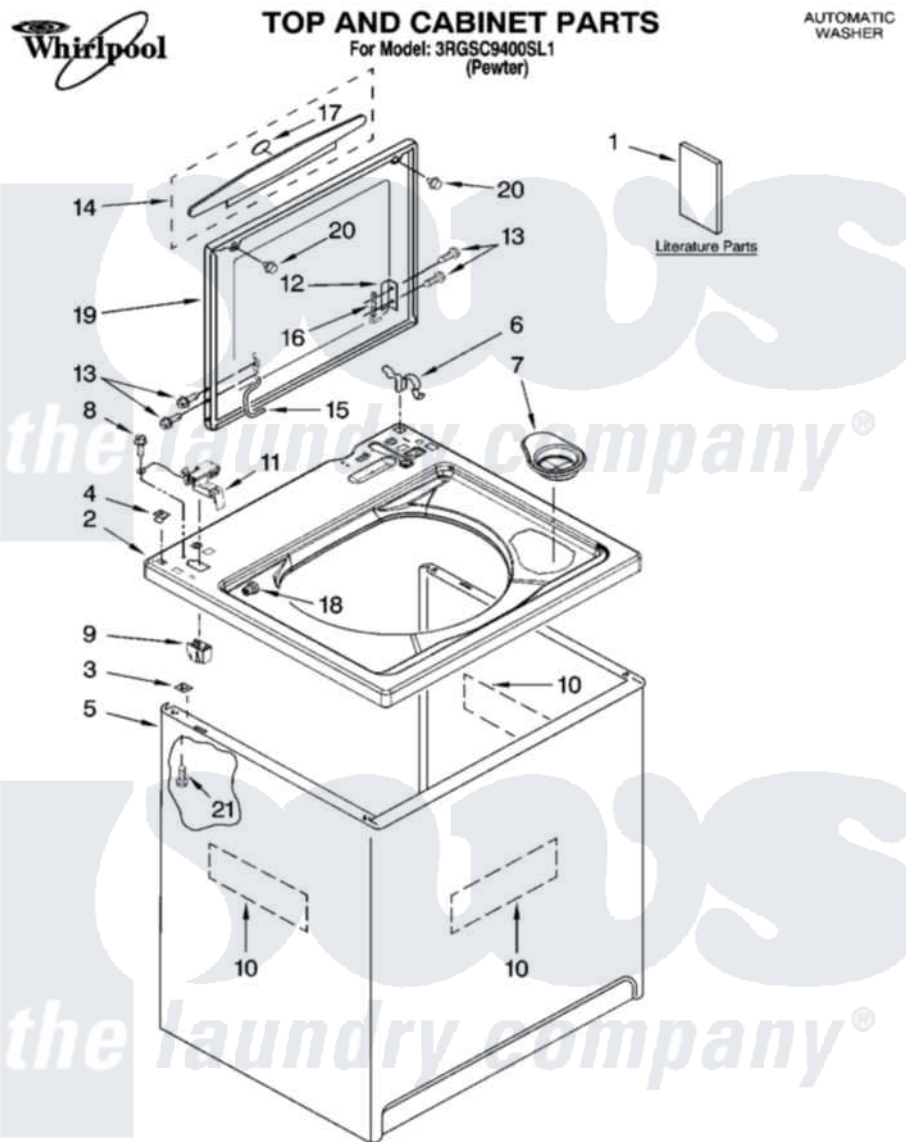

2-09 Litho in U.S.A. (drd)(bay)

1

Part No. W10218842 Rev. A

Whirlpool [Residential Whirlpool 3RGSC9400SL1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10131577		Not Available	Installation Instructions
"	W10131588		Not Available	Use & Care Guide
"	W10215727		Not Available	Wiring Diagram
"	W10131548		Not Available	Guide, User & Installation (UK)
2	8543449			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	3956112			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	8566266			Dispenser, Bleach
8	W10080580			Screw, Gearcase Cover Mounting
9	W10180691			Shield, Lid Switch
10	W10177046			Cabinet - Damper, Sound
11	W10237162			Switch, Lid
12	21097			Pad, Lid Hinge

13	W10119828		Screw, Lid Hinge Mounting
14	3957287		Handle, Lid
15	W10225136		Hinge 7 Pad Assembly
16	91770		Hinge, Lid
17	3957286	Not Available	Insert, Handle
18	8319539		Bearing, Lid Hinge
19	3957146	W10096941	Lid
20	9724509		Bumper, Lid
21	W10165554		Screw, 10-16 X 3/8

