


Whirlpool 3RGSC9400SL1 03 - AGITATOR, BASKET AND TUB PARTS

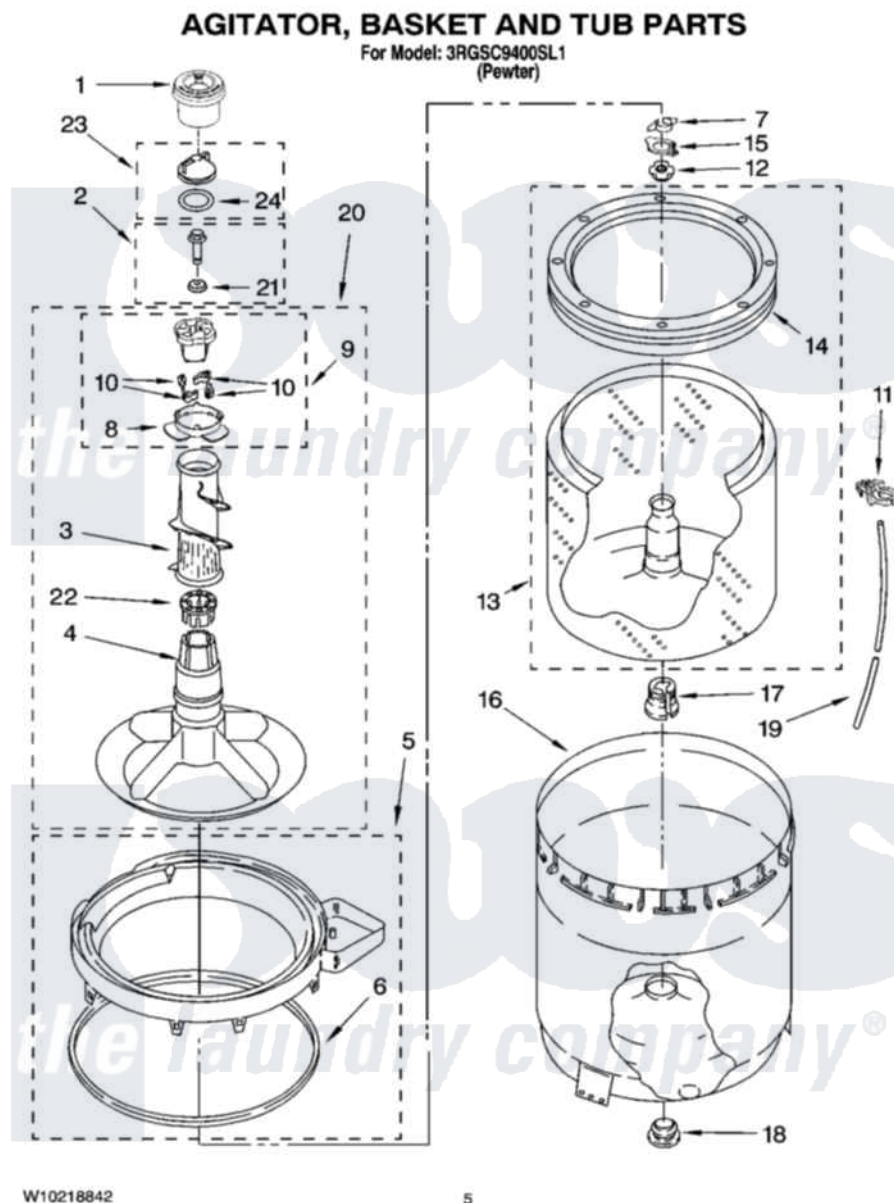

Whirlpool [Residential Whirlpool 3RGSC9400SL1 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	W10003790			Screw And Washer
3	3363003			Mover, Clothes
4	3951632			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3952374			Bearing, Driven Cam
9	3951682	285809		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	2219077			Clip, Pressure Switch Hose
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	387240			Ring, Balance
15	8543666			Washer, Agitator
16	63849			Strain Relief, Power Cord

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3951744		Agitator Assembly
21	3949550		Washer
22	3951608		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	W10072840		Fabric Softener

