


Whirlpool 3RGSC9400SL1 08 - GEARCASE PARTS

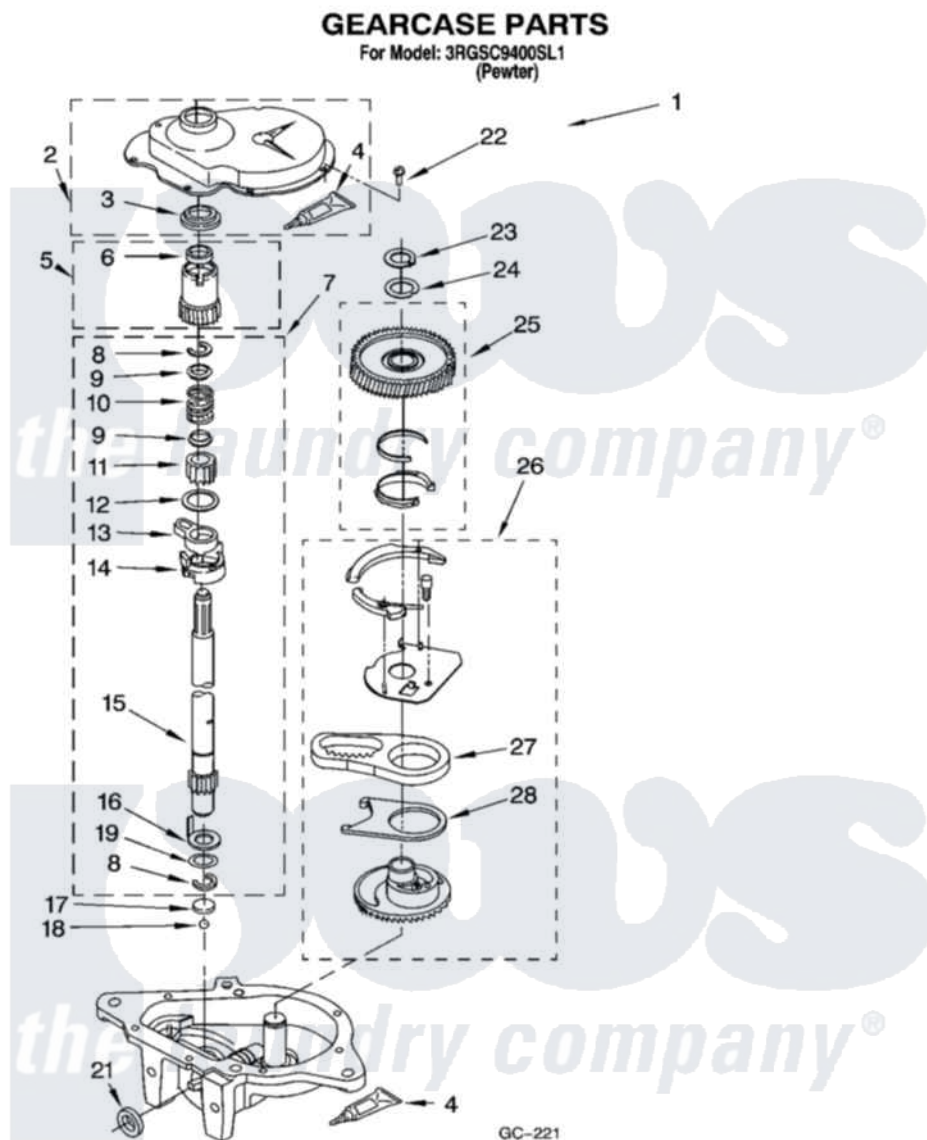

12

W10218842

Whirlpool [Residential Whirlpool 3RGSC9400SL1 Washer Parts](#) Parts Diagram 08 - GEARCASE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10116916	W10140308		Gearcase
2	285202			Cover, Gearcase
3	3349985			Seal, Gearcase Cover
4	285195			Sealer Sealer, Gasket
5	63320	285362		Gear and Pinion
6	356427			Seal, Spin Pinion
7	W10116913			Shaft, Agitator
8	90369		Not Available	Ring, Retaining (2)
9	62677			Retainer, Spring
10	62676			Spring, Agitator
11	W10110245	285509		Shaft, Agitator
12	W10080940			Washer, Agitate Gear
13	62580	285206		Cam-Agitator
14	3976349	285206		Cam-Agitator
15	389231			Shaft, Agitator
16	62618			Washer, Cam Thrust

17	16018	285205	Bearing
18	85529	285205	Bearing
19	W10080950		Washer, Intermediate
21	285352		Seal Kit, Thrust Plug
22	W10080580		Screw, Gearcase Cover Mounting
23	3946619	285765	Ring-Retr
24	285766		Washer Kit, Thrust
25	63400	W10233584	Gear-Spin
26	3948434	Not Available	Neutral Assembly
27	8546456		Rack, Connecting
28	62621		Actuator, Shift

the laundry company[®]

the laundry company[®]

the laundry company[®]