


Whirlpool 3RGSC9455JQ1 03 - AGITATOR, BASKET AND TUB PARTS

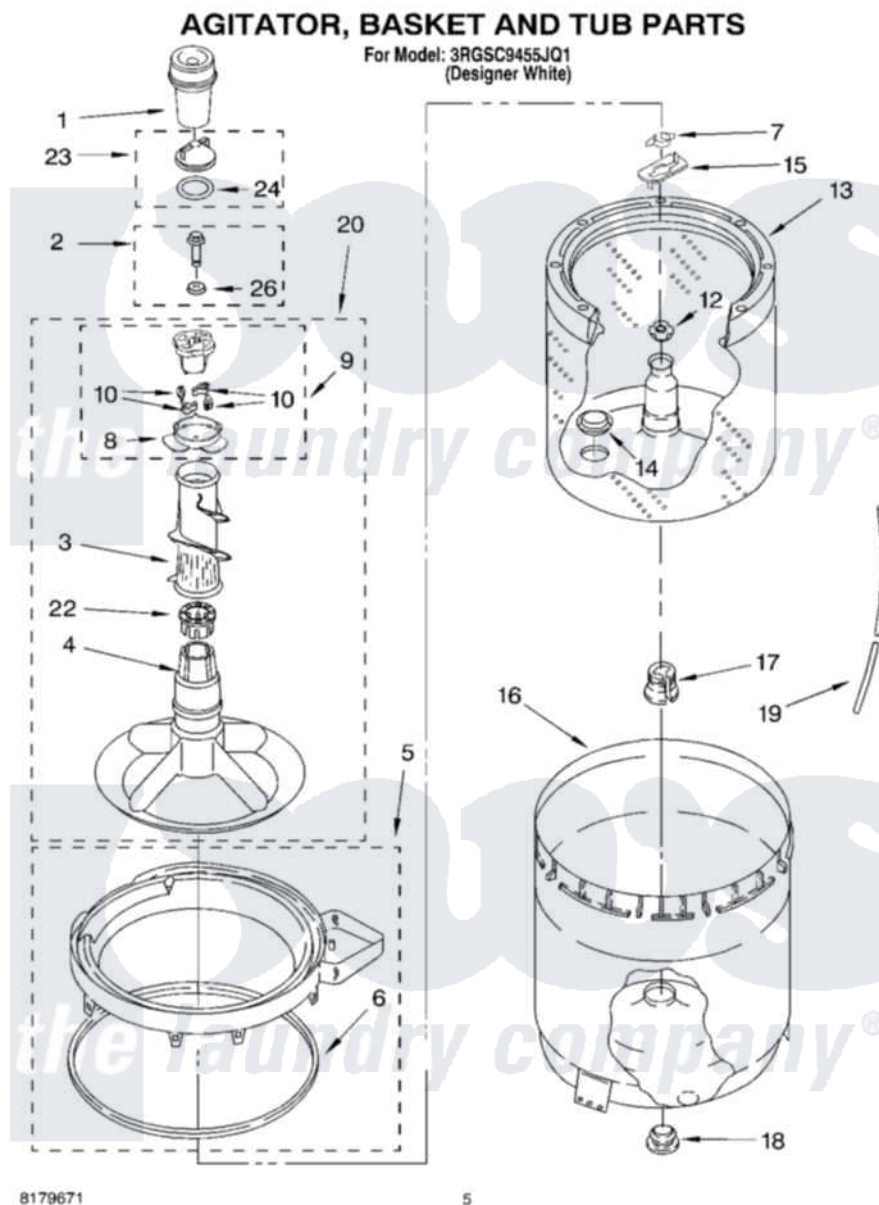

Whirlpool Residential Whirlpool 3RGSC9455JQ1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3363003			Mover, Clothes
4	3951632			Agitator
5	8316263			Tub Ring And Gasket
6	3359585	3976308		Gasket, Tub Ring
7	3354845			Clip, Agitator
8	3952374			Bearing, Driven Cam
9	3951682	285809		Cam-Agitator
10	3366877	80040		Dog-Agitator
12	21366			Nut, Spanner
13	3951983	W10389328		Clothes Container, Assembly
14	8522271	285868		Filter
15	3355921	8543666		Washer, Agitator
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive

18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	3951744		Agitator Assembly
22	3951608		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
26	3949550		Washer

