


Whirlpool 3RGSC9455JQ2 01 - TOP AND CABINET PARTS

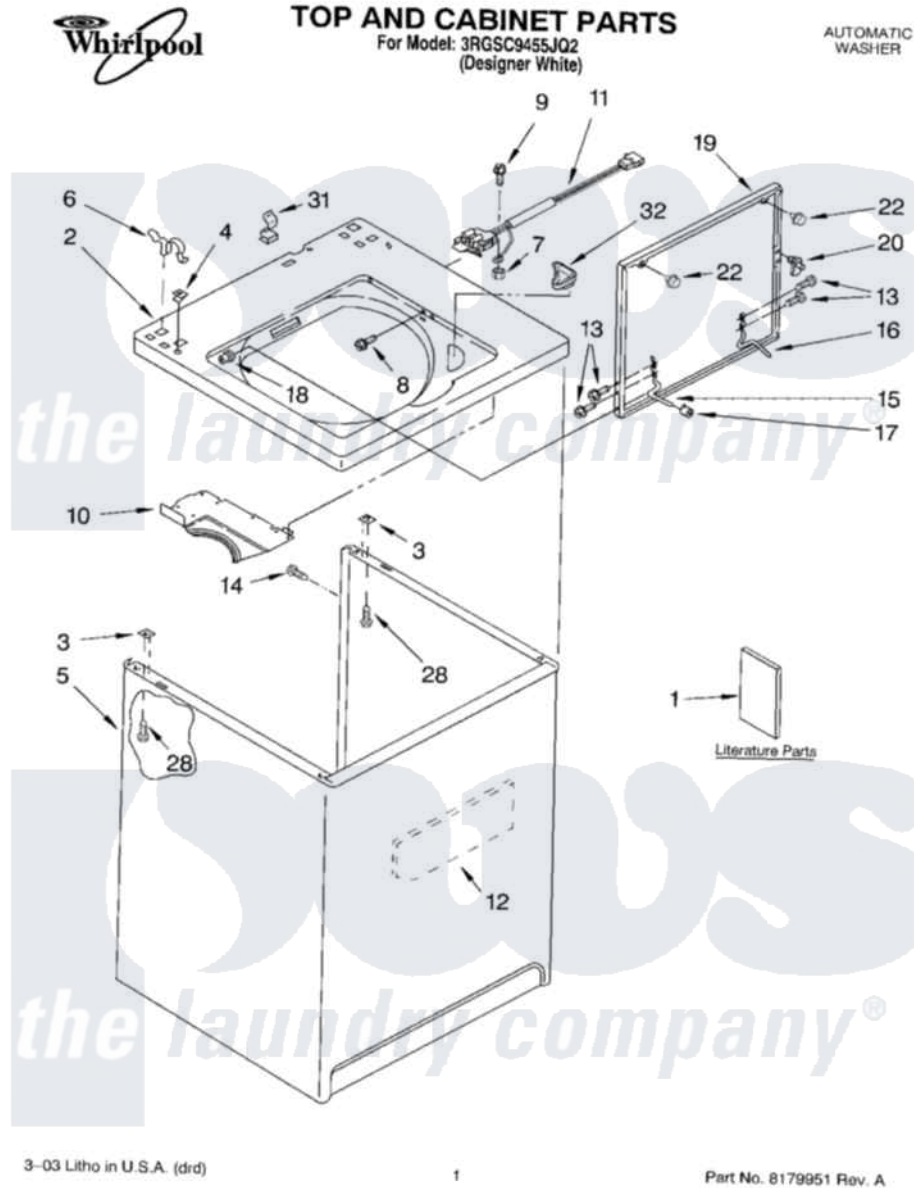

Whirlpool Residential Whirlpool 3RGSC9455JQ2 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8318424		Not Available	Literature Parts (Installation Instructions)
"	LIT8315977		Not Available	Literature Parts (Use & Care Guide)
"	LIT3954736		Not Available	Literature Parts (Wiring Diagram)
"	LIT8315975		Not Available	Literature Parts (Guide, User & Installation (UK))
2	8271378			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63424			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	3400901	680762		Nut
8	3356311			Screw And Washer, Lid Switch Shield
9	3351614			Screw, Gearcase Cover Mounting

10	3950994		Shield, Lid Switch
11	3950298		Switch, Lid
12	3976348		Absorber, Sound
13	3351355	W10119828	Screw, Lid Hinge Mounting
14	3357011	308685	Side Trim)
15	54584		Hinge, Lid
16	91770		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8316048	3957510	Lid
20	357913	358684	Strike, Lid Switch
22	9724509		Bumper, Lid
28	3390631		Screw, 10-16 X 3/8
31	90016		Clip, Pressure Switch Hose
32	3362952		Dispenser, Bleach

