


Whirlpool 3RLEC8646KQ1 01 - TOP AND CONSOLE PARTS

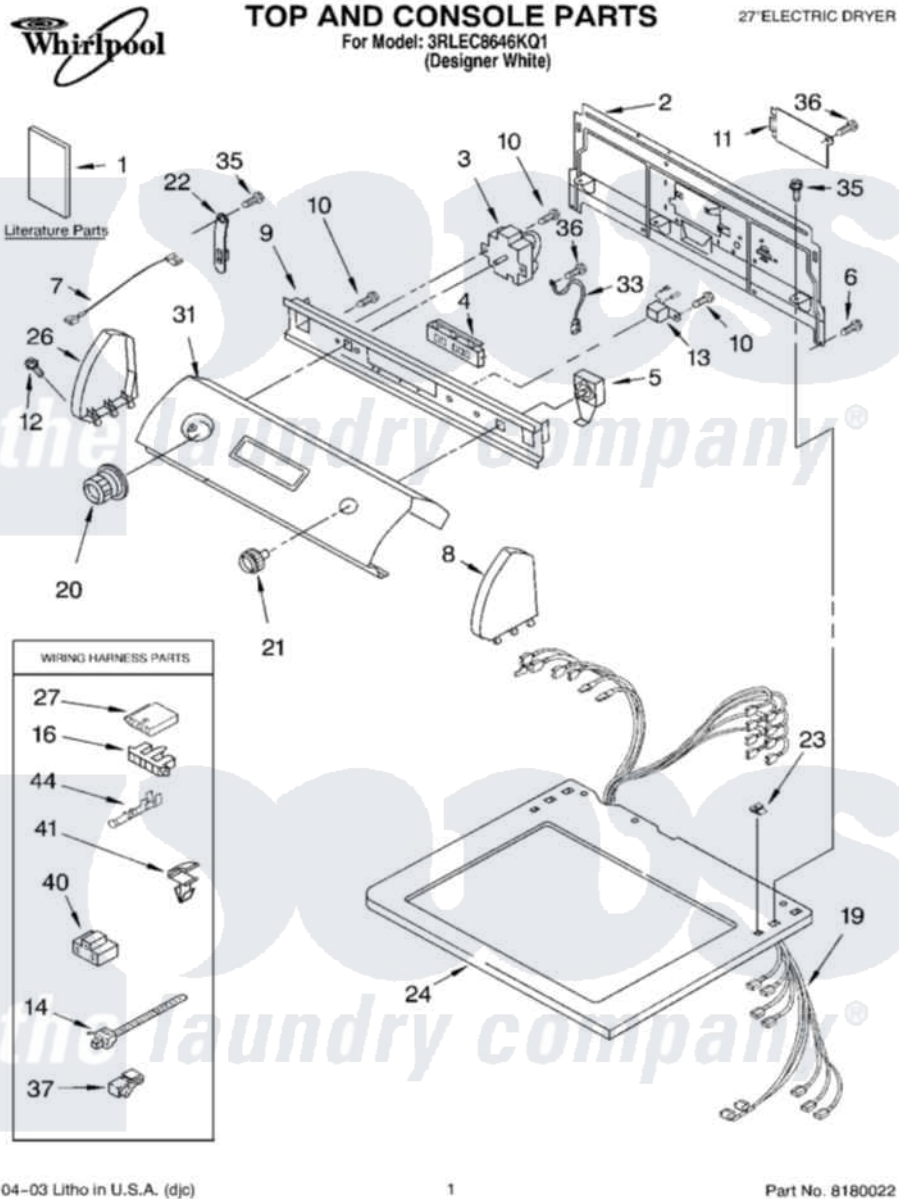

04-03 Litho in U.S.A. (djc)

1

Part No. 8180022

Whirlpool Residential Whirlpool 3RLEC8646KQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8299807		Not Available	Literature Parts (Wiring Diagram)
"	LIT8318343		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8528094		Not Available	Literature Parts (Instructions, Installation)
"	LIT8315975		Not Available	Literature Parts (Guide, User & Installation (UK))
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	8317305	285909		Panel-Rear
3	8299769	W10116281		Timer
4	8316077			Switch, Clean Touch
5	8318447	W10112633		Switch, Push-To-Start
6	693995			Screw, Hex Head
7	3393815	3393812		Wire, Jumper
"	3401703	3401671		Wire, Jumper

"	3401704	3401667	Wire, Jumper
"	3401705	3401667	Wire, Jumper
8	8271363	279962	Endcap
9	8271318	W10118071	Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	8317342	W10119283	Cover, Terminal Block
12	388326		Screw, 8-18 X 1.25
13	8522378		Mini Buzzer
14	3391018		Tie Cable
16	3397269		Connector, Timer
19	8529875		Harness, Wiring
20	8312687	3957754	Timer Knob Assembly
21	8271339	3957799	Knob, Control
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
31	8318387		Panel, Control
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
40	3401144		Connector
41	3394427		Clip-Harness
44	94614		Terminal

the laundry company®

the laundry company®