


# Whirlpool 3RLEQ8000KQ3 01 - TOP AND CONSOLE PARTS

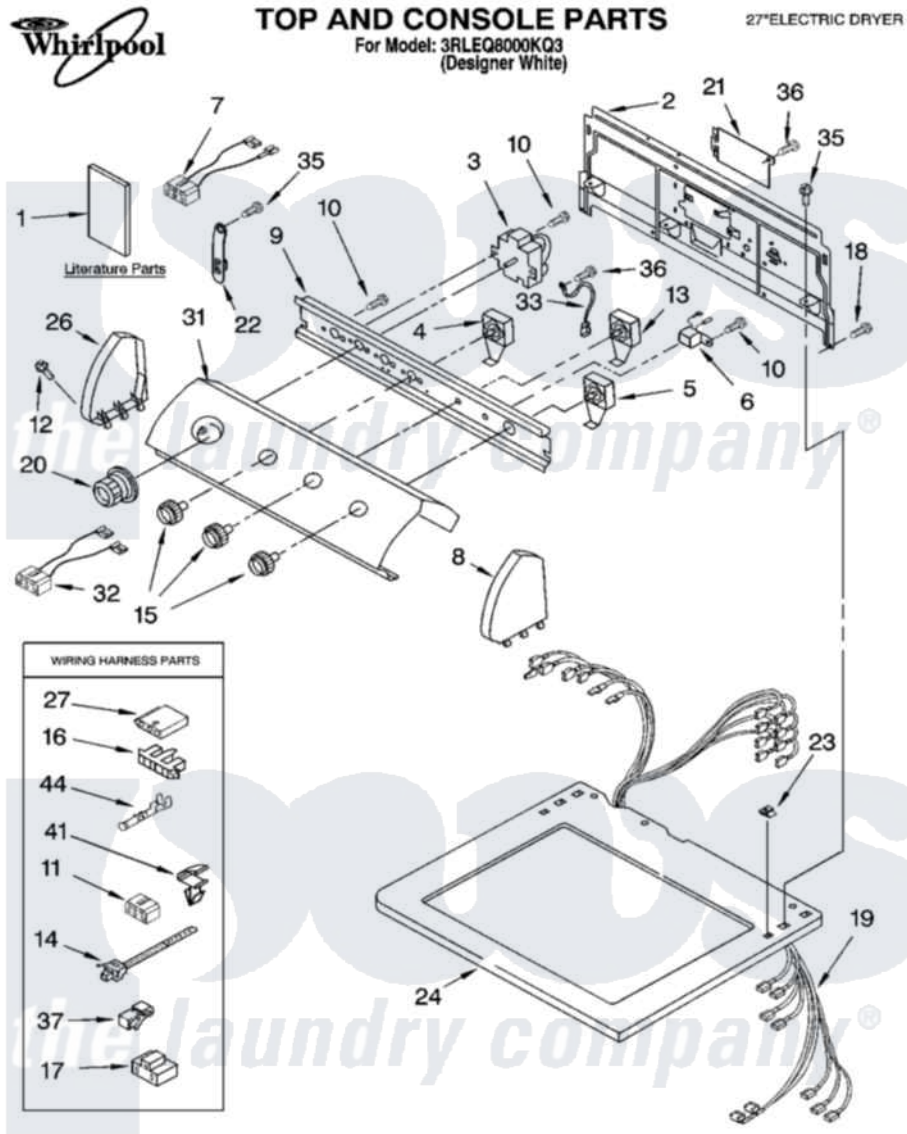

7-05 Litho in U.S.A. (LT)

1

Part No. 8180752

Whirlpool Residential Whirlpool 3RLEQ8000KQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

| Item | Original Part Number    | Replaced By               | Status        | Part Description   |
|------|-------------------------|---------------------------|---------------|--|
| 1    | 8299807                 |                           | Not Available | Wiring Diagram   |
| "    | 8543156                 |                           | Not Available | Literature Parts (UK)  |
| "    | 8528094                 |                           | Not Available | Instructions, Installation                                     |
| "    | 8315975                 |                           | Not Available | Guide, User & Installation (UK)                                |
| "    | N/A                     |                           | Not Available | Following May Be Purchased<br>DO-IT-YOURSELF REPAIR<br>MANUALS |
| "    | 677818                  |                           | Not Available | Manual, Do-It- Yourself Repair<br>(Dryer)                      |
| 2    | 8317305                 | <a href="#">285909</a>    |               | Panel-Rear   |
| 3    | 8299769                 | <a href="#">W10116281</a> |               | Timer  |
| 4    | 3399642                 | <a href="#">W10168169</a> |               | Switch, Wrinkle Guard  |
| 5    | 8318447                 | <a href="#">W10112633</a> |               | Switch, Push-To-Start  |
| 6    | <a href="#">8522378</a> |                           |               | Mini Buzzer  |
| 7    | <a href="#">3397695</a> |                           |               | Wire, Jumper   |
| 8    | 8271363                 | <a href="#">279962</a>    |               | Endcap   |
| 9    | <a href="#">8271316</a> |                           |               | Bracket, Control   |

|    |                         |                           |                               |
|----|-------------------------|---------------------------|-------------------------------|
| 10 | 3390646                 | <a href="#">W10139210</a> | Screw, 8-18 X 5/16            |
| 11 | <a href="#">3347243</a> |                           | Block, Disconnect             |
| 12 | <a href="#">388326</a>  |                           | Screw, 8-18 X 1.25            |
| 13 | 8316076                 | <a href="#">W10168170</a> | Switch, Rotary                |
| 14 | <a href="#">3391018</a> |                           | Tie Cable                     |
| 15 | 8271339                 | <a href="#">3957799</a>   | Knob, Control                 |
| 16 | <a href="#">3397269</a> |                           | Connector, Timer              |
| 17 | <a href="#">3401144</a> |                           | Connector                     |
| 18 | <a href="#">693995</a>  |                           | Screw, Hex Head               |
| 19 | <a href="#">8529875</a> |                           | Harness, Wiring               |
| 20 | 8312687                 | <a href="#">3957754</a>   | Timer Knob Assembly           |
| 21 | 8317342                 | <a href="#">W10119283</a> | Cover, Terminal Block         |
| 22 | <a href="#">8568314</a> |                           | Strap, Console                |
| 23 | <a href="#">357213</a>  |                           | Nut, Push-In                  |
| 24 | 8271399                 | <a href="#">3979278</a>   | Top                           |
| 26 | 8271369                 | <a href="#">279962</a>    | Endcap                        |
| 27 | <a href="#">3936144</a> |                           | Do-It-Yourself Repair Manuals |
| 31 | <a href="#">8318385</a> |                           | Panel, Control                |
| 32 | <a href="#">8283287</a> |                           | Wire, Jumper                  |
| 33 | 3398893                 | <a href="#">3395559</a>   | Wire                          |
| 35 | 3390647                 | <a href="#">488729</a>    | Screw                         |
| 36 | 98139                   | <a href="#">303776</a>    | Screw                         |
| 37 | 357572                  | <a href="#">W10113937</a> | Clip, Grounding               |
| 41 | <a href="#">3394427</a> |                           | Clip-Harness                  |
| 44 | <a href="#">94614</a>   |                           | Terminal                      |

