


Whirlpool 3RLEQ8000KQ4 01 - TOP AND CONSOLE PARTS

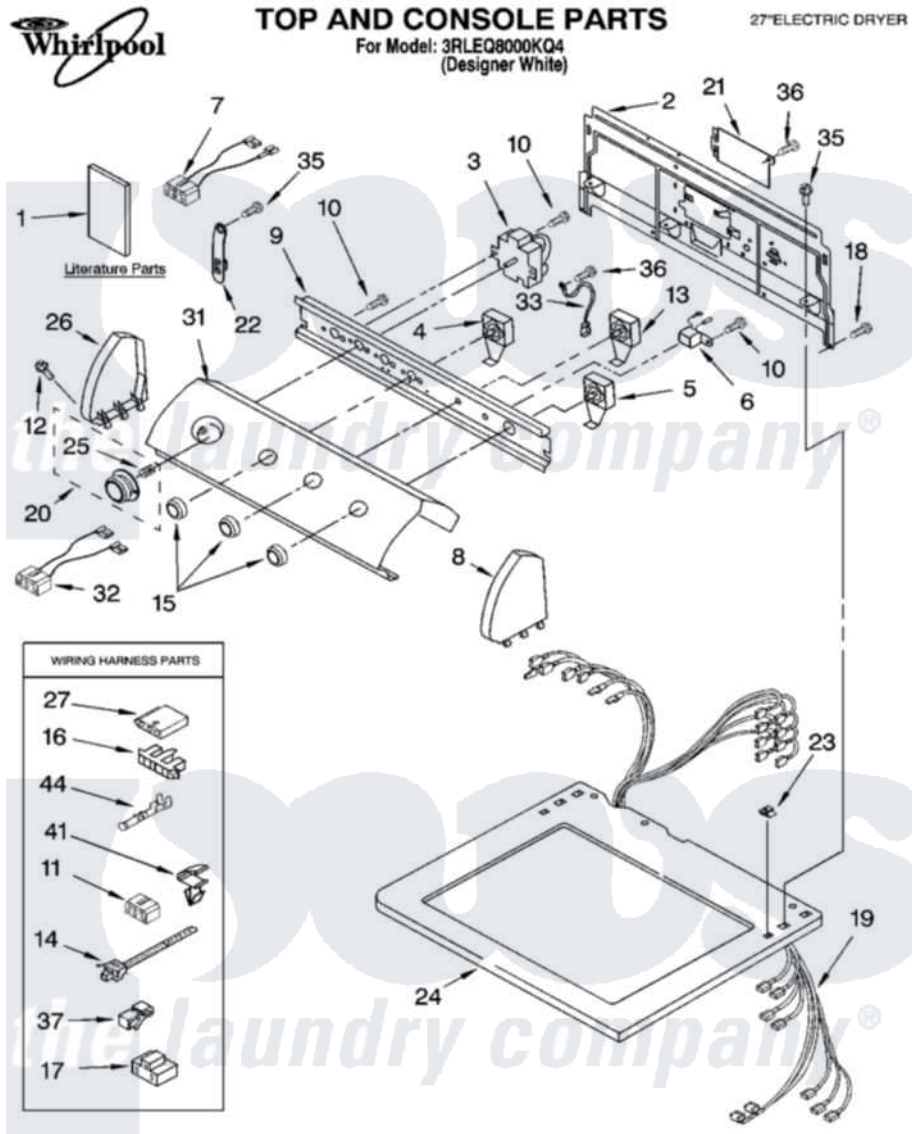

8-05 Litho in U.S.A. (LT)

1

Part No. 8180757

Whirlpool Residential Whirlpool 3RLEQ8000KQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8299807		Not Available	Wiring Diagram
"	8543156		Not Available	Literature Parts (UK)
"	8528094		Not Available	Instructions, Installation
"	8315975		Not Available	Guide, User & Installation (UK)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299769	W10116281		Timer
4	3399642	W10168169		Switch, Wrinkle Guard
5	8318447	W10112633		Switch, Push-To-Start
6	8522378			Mini Buzzer
7	3397695			Wire, Jumper
8	8271363	279962		Endcap
9	8271316			Bracket, Control

10	3390646	W10139210	Screw, 8-18 X 5/16
11	3347243		Block, Disconnect
12	388326		Screw, 8-18 X 1.25
13	8316076	W10168170	Switch, Rotary
14	3391018		Tie Cable
15	3957799		Knob, Control
16	3397269		Connector, Timer
17	3401144		Connector
18	693995		Screw, Hex Head
19	8529875		Harness, Wiring
20	3957754		Timer Knob Assembly
21	8317342	W10119283	Cover, Terminal Block
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
25	688805		Clip, Spring Knob
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
31	8318385		Panel, Control
32	8283287		Wire, Jumper
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
41	3394427		Clip-Harness
44	94614		Terminal

the laundry company[®]

the laundry company[®]