


Whirlpool 3RLER5437KQ2 01 - TOP AND CONSOLE PARTS

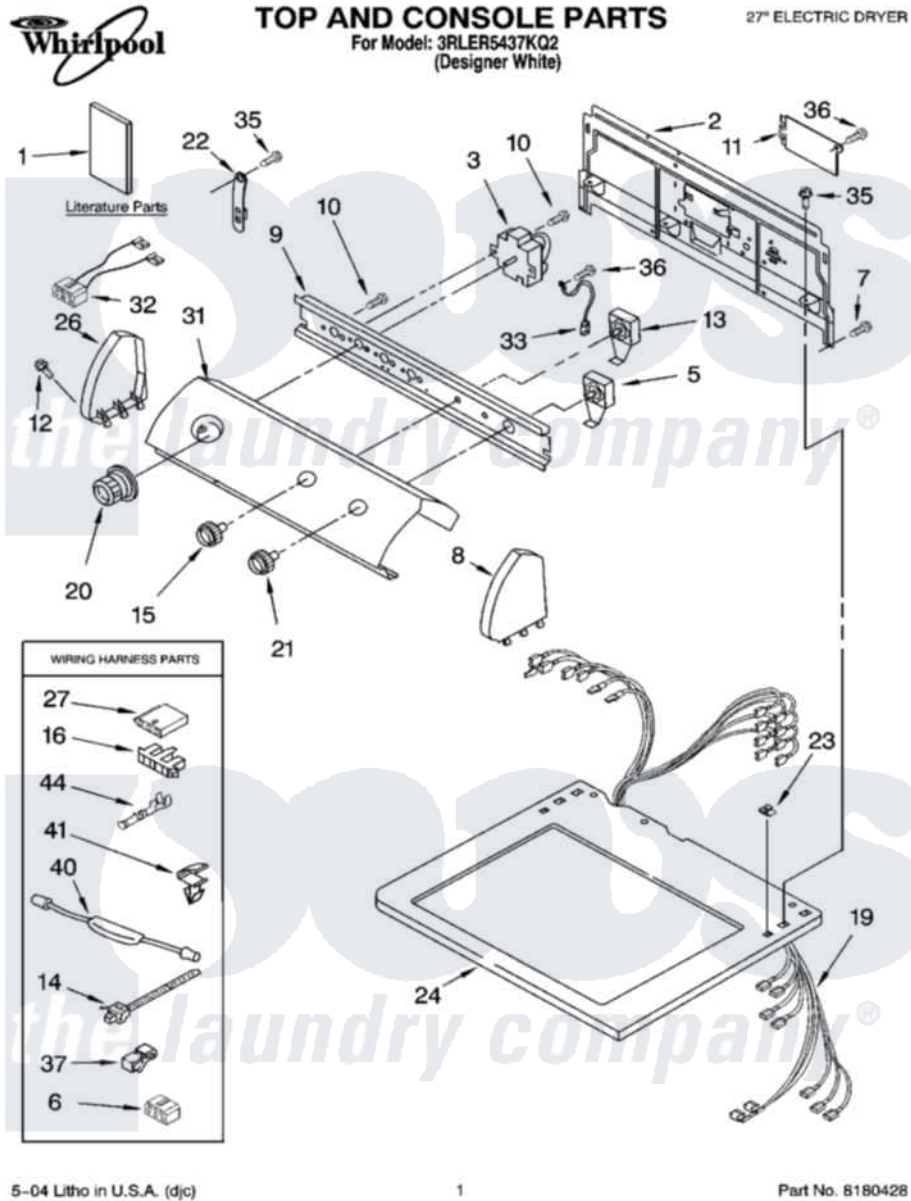

5-04 Litho in U.S.A. (djc)

1

Part No. 8180428

Whirlpool Residential Whirlpool 3RLER5437KQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8299808		Not Available	Wiring Diagram Guide, Use & Care
"	8318343		Not Available	Literature Parts (UK)
"	8543153		Not Available	(Arabic) Instructions, Installation
"	8528094		Not Available	Instructions, Installation
"	8543154		Not Available	Literature Parts (Arabic)
"	8315975		Not Available	Guide, User & Installation (UK)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299770			Timer
5	3395382			Switch, Push-To-Start
6	3347243			Block, Disconnect
7	693995			Screw, Hex Head

8	8271363	279962	Endcap
9	8271316		Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	8317342	W10119283	Cover, Terminal Block
12	388326		Screw, 8-18 X 1.25
13	3399638		Switch, Temperature
14	3391018		Tie Cable
15	8271339	3957799	Knob, Control
16	3397269		Connector, Timer
19	8529874		Harness, Wiring
20	8312687	3957754	Timer Knob Assembly
21	8271341	3957804	Knob, Push-To-Start
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
31	8318382		Panel, Control
32	8283293	8283286	Wire-Jumper
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
40	8283170	279872	Resistor
41	3394427		Clip-Harness
44	94614		Terminal

the laundry company[®]

the laundry company[®]