


Whirlpool 3RLER5437KQ4 01 - TOP AND CONSOLE PARTS

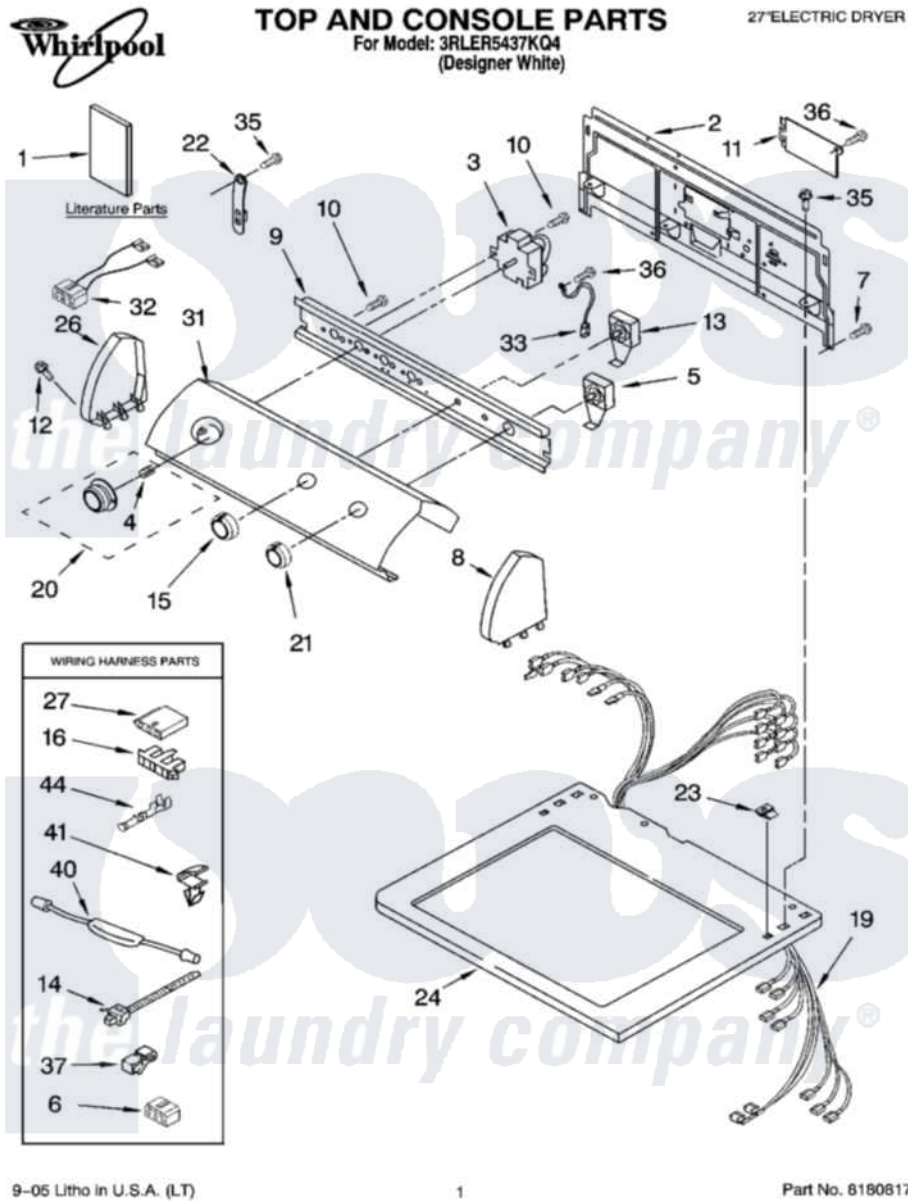

9-05 Litho in U.S.A. (LT)

1

Part No. 8180817

Whirlpool Residential Whirlpool 3RLER5437KQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8299808		Not Available	Wiring Diagram Guide, Use & Care
"	8543156		Not Available	Literature Parts (UK)
"	8543153		Not Available	(Arabic) Instructions, Installation
"	8528094		Not Available	Instructions, Installation
"	8543154		Not Available	Literature Parts (Arabic)
"	8315975		Not Available	Guide, User & Installation (UK)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299770			Timer
4	688805			Clip, Spring Knob
5	3395382			Switch, Push-To-Start
6	3347243			Block, Disconnect

7	693995		Screw, Hex Head
8	8271363	279962	Endcap
9	8271316		Bracket, Control
10	3390646	W10139210	Screw, 8-18 X 5/16
11	8317342	W10119283	Cover, Terminal Block
12	388326		Screw, 8-18 X 1.25
13	3399638		Switch, Temperature
14	3391018		Tie Cable
15	3957799		Knob, Control
16	3397269		Connector, Timer
19	8529874		Harness, Wiring
20	3957754		Timer Knob Assembly
21	3957804		Knob, Push-To-Start
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
31	8318382		Panel, Control
32	8283293	8283286	Wire-Jumper
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
40	8283170	279872	Resistor
41	3394427		Clip-Harness
44	94614		Terminal

the laundry company[®]

the laundry company[®]