


Whirlpool 3RLSQ8033SW1 01 - TOP AND CABINET PARTS

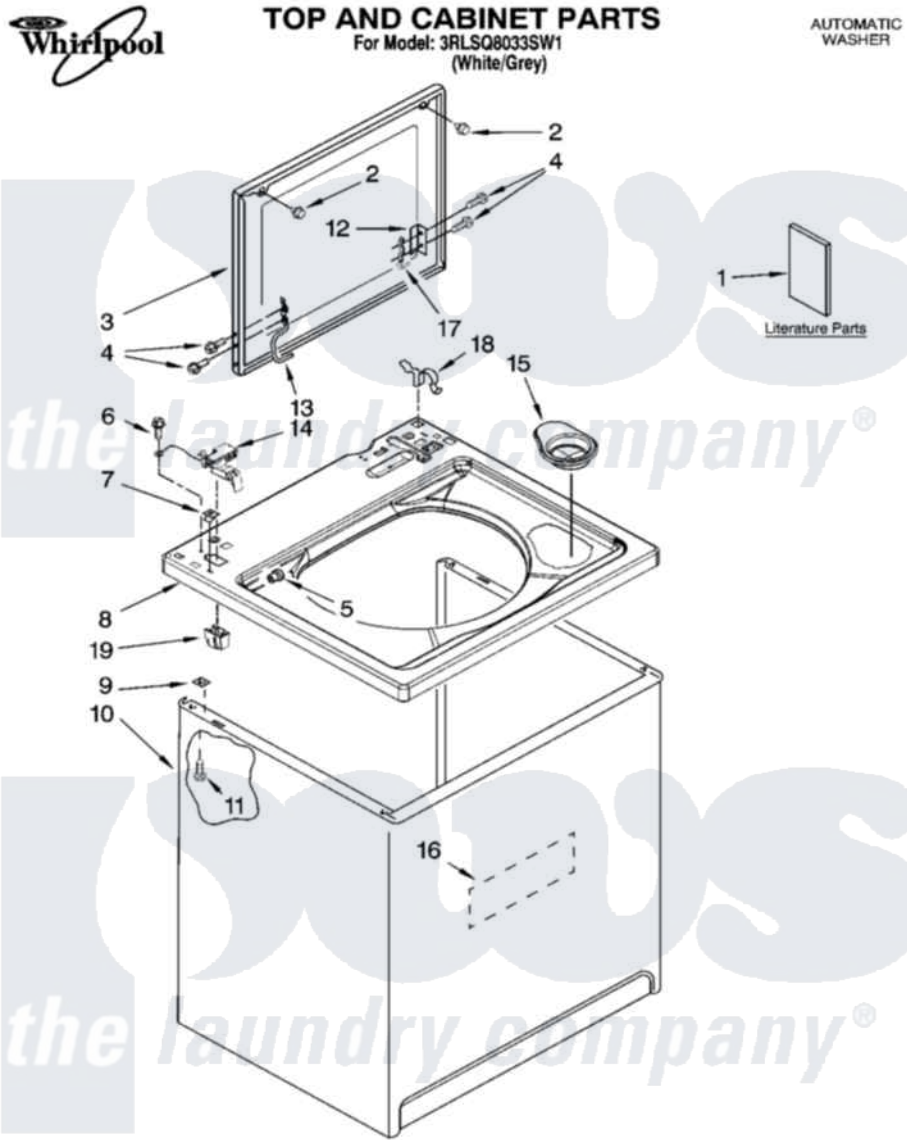

2-09 Litho in U.S.A. (drd) (psw)

1

Part No. W10218841 Rev. B

Whirlpool [Residential Whirlpool 3RLSQ8033SW1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10131577		Not Available	Installation Instructions
"	W10131573		Not Available	Use & Care Guide
"	W10215726		Not Available	Wiring Diagram
"	W10131548		Not Available	Guide, User & Installation (UK)
2	9724509			Bumper, Lid
3	W10171315	W10193861		Lid
4	W10119828			Screw, Lid Hinge Mounting
5	8319539			Bearing, Lid Hinge
6	W10080580			Screw, Gearcase Cover Mounting
7	357213			Nut, Push-In
8	8543447			Top
9	62750			Spacer, Cabinet To Top (4)
10	63424			Cabinet
11	W10165554			Screw, 10-16 X 3/8
12	21097			Pad, Lid Hinge
13	W10225136			Hinge 7 Pad Assembly

14	W10237162	Switch, Lid
15	8566266	Dispenser, Bleach
16	W10177046	Cabinet - Damper, Sound
17	91770	Hinge, Lid
18	62780	Clip, Top And Cabinet And Rear Panel
19	W10180691	Shield, Lid Switch

