


Whirlpool 3XLR5432JQ1 01 - TOP AND CABINET PARTS

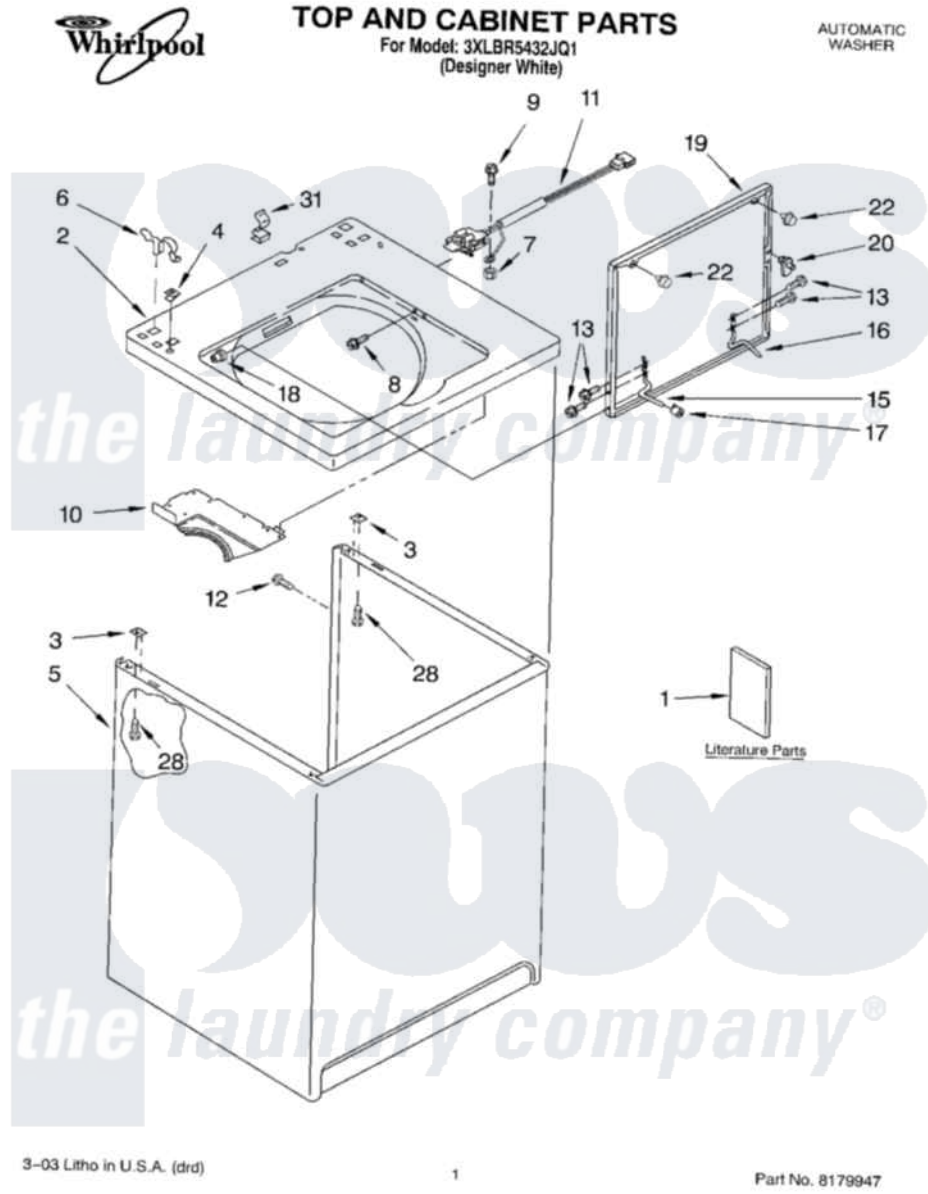

Whirlpool Residential Whirlpool 3XLR5432JQ1 Washer Parts Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8318353		Not Available	Literature Parts (Installation Instructions)
"	LIT8315979		Not Available	Literature Parts (Use & Care Guide)
"	LIT3954787		Not Available	Literature Parts (Wiring Diagram)
2	8274311			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63128			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	3400901	680762		Nut
8	3356311			Screw And Washer, Lid Switch Shield
9	3351614			Screw, Gearcase Cover Mounting
10	3950995			Shield, Lid Switch
11	3950299			Switch, Lid

12	3357011	308685	Side Trim)
13	3351355	W10119828	Screw, Lid Hinge Mounting
15	54584		Hinge, Lid
16	91770		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8316048	3957510	Lid
20	357913	358684	Strike, Lid Switch
22	9724509		Bumper, Lid
28	3390631		Screw, 10-16 X 3/8
31	90016		Clip, Pressure Switch Hose

the laundry company[®]

the laundry company[®]

the laundry company[®]