


Whirlpool 3XLER5435HQ2 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

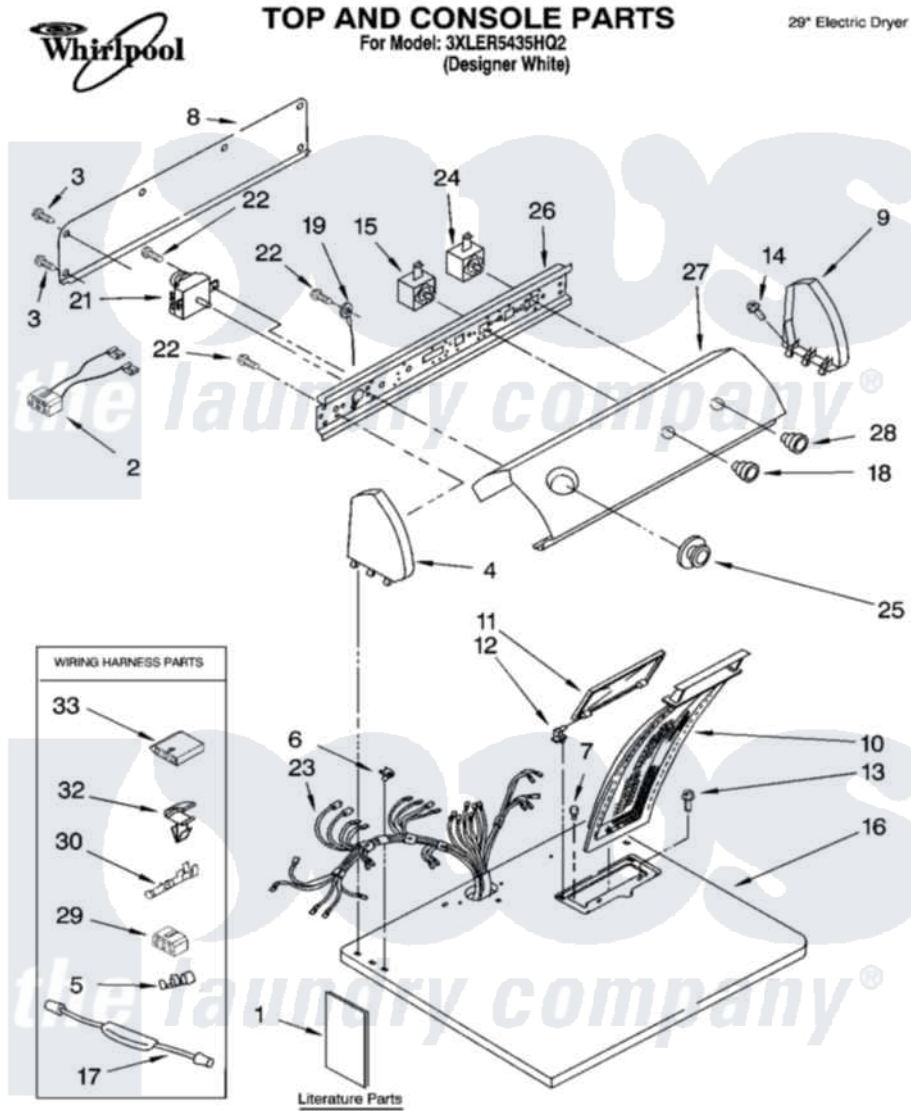

02-04 Litho in U.S.A. (djc)

1

Part No. 8180227

Whirlpool Residential Whirlpool 3XLER5435HQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 OPTIONAL PARTS (NOT INCLUDED)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3401012		Not Available	LITERATURE PARTS (Use & Care Guide)
"	LIT3397626		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT3397627		Not Available	Literature Parts (Installation Instructions (English))
"	LIT8528131		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3396028	8283286		Wire-Jumper
3	693995			Screw, Hex Head
4	3950975	285846		Endcap
5	357572	W10113937		Clip, Grounding
6	357213			Nut, Push-In

7	297535	17258	Bumper
8	3397545		Panel, Rear Console
9	3950974	285846	Endcap
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3399638		Switch, Temperature
16	8530642	Not Available	TOP
17	3406626	279872	Resistor
18	3950759	3957796	Knob, Control
19	3398893	3395559	Wire
21	3396215		Timer 60 Hz
22	3390646	W10139210	Screw, 8-18 X 5/16
23	8529856		Harness, Wiring
24	3395382		Switch, Push-To-Start
25	3406143	3957752	Knob, Timer
26	8054298		Bracket, Control
27	3401065		Panel, Control
28	3406133	3957800	Knob, Push-To-Start
29	3347243		Block, Disconnect
30	94614		Terminal
32	3394427		Clip-Harness
33	3936144		Do-It-Yourself Repair Manuals
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

