


# Whirlpool 3XLER5437KQ2 02 - CABINET PARTS

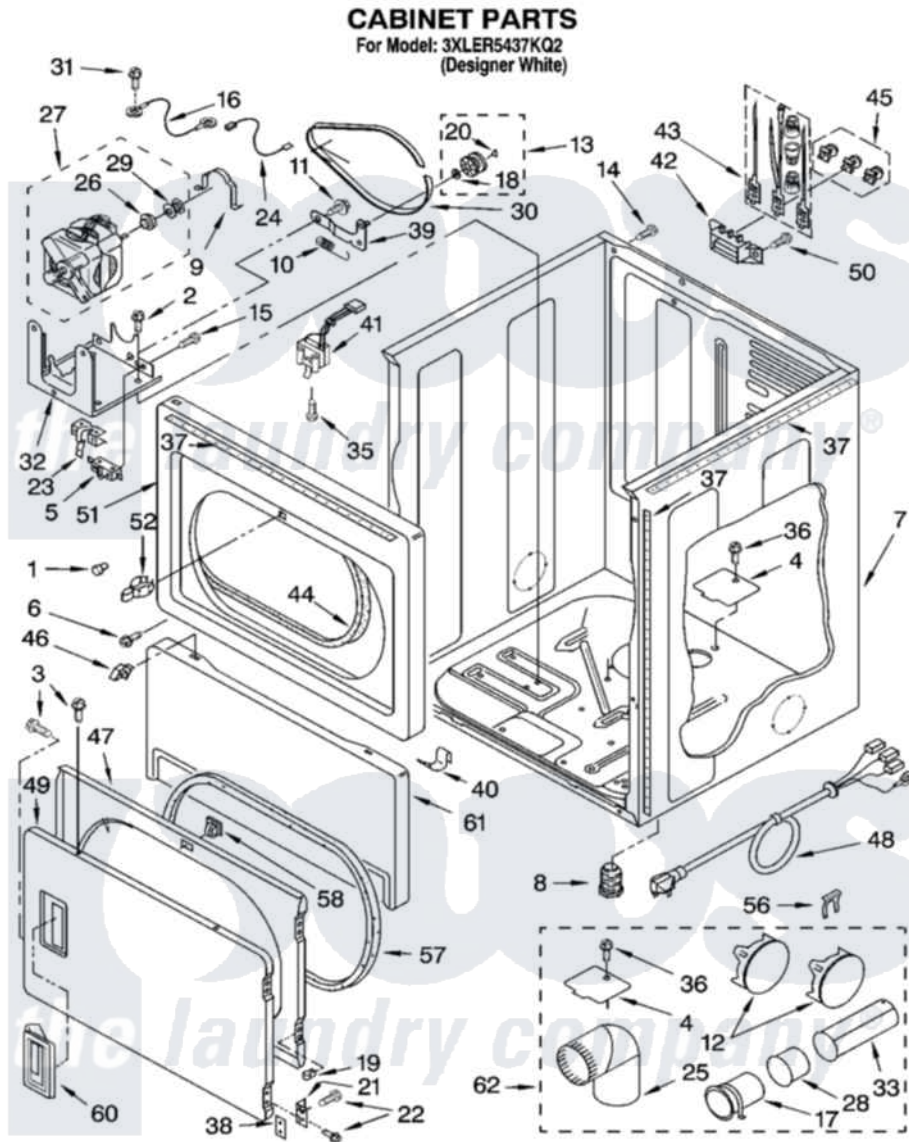

8180429

3

Whirlpool [Residential Whirlpool 3XLER5437KQ2 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">693152</a>			Bumper, Console
2	98139	<a href="#">303776</a>		Screw
3	<a href="#">694091</a>			Trim, Side Right Hand
4	<a href="#">3394331</a>			Plate Cover
5	<a href="#">8318457</a>			Switch, Broken Belt
6	8281212	<a href="#">W10080800</a>		Screw, 8-18 X 3/8
7	<a href="#">8310656</a>			Cabinet
8	3392100	<a href="#">49621</a>		Feet-Leveling
"	<a href="#">279810</a>			Foot-Optional
9	<a href="#">660658</a>			Clamp, Motor Mounting 343481 685441
10	<a href="#">3387374</a>			Spring, Idler
11	<a href="#">3389420</a>			Retainer-Idler 1/4-20 X 1/16
12	697750	<a href="#">W10470674</a>		Dryer Exhaust Kit
13	3388672	<a href="#">279640</a>		Pulley-ldr
14	697776	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
				Assembly, Screw And

15	<a href="#">3400934</a>		Assembly, Screw And Insulator
16	340025	<a href="#">687133</a>	Wire
17	<a href="#">3395532</a>		Exhaust Pipe And Bracket
18	<a href="#">233520</a>		Washer, Thrust
19	<a href="#">3389249</a>		Nut, Inner Door
20	<a href="#">690997</a>		Washer, Thrust
21	<a href="#">3389247</a>		Hinge And Pin Assembly
22	342055	<a href="#">488627</a>	Screw
23	<a href="#">8066120</a>		Lever, Door Switch
24	<a href="#">3394081</a>		Wire, Broken Belt Switch
25	<a href="#">49026</a>		4" - 90° Elbow
26	<a href="#">3393657</a>		Restrainer, Belt
27	3404470	<a href="#">W10416573</a>	Motor-Drive
28	<a href="#">3395534</a>		Exhaust Pipe
29	<a href="#">3402548</a>		Pulley 50 Hz
30	3387610	<a href="#">661570</a>	Belt
31	<a href="#">3400097</a>		Screw, 10-24 X 3/8
32	<a href="#">3387118</a>		Bracket, Motor
33	3395535	<a href="#">8563749</a>	Exhaust Pipe
35	697773	<a href="#">3395530</a>	Screw
36	<a href="#">693995</a>		Screw, Hex Head
37	<a href="#">8318396</a>		Foam-Seal
38	<a href="#">3390902</a>		Clip, Door Hinge
39	3388674	<a href="#">W10118756</a>	Idler Bracket
40	<a href="#">297092</a>		Clip
41	3406109	<a href="#">3406107</a>	Door Switch Assembly
42	<a href="#">3397659</a>		Block, Terminal
43	<a href="#">279318</a>		Terminal Tinned And Brass Panel
44	<a href="#">3387242</a>		Seal, Front Panel
45	<a href="#">279393</a>		Terminal Block Screw Kit
46	<a href="#">3388229</a>		Retainer, Toe Panel
47	3392563	<a href="#">280083</a>	Door-Rear
48	3387258	<a href="#">W10111542</a>	Cord, Power
49	<a href="#">3387872</a>		Door, Front
50	3393008	<a href="#">308685</a>	Side Trim )
51	8317373	<a href="#">280038</a>	Panel
52	696144	<a href="#">279570</a>	Latch
56	<a href="#">694415</a>		Clip, Strain Relief
57	<a href="#">3390735</a>		Seal, Door
58	3392538	<a href="#">279570</a>	Latch
60	<a href="#">3389522</a>		Handle, Door
61	697215	<a href="#">3406797</a>	Toe Panel
"	BLANK	Not Available	Optional Parts Not Included
62	279818	<a href="#">W10470674</a>	Dryer Exhaust Kit
"	N/A	Not Available	ACCESSORY PARTS
"	<a href="#">4392067</a>		Kit, Dryer Repair
"	3406911	<a href="#">8212450A</a>	Dryer Rack
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

