


Whirlpool 3XLER5437KQ4 01 - TOP AND CONSOLE PARTS

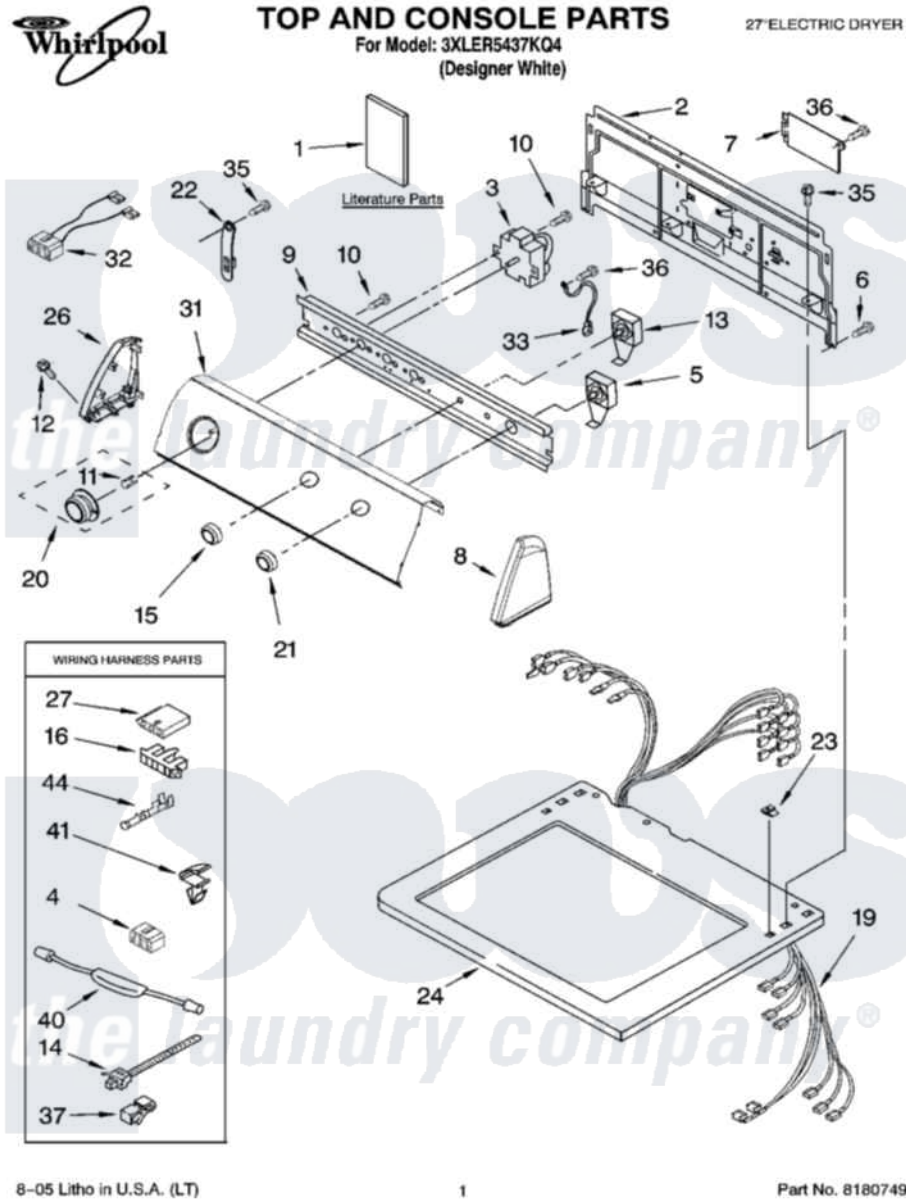

Whirlpool Residential Whirlpool 3XLER5437KQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318458		Not Available	Wiring Diagram
"	8577080		Not Available	Guide, Use & Care
"	8528095		Not Available	Instructions, Installation
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299770			Timer
4	3347243			Block, Disconnect
5	3395382			Switch, Push-To-Start
6	693995			Screw, Hex Head
7	8317342	W10119283		Cover, Terminal Block
8	8271363	279962		Endcap
9	8271316			Bracket, Control
10	3390646	W10139210		Screw, 8-18 X 5/16

11	688805		Clip, Spring Knob
12	388326		Screw, 8-18 X 1.25
13	3399638		Switch, Temperature
14	3391018		Tie Cable
15	3957799		Knob, Control
16	3397269		Connector, Timer
19	8529874		Harness, Wiring
20	3957754		Timer Knob Assembly
21	3957804		Knob, Push-To-Start
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
31	8318383		Panel, Control
32	8283293	8283286	Wire-Jumper
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
40	8283170	279872	Resistor
41	3394427		Clip-Harness
44	94614		Terminal

