


Whirlpool 3XLER5437KQ5 01 - TOP AND CONSOLE PARTS

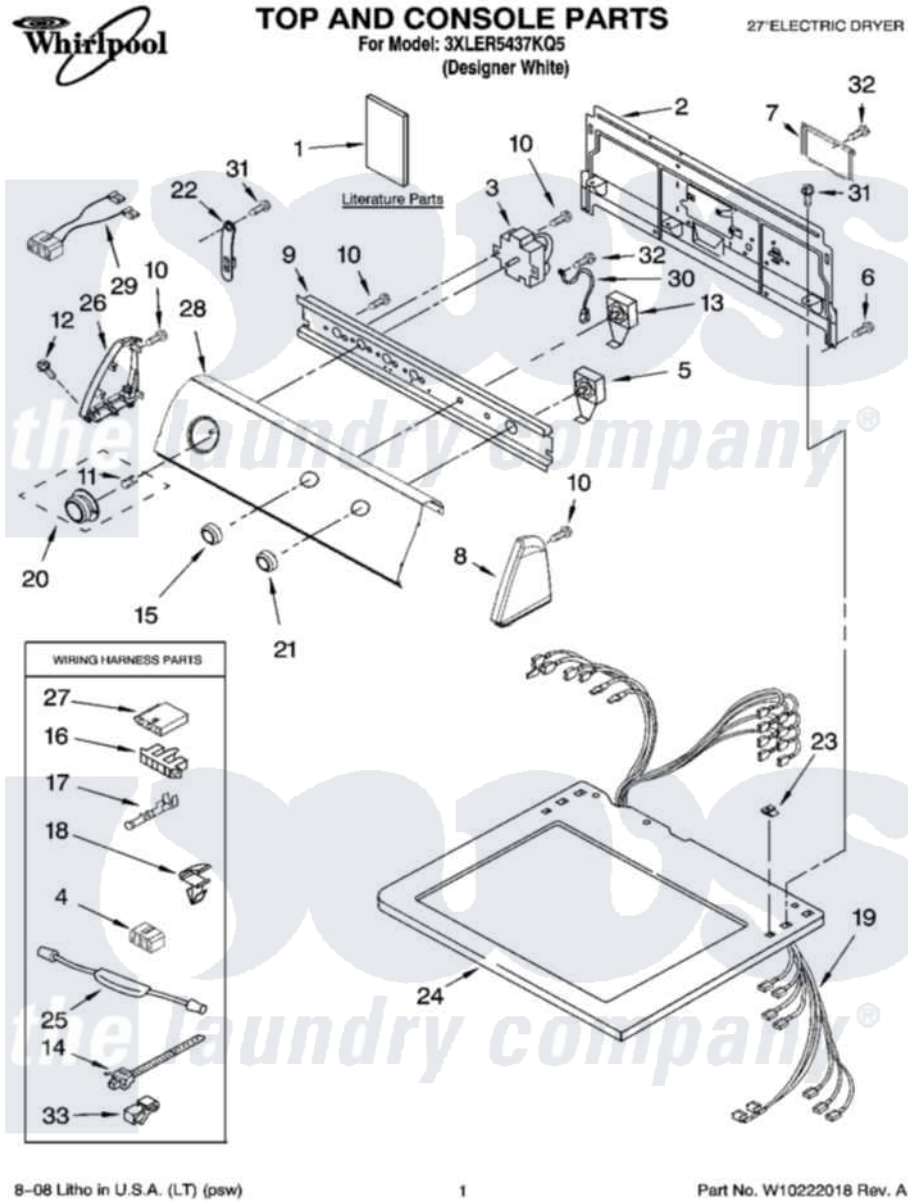

8-08 Litho in U.S.A. (LT) (psw)

1

Part No. W10222018 Rev. A

Whirlpool Residential Whirlpool 3XLER5437KQ5 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10167635		Not Available	Wiring Diagram
"	W10131580		Not Available	Guide, Use & Care
"	W10096895		Not Available	Instructions, Installation
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299770			Timer
4	3347243			Block, Disconnect
5	3395382			Switch, Push-To-Start
6	693995			Screw, Hex Head
7	W10096918			Cover, Terminal Block
8	8271363	279962		Endcap
9	8271316			Bracket, Control
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

11	688805		Clip, Spring Knob
12	388326		Screw, 8-18 X 1.25
13	W10115453		Switch, Temperature
14	3391018		Tie Cable
15	3957799		Knob, Control
16	3397269		Connector, Timer
17	94614		Terminal
18	3394427		Clip-Harness
19	W10167633		Harness, Wiring
20	3957754		Timer Knob Assembly
21	3957804		Knob, Push-To-Start
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
25	8283170	279872	Resistor
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	8318383		Panel, Control
29	8283293	8283286	Wire-Jumper
30	3398893	3395559	Wire
31	3390647	488729	Screw
32	98139	303776	Screw
33	357572	W10113937	Clip, Grounding

