


Whirlpool 3XLGR5437KQ1 04 - 3402853 BURNER ASSEMBLY

3402853 BURNER ASSEMBLY

For Model: 3XLGR5437KQ1
(Designer White)

USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED, TYPE 3 – MANUFACTURED
AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES

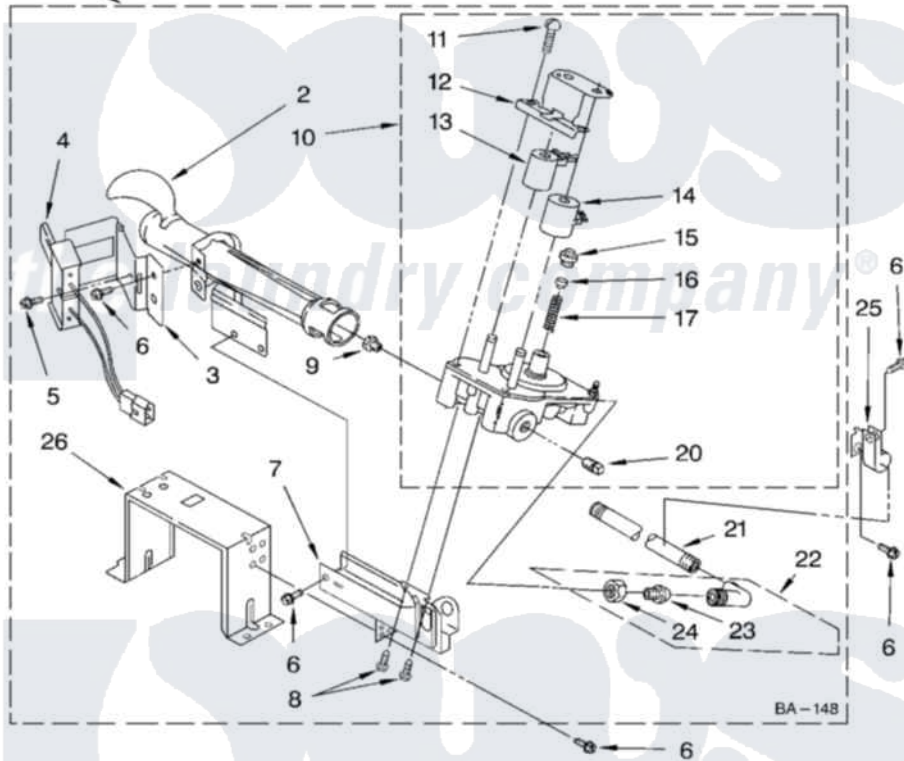

8180029

7

Whirlpool [Residential Whirlpool 3XLGR5437KQ1 Dryer Parts](#) Parts Diagram 04 - 3402853 BURNER ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3402853			Burner Assembly 50 Hz
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	3351614			Screw, Gearcase Cover Mounting
7	3389871		Not Available	Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234660			Orifice, Burner Type 1
"	299372		Not Available	Orifice, Burner (Butane)
10	8281918			Valve, Gas 60 Hz
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt
13	695297	307930		Coil, Secondary
14	695298	Y307931		Coil, Holding And Booster

15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
20	239822	W10295523	Plug, Pipe
21	3387224	Not Available	Pipe, Gas Supply
22	3406051		Elbow Union Assembly
23	3393767		Pipe, Tail
24	233076		Nut, Compression
25	3387561		Clamp-Pipe
26	3389889		Bracket, Support
"	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	279918	279918A	LP Gas Con

the laundry company[®]

the laundry company[®]

the laundry company[®]