


Whirlpool 3XLGR5437KQ3 01 - TOP AND CONSOLE PARTS

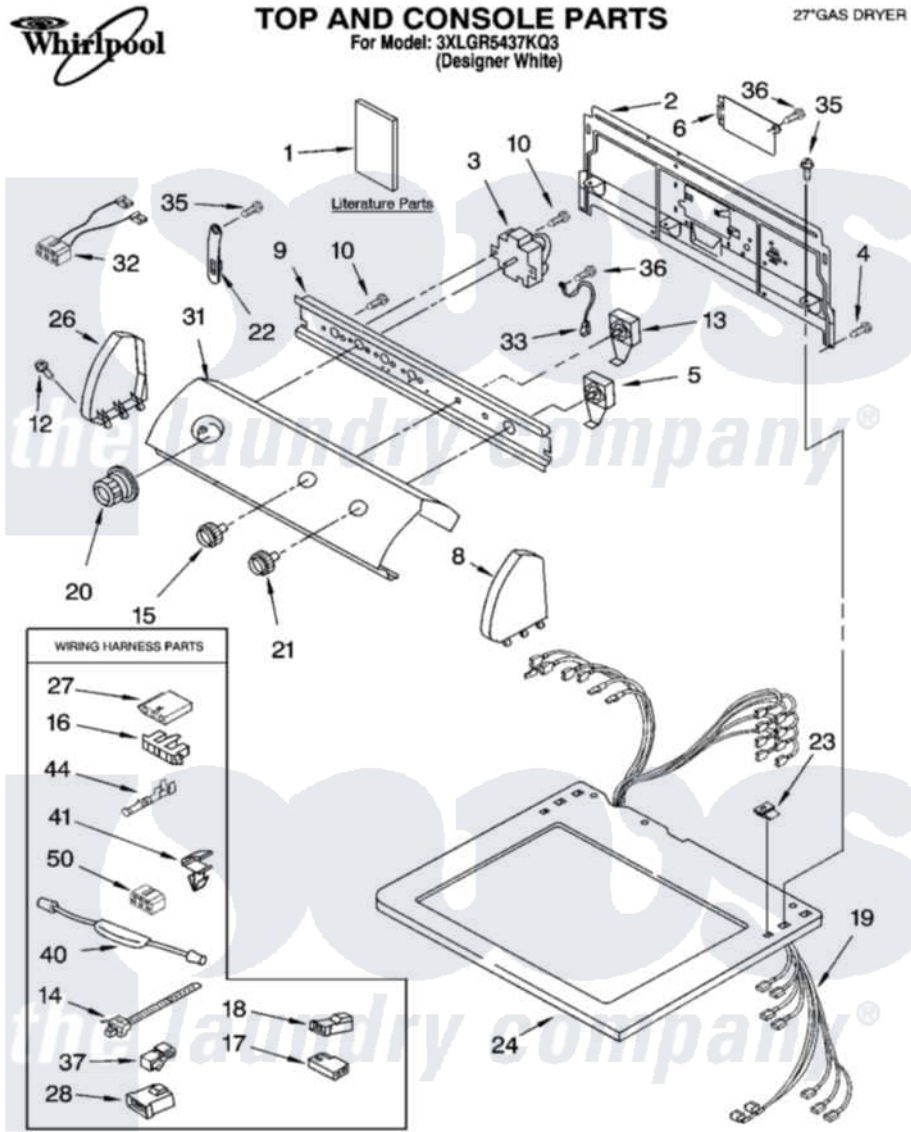

7-05 Litho in U.S.A. (LT)

1

Part No. 8180726

Whirlpool Residential Whirlpool 3XLGR5437KQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318458		Not Available	Wiring Diagram
"	8577080		Not Available	Guide, Use & Care
"	8528097		Not Available	Instructions, Installation
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299770			Timer
4	693995			Screw, Hex Head
5	3395382			Switch, Push-To-Start
6	8317342	W10119283		Cover, Terminal Block
8	8271363	279962		Endcap
9	8271316			Bracket, Control
10	3390646	W10139210		Screw, 8-18 X 5/16
12	388326			Screw, 8-18 X 1.25

13	3399638		Switch, Temperature
14	3391018		Tie Cable
15	8271339	3957799	Knob, Control
16	3397269		Connector, Timer
17	717252		Receptacle, Terminal
18	3403499		Connector, 2-Postion
19	8529869		Harness, Wiring
20	8312687	3957754	Timer Knob Assembly
21	8271341	3957804	Knob, Push-To-Start
22	8568314		Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	3403498		Connector, 3-Position
31	8318383		Panel, Control
32	8283293	8283286	Wire-Jumper
33	3398893	3395559	Wire
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
40	8283170	279872	Resistor
41	3394427		Clip-Harness
44	94614		Terminal
50	3347243		Block, Disconnect

the laundry company[®]

the laundry company[®]