


Whirlpool 3XLSQ7533JQ3 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS (NOT INCLUDED)

MISCELLANEOUS PARTS

For Model: 3XLSQ7533JQ3
(Designer White)

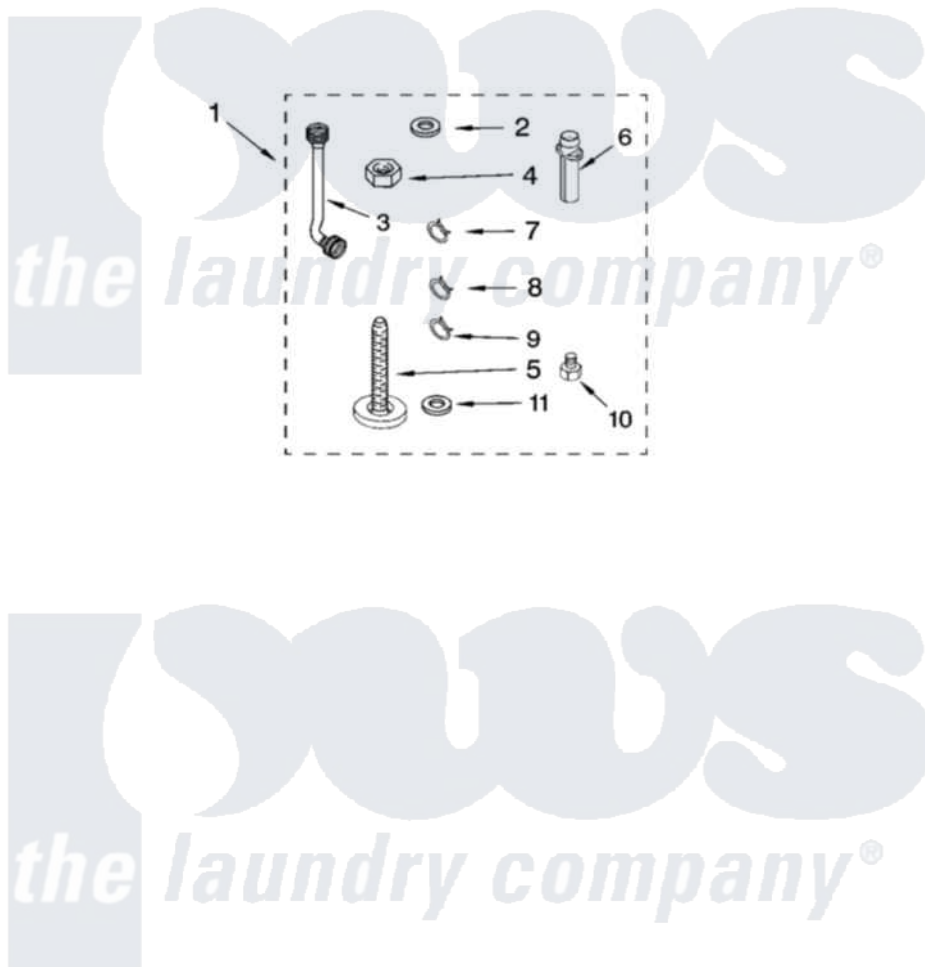

Whirlpool [Residential Whirlpool 3XLSQ7533JQ3 Washer Parts](#) Parts Diagram 10 - MISCELLANEOUS PARTS, OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8541754			Miscellaneous Parts Bag
2	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
3	3949382			Hose, Water Inlet
"	3949383			Hose, Water Inlet
4	3359452			Nut, Lock
5	389102	W10001130		Foot, Leveling
6	3363920	3363920A		Adapter
7	3366912	356138		Clamp, Hose
8	3366913	3357331		Clamp, Drain
9	356138			Clamp, Hose
10	3357397			Adapter, Water Inlet Hose
11	3976290	3357450		Washer, Water Inlet Hose
	72017			Paint, Touch-Up

"	350938		Paint, Pressurized Spray B
"	350930		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)
"	BLANK	Not Available	OIL
"	350572		Oil
"	BLANK	Not Available	LUBRICANT
"	285208		Lubricant
"	BLANK	Not Available	SEALER
"	285195		Sealer Sealer, Gasket
"	BLANK	Not Available	ACCESSORY PARTS
"	367031		Water System Parts
"	285320		Water System Parts

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]