


Whirlpool 3XWED5705SW1 01 - TOP AND CONSOLE PARTS

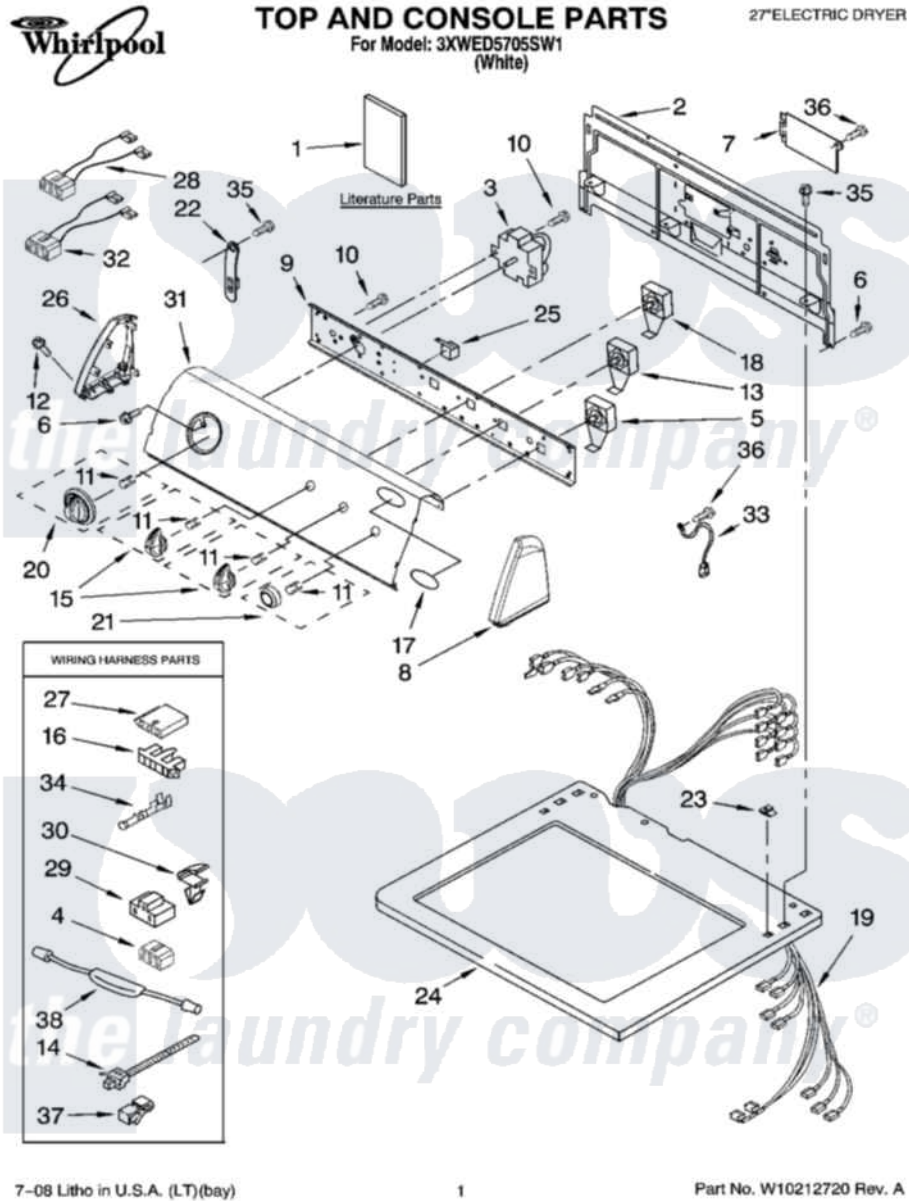

7-08 Litho in U.S.A. (LT)(bay)

1

Part No. W10212720 Rev. A

Whirlpool [Residential Whirlpool 3XWED5705SW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|---------------------------|---------------|--|
| 1 | W10167634 | | Not Available | Wiring Diagram |
| " | W10131580 | | Not Available | Guide, Use & Care |
| " | W10096895 | | Not Available | Instructions, Installation |
| " | BLANK | | Not Available | Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS |
| " | 677818 | | Not Available | Manual, Do-It- Yourself Repair (Dryer) |
| 2 | 8317305 | 285909 | | Panel-Rear |
| 3 | 8299769 | W10116281 | | Timer |
| 4 | 3347243 | | | Block, Disconnect |
| 5 | W10112633 | | | Switch, Push-To-Start |
| 6 | 8533951 | 3400859 | | Screw, Grounding |
| 7 | W10096918 | | | Cover, Terminal Block |
| 8 | 8271363 | 279962 | | Endcap |
| 9 | 8544897 | | | Bracket, Control |
| 10 | 8533951 | 3400859 | | Screw, Grounding |

| | | | |
|----|---------------------------|---------------------------|-------------------------------|
| 11 | 8536939 | | Clip, Knob |
| 12 | 388326 | | Screw, 8-18 X 1.25 |
| 13 | W10168170 | | Switch, Rotary |
| 14 | 3391018 | | Tie Cable |
| 15 | W10034380 | | Knob, Control |
| 16 | 3397269 | | Connector, Timer |
| 17 | 3955775 | 8303811 | Badge, Assembly |
| 18 | 3399639 | | Switch, Rotary Temperature |
| 19 | W10167631 | | Harness, Wiring |
| 20 | W10034750 | | Timer Knob Assembly |
| 21 | W10034790 | | Knob, Push-To-Start |
| 22 | 8318255 | 8568314 | Strap, Console |
| 23 | 357213 | | Nut, Push-In |
| 24 | 8271399 | 3979278 | Top |
| 25 | 8522378 | | Mini Buzzer |
| 26 | 8271369 | 279962 | Endcap |
| 27 | 3936144 | | Do-It-Yourself Repair Manuals |
| 28 | W10128691 | | Wire, Jumper |
| 29 | 3401144 | | Connector |
| 30 | 3394427 | | Clip-Harness |
| 31 | W10095950 | | Panel, Control |
| 32 | W10128690 | | Wire, Jumper Assembly |
| 33 | 3398893 | 3395559 | Wire |
| 34 | 94614 | | Terminal |
| 35 | 3390647 | 488729 | Screw |
| 36 | 98139 | 303776 | Screw |
| 37 | 357572 | W10113937 | Clip, Grounding |
| 38 | 8283170 | 279872 | Resistor |

the laundry company[®]

Howes
the laundry company[®]