


Whirlpool 3XWED5705SW2 01 - TOP AND CONSOLE PARTS

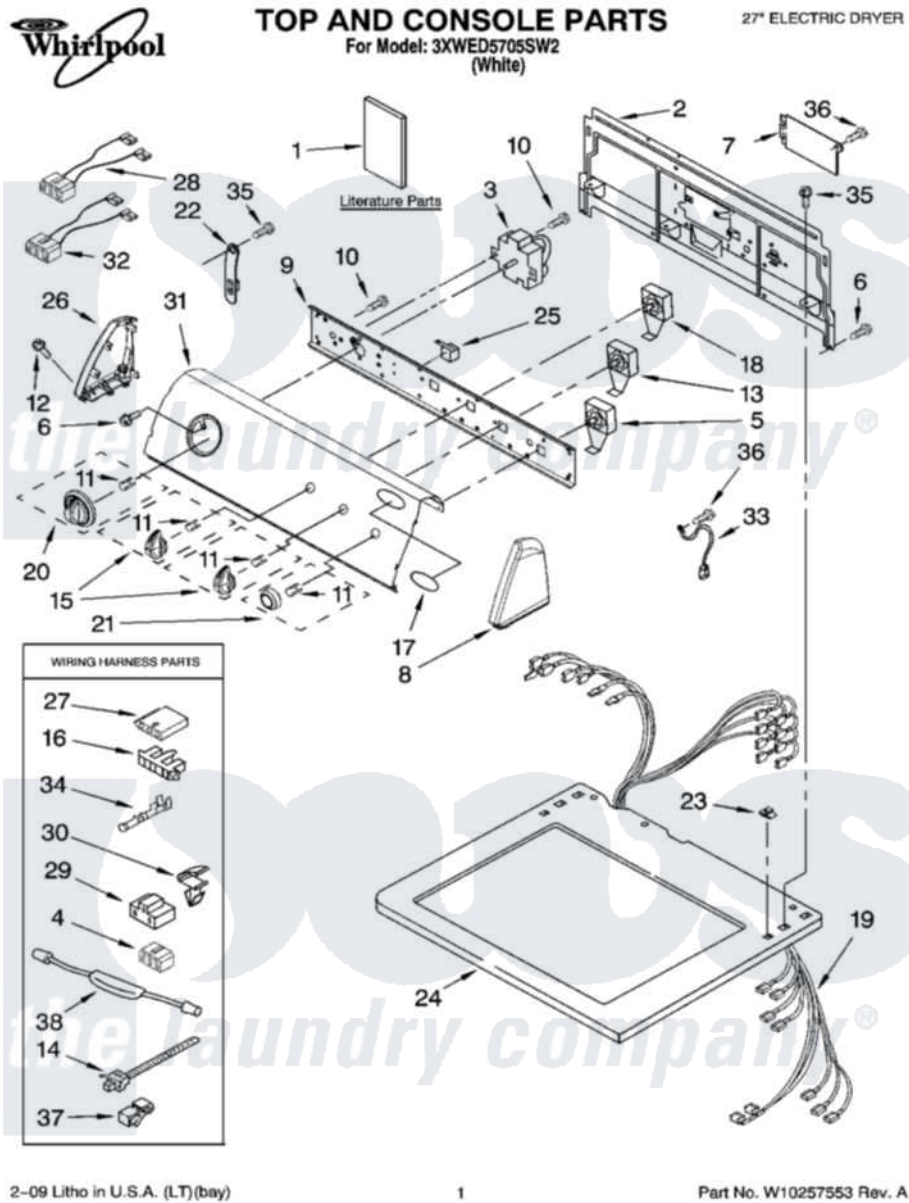

2-09 Litho in U.S.A. (LT)(bay)

1

Part No. W10257553 Rev. A

Whirlpool [Residential Whirlpool 3XWED5705SW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10241045		Not Available	Wiring Diagram
"	W10131645		Not Available	Guide, Use & Care
"	W10115524		Not Available	Instructions, Installation
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299769	W10116281		Timer
4	3347243			Block, Disconnect
5	W10112633			Switch, Push-To-Start
6	8533951	3400859		Screw, Grounding
7	W10096918			Cover, Terminal Block
8	8271363	279962		Endcap
9	8544897			Bracket, Control
10	8533951	3400859		Screw, Grounding

11	8536939		Clip, Knob
12	388326		Screw, 8-18 X 1.25
13	W10168170		Switch, Rotary
14	3391018		Tie Cable
15	W10034380		Knob, Control
16	3397269		Connector, Timer
17	3955775	8303811	Badge, Assembly
18	W10168168		Switch, Rotary
19	W10242812		Harness, Wiring
20	W10034750		Timer Knob Assembly
21	W10034790		Knob, Push-To-Start
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
25	8522378		Mini Buzzer
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	W10128691		Wire, Jumper
29	3401144		Connector
30	3394427		Clip-Harness
31	W10095950		Panel, Control
32	W10128690		Wire, Jumper Assembly
33	3398893	3395559	Wire
34	94614		Terminal
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
38	8283170	279872	Resistor

the laundry company[®]

Howes
the laundry company[®]