


Whirlpool 3XWGD5705SW0 01 - TOP AND CONSOLE PARTS

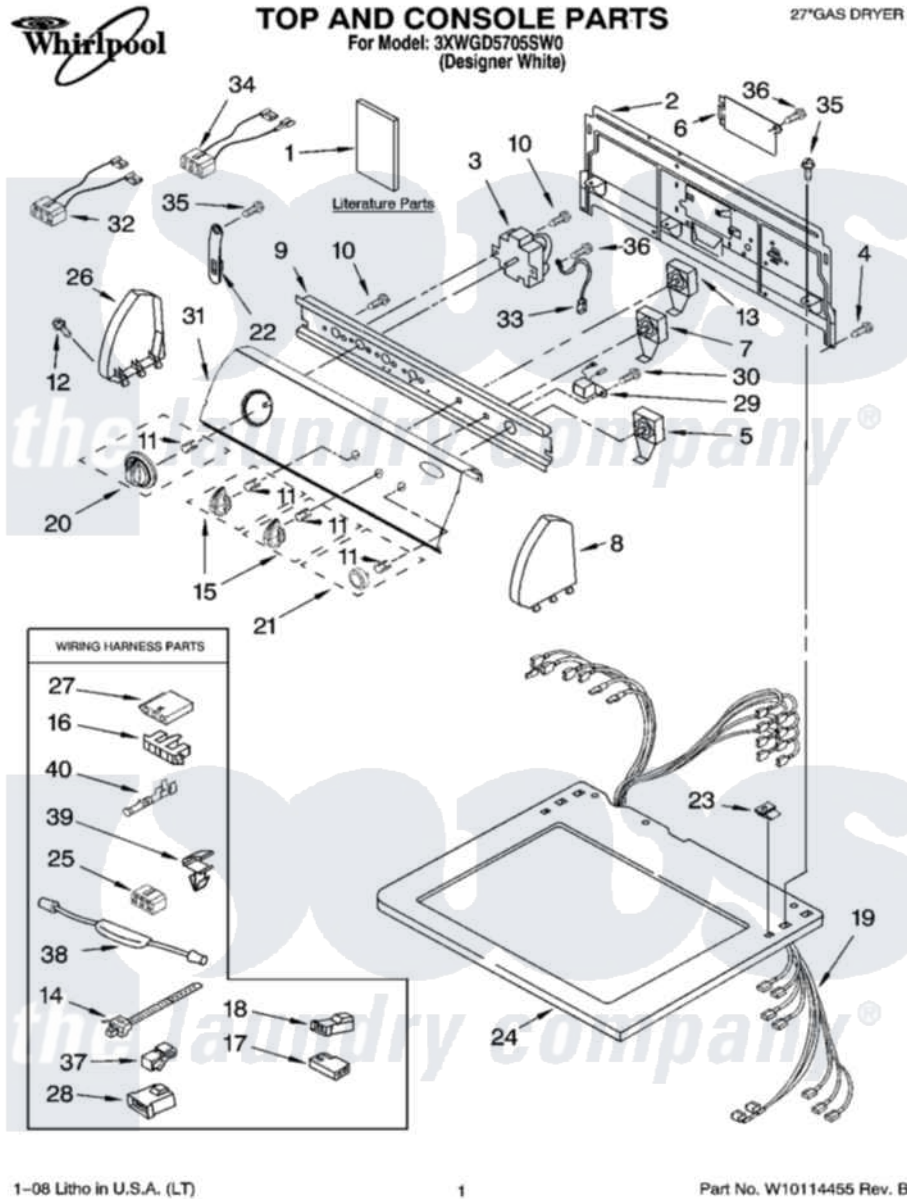

1-08 Litho in U.S.A. (LT)

1

Part No. W10114455 Rev. B

Whirlpool [Residential Whirlpool 3XWGD5705SW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10145122		Not Available	Wiring Diagram
"	W10131580		Not Available	Guide, Use & Care
"	W10120482		Not Available	Instructions, Installation
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8317305	285909		Panel-Rear
3	8299769	W10116281		Timer
4	693995			Screw, Hex Head
5	W10112633			Switch, Push-To-Start
6	8317342	W10119283		Cover, Terminal Block
7	8316076	W10168170		Switch, Rotary
8	8271363	279962		Endcap
9	8544897			Bracket, Control
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

11	8536939		Clip, Knob
12	388326		Screw, 8-18 X 1.25
13	3399639		Switch, Rotary Temperature
14	3391018		Tie Cable
15	W10034380		Knob, Control
16	3397269		Connector, Timer
17	717252		Receptacle, Terminal
18	3403499		Connector, 2-Postion
19	W10111675		Harness, Wiring
20	W10034750		Timer Knob Assembly
21	W10034790		Knob, Push-To-Start
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
25	3347243		Block, Disconnect
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	3403498		Connector, 3-Position
29	8522378		Mini Buzzer
30	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	W10095950		Panel, Control
32	W10128690		Wire, Jumper Assembly
33	3398893	3395559	Wire
34	W10128691		Wire, Jumper
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
38	8283170	279872	Resistor
39	3394427		Clip-Harness
40	94614		Terminal

