


Whirlpool 3XWGD5705SW2 01 - TOP AND CONSOLE PARTS

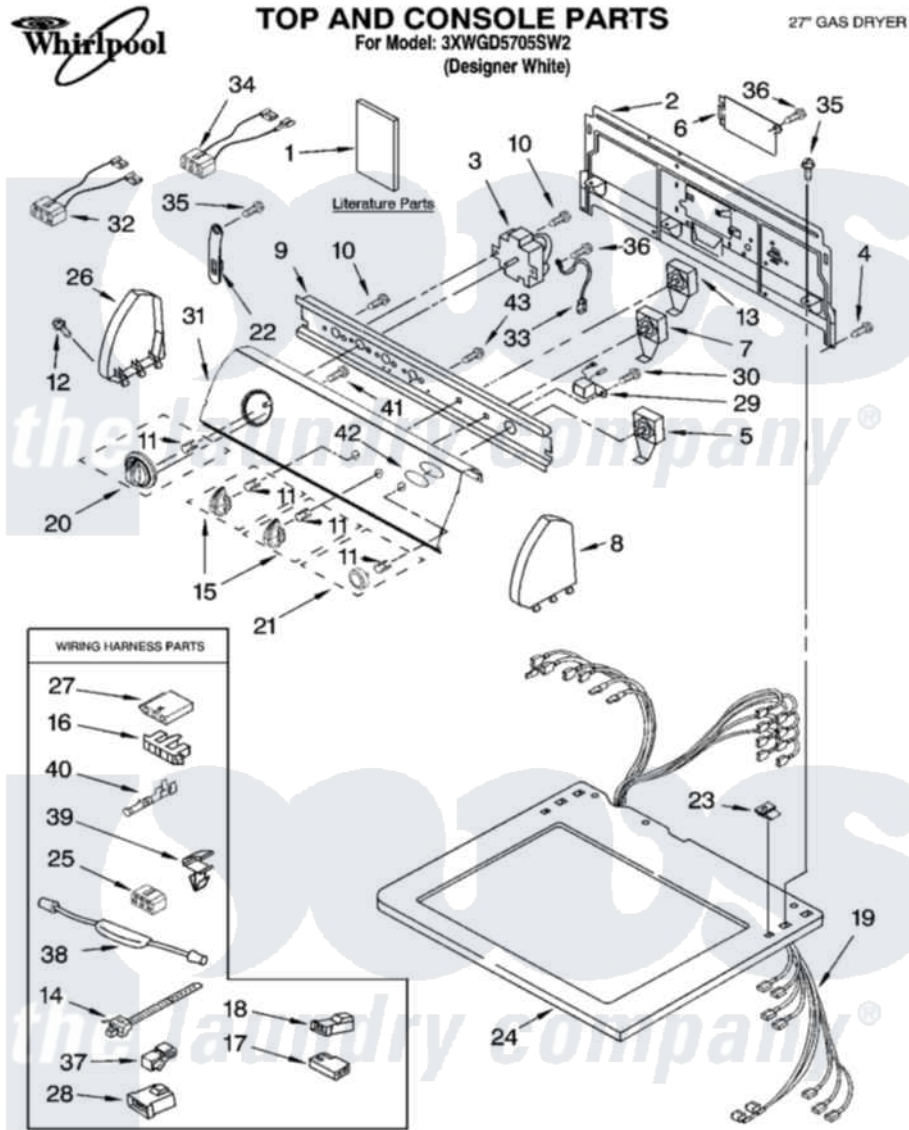

02-09 Litho in U.S.A. (MP) (eeb)

1

Part No. W10247722 Rev. A

Whirlpool [Residential Whirlpool 3XWGD5705SW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10241045		Not Available	Wiring Diagram
"	W10131645		Not Available	Guide, Use & Care
"	W10131644		Not Available	Instructions, Installation
2	8317305	285909		Panel-Rear
3	8299769	W10116281		Timer
4	693995			Screw, Hex Head
5	W10112633			Switch, Push-To-Start
6	W10096918			Cover, Terminal Block
7	W10168170			Switch, Rotary
8	8271363	279962		Endcap
9	8544897			Bracket, Control
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	8536939			Clip, Knob
12	388326			Screw, 8-18 X 1.25
13	3399639			Switch, Rotary Temperature
14	3391018			Tie Cable

15	W10034380		Knob, Control
16	3397269		Connector, Timer
17	717252		Receptacle, Terminal
18	3403499		Connector, 2-Postion
19	W10226479		Harness, Wiring
20	W10034750		Timer Knob Assembly
21	W10034790		Knob, Push-To-Start
22	8318255	8568314	Strap, Console
23	357213		Nut, Push-In
24	8271399	3979278	Top
25	3347243		Block, Disconnect
26	8271369	279962	Endcap
27	3936144		Do-It-Yourself Repair Manuals
28	3403498		Connector, 3-Position
29	8522378		Mini Buzzer
30	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	W10095950		Panel, Control
32	W10128690		Wire, Jumper Assembly
33	3398893	3395559	Wire
34	W10128691		Wire, Jumper
35	3390647	488729	Screw
36	98139	303776	Screw
37	357572	W10113937	Clip, Grounding
38	8283170	279872	Resistor
39	3394427		Clip-Harness
40	94614		Terminal
41	8533951	3400859	Screw, Grounding
42	3955775	8303811	Badge, Assembly
43	W10130935		Screw, 8-32 X 5/16

