


# Whirlpool 4KWED5790VW0 02 - TOP AND CONSOLE PARTS

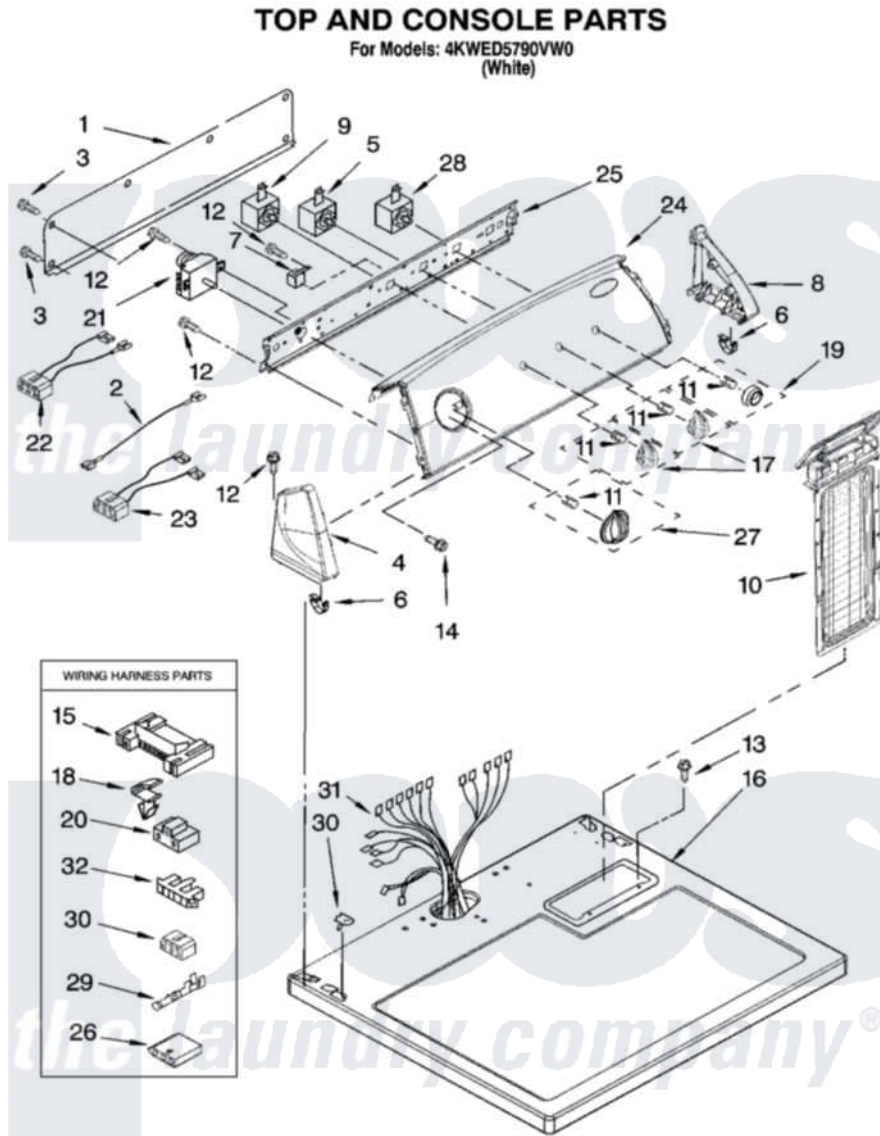

W10248255

3

Whirlpool [Residential Whirlpool 4KWED5790VW0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">693995</a>			Screw, Hex Head
4	8566035	<a href="#">8565957</a>		Cap, End
5	<a href="#">3405156</a>			Switch, Rotary
6	<a href="#">8312709</a>			Clip-Console
7	<a href="#">3952439</a>			Buzzer, Mini
8	8566032	<a href="#">8565954</a>		Cap, End
9	<a href="#">3399639</a>			Switch, Rotary Temperature
10	<a href="#">8557857</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob
12	8533971	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>		Screw, Grounding
15	<a href="#">3395683</a>			Receptacle, Multi-Terminal

16	8559800	<a href="#">8563663</a>	Top
17	<a href="#">W10034380</a>		Knob, Control
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">W10034790</a>		Knob, Push-To-Start
20	<a href="#">3401144</a>		Connector
21	<a href="#">3979618</a>		Timer Assembly
22	<a href="#">3397695</a>		Wire, Jumper
23	3396029	<a href="#">8539893</a>	Wire, Jumper
24	<a href="#">W10115457</a>		Panel, Control
25	<a href="#">8566052</a>		Bracket, Console
26	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
27	<a href="#">W10034750</a>		Timer Knob Assembly
28	<a href="#">W10112668</a>		Switch, Push-To-Start
29	<a href="#">94614</a>		Terminal
30	<a href="#">3347243</a>		Block, Disconnect
31	<a href="#">W10167649</a>		Harness, Wiring
32	<a href="#">3397269</a>		Connector, Timer

