


Whirlpool 4KWED5790VW1 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Model: 4KWED5790VW1
(White)

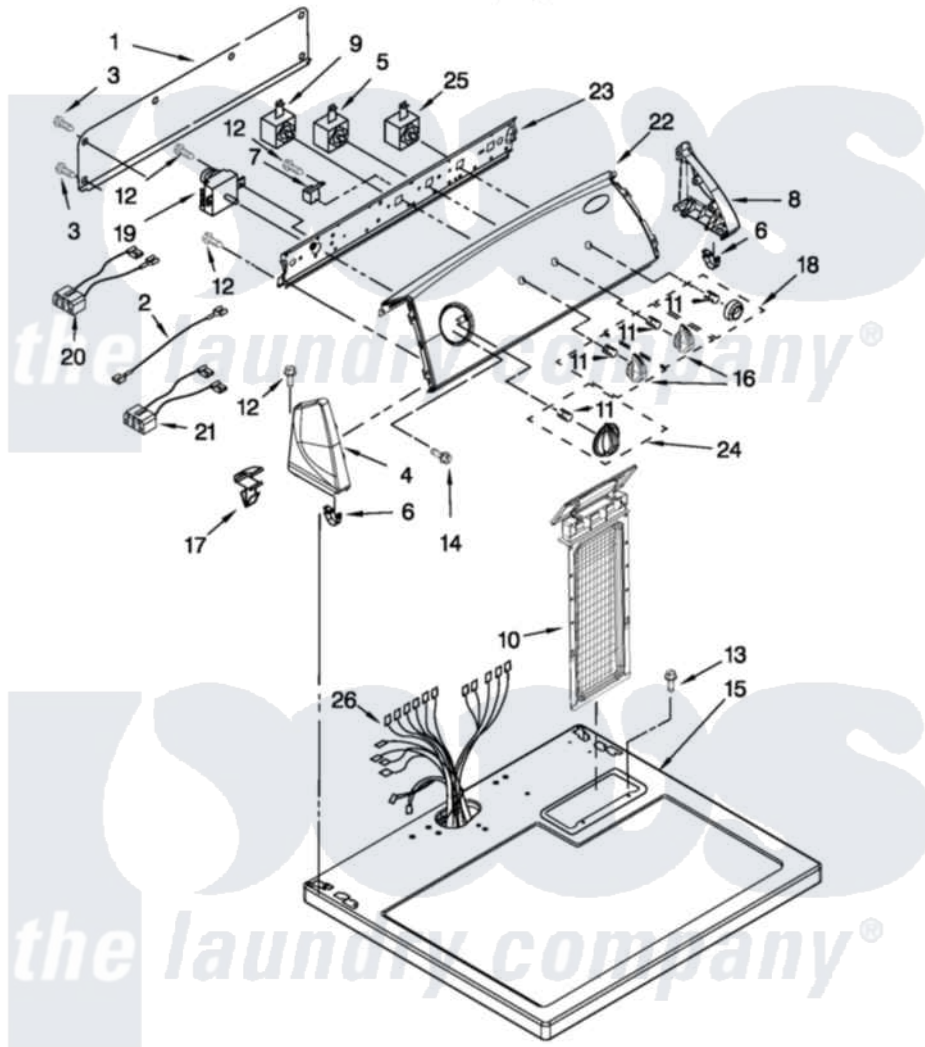

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10459640

3

Whirlpool [Residential Whirlpool 4KWED5790VW1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	3405156			Switch, Rotary
6	8312709			Clip-Console
7	3952439			Buzzer, Mini
8	8566032	8565954		Cap, End
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	8559800	8563663		Top

16	W10034380		Knob, Control
17	3394427		Clip-Harness
18	W10034790		Knob, Push-To-Start
19	3979618		Timer Assembly
20	3397695		Wire, Jumper
21	3396029	8539893	Wire, Jumper
22	W10115457		Panel, Control
23	8566052		Bracket, Console
24	W10034750		Timer Knob Assembly
25	W10112668		Switch, Push-To-Start
26	W10386312		Harness, Wiring

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]