


# Whirlpool 4PLGC8647JT1 01 - TOP AND CONSOLE PARTS

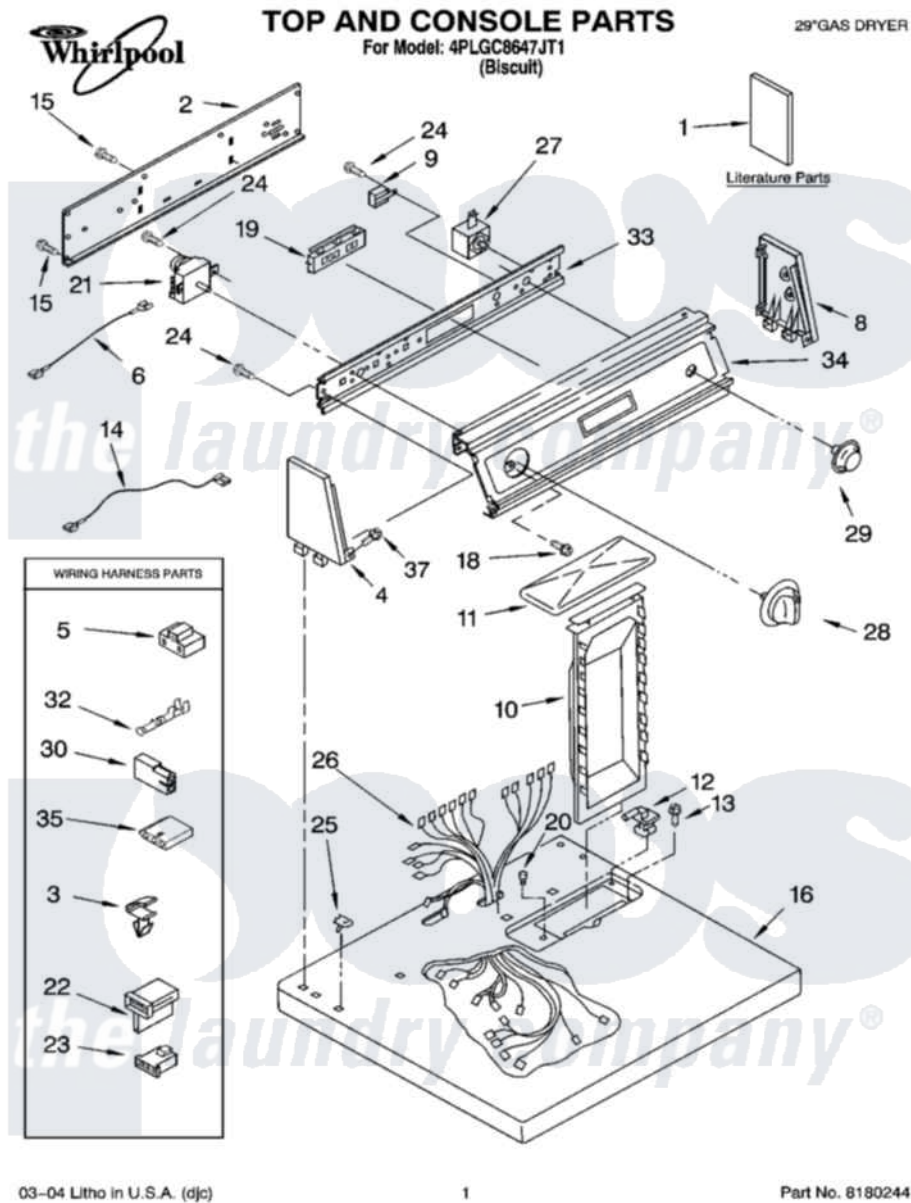

Whirlpool Residential Whirlpool 4PLGC8647JT1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8318359		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8533211		Not Available	Literature Parts (Wiring Diagram)
"	LIT8318357		Not Available	Literature Parts (Installation Instructions (Korean))
"	LIT3405338		Not Available	Literature Parts (Installation Instructions (English))
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	<a href="#">677818L</a>		Diy
2	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	<a href="#">3394427</a>			Clip-Harness
4	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3401144</a>			Connector
6	<a href="#">3401666</a>			Wire Jumper
"	<a href="#">3401684</a>			Jumper, Wire
8	8271362	<a href="#">279965</a>		Endcap

9	<a href="#">3952439</a>		Buzzer, Mini
10	<a href="#">349639</a>		HANdle And Lint Screen Assembly
11	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3393811</a>		Wire, Jumper
"	<a href="#">3393812</a>		Wire, Jumper
"	<a href="#">3401667</a>		Wire, Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8271392	<a href="#">8521920</a>	Top
18	<a href="#">3400859</a>		Screw, Grounding
19	<a href="#">8316078</a>		Switch, Clean Touch
20	297535	<a href="#">17258</a>	Bumper
21	<a href="#">3406282</a>		Timer Assembly
22	<a href="#">3403499</a>		Connector, 2-Postion
23	<a href="#">3403498</a>		Connector, 3-Position
24	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
25	<a href="#">357213</a>		Nut, Push-In
26	<a href="#">8283172</a>		Harness, Wiring
27	8318447	<a href="#">W10112633</a>	Switch, Push-To-Start
28	8271404	<a href="#">3957755</a>	Timer Knob Assembly
29	8271348	<a href="#">3957797</a>	Knob, Push-To-Start
30	<a href="#">717252</a>		Receptacle, Terminal
32	<a href="#">94614</a>		Terminal
33	<a href="#">8271426</a>		Bracket, Control
34	<a href="#">8318390</a>		Panel, Control
35	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
37	<a href="#">388326</a>		Screw, 8-18 X 1.25
"	N/A	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">3406839</a>		Dry Rack Assembly
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">4392899</a>		Paint, Touch-Up
"	<a href="#">4392901</a>		Paint, Pressurized Spray
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">4392900</a>		Paint, Bulk )

*the laundry company*<sup>®</sup>