


Whirlpool 4PLGC8647JT2 04 - 3402844 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED)

3402844 BURNER ASSEMBLY

For Model: 4PLGC8647JT2
(Biscuit)

1 USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED, TYPE 3 - MANUFACTURED AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

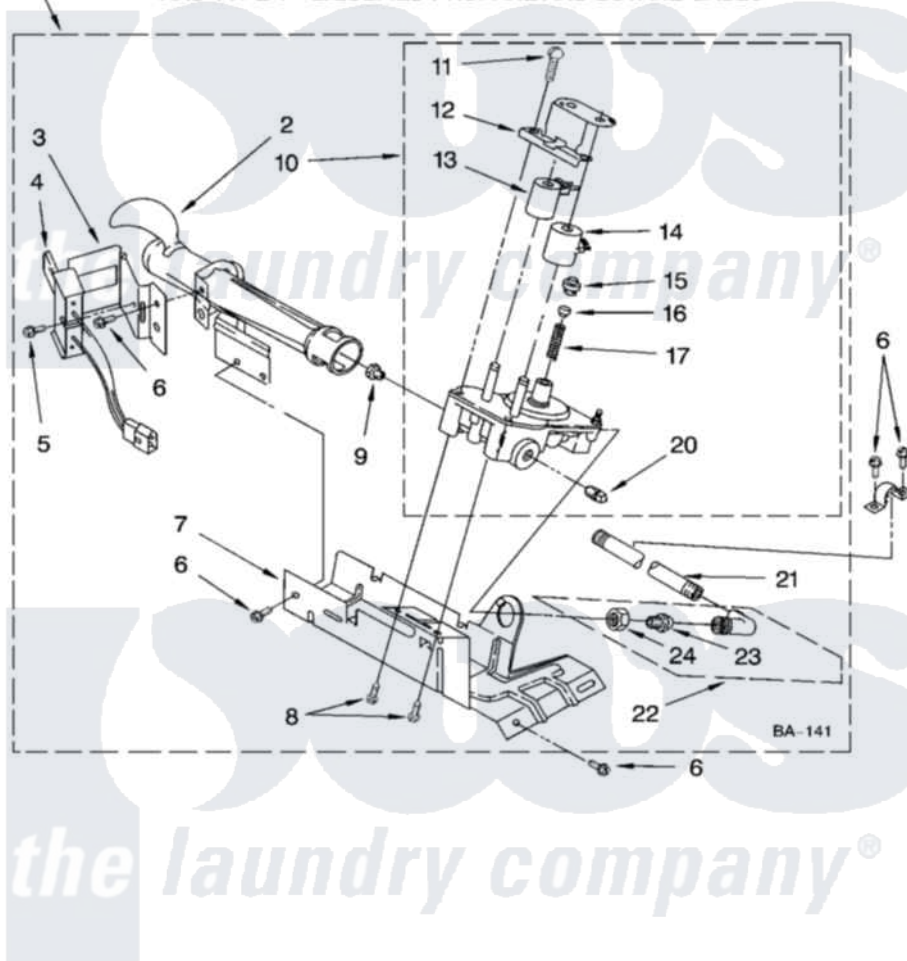

8180811

7

Whirlpool [Residential Whirlpool 4PLGC8647JT2 Dryer Parts](#) Parts Diagram 04 - 3402844 BURNER ASSEMBLY, OPTIONAL PARTS (NOT INCLUDED).
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3402844	W10492502		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	693986			Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	15775	72017		Paint, Touch-Up
"	15419		Not Available	Orifice, Burner (Type 3)
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	3401775	279923		NAT Gas

11	694421		Screw, Bracket Mounting
12	694538		Bracket, Shunt
13	694540		Coil, 60 Hz
14	694539		Coil, 60 Hz
15	694424		Leak, Limiter
16	694423		Screw, Regulator Adjustment
17	694422		Spring, Regulator
20	239822	W10295523	Plug, Pipe
21	233273	Not Available	Pipe, Gas Supply
22	3406052	Not Available	Elbow Union Assembly
23	3393767		Pipe, Tail
24	233076		Nut, Compression
25	341029		Clamp, Pipe Door Spring
"	694572	49572A	Conversion Kit To Type L.p.g.f
	N/A	Not Available	FOLLOWING PARTS NOT ILLUSTRATED
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3406839		Dry Rack Assembly
"	8522199		Accessory Parts
"	4392899		Paint, Touch-Up
"	4392901		Paint, Pressurized Spray
"	350938		Paint, Pressurized Spray B
"	4392900		Paint, Bulk)

