


# Whirlpool 4PWED5905SG0 01 - TOP AND CONSOLE PARTS

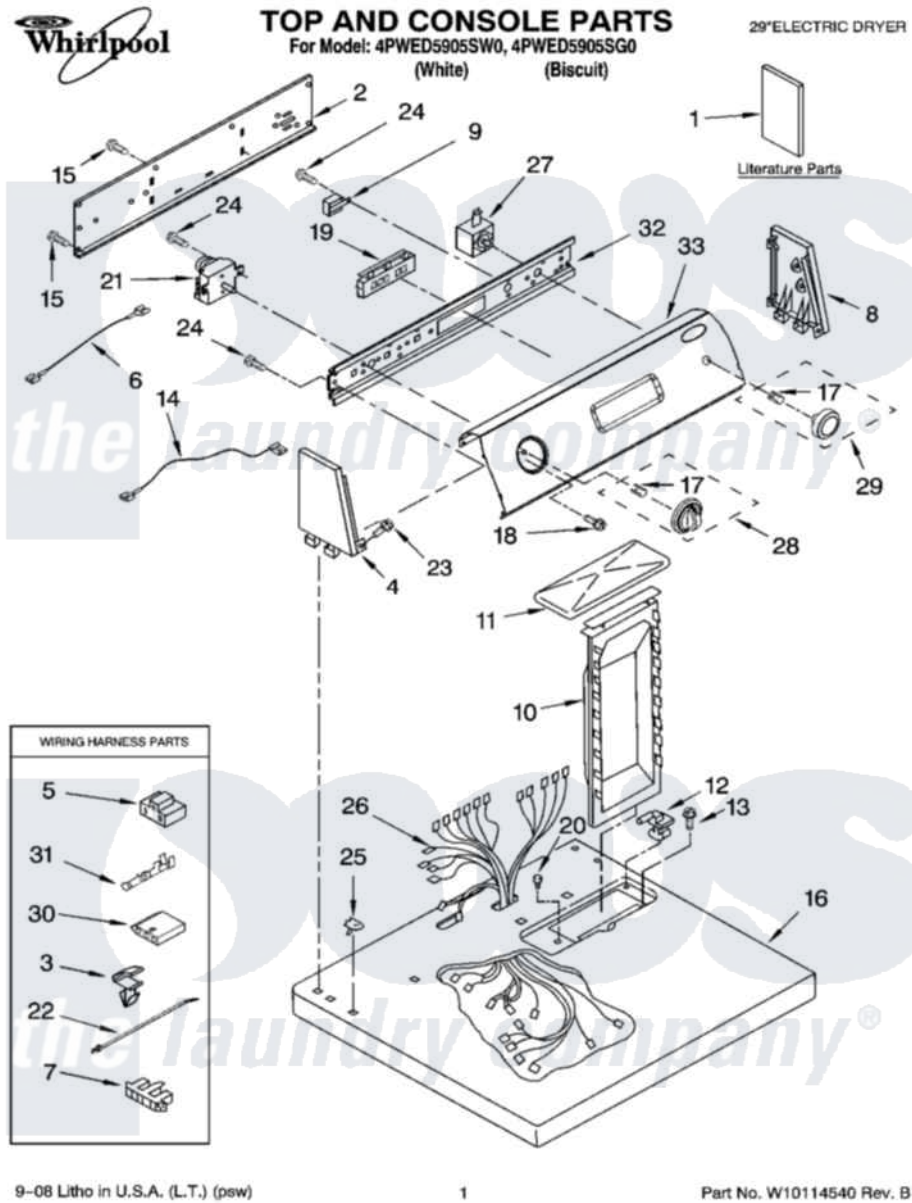

9-08 Litho in U.S.A. (L.T.) (psw)

1

Part No. W10114540 Rev. B

Whirlpool Residential Whirlpool 4PWED5905SG0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10110521		Not Available	Guide, Use & Care
"	W10113035		Not Available	Guide, Use & Care (Export)
"	8533211		Not Available	Wiring Diagram
"	W10111132		Not Available	Installation Instructions
"	W10113034		Not Available	Installation Instructions (Export)
"	W10113036		Not Available	Dryer Cycle Sheet
2	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	<a href="#">3394427</a>			Clip-Harness
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3401144</a>			Connector
6	<a href="#">3401666</a>			Wire Jumper
"	<a href="#">3401684</a>			Jumper, Wire
7	<a href="#">3397269</a>			Connector, Timer
8	8271359	<a href="#">279962</a>		Endcap
"	8271362	<a href="#">279965</a>		Endcap

9	<a href="#">3952439</a>		Buzzer, Mini
10	<a href="#">349639</a>		HAndle And Lint Screen Assembly
11	<a href="#">8283378</a>		Cover, Lint Screen
"	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3393811</a>		Wire, Jumper
"	<a href="#">3393812</a>		Wire, Jumper
"	<a href="#">3401667</a>		Wire, Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8271390	<a href="#">8521918</a>	Top
"	8271392	<a href="#">8521920</a>	Top
17	<a href="#">8536939</a>		Clip, Knob
18	8533951	<a href="#">3400859</a>	Screw, Grounding
19	<a href="#">W10168177</a>		Switch, Clean Touch
"	<a href="#">W10110501</a>		Switch, Clean Touch
20	297535	<a href="#">17258</a>	Bumper
21	<a href="#">W10111123</a>		Timer Assembly
22	<a href="#">3391249</a>		Cable Tie, Push Mount
23	<a href="#">388326</a>		Screw, 8-18 X 1.25
24	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
25	<a href="#">357213</a>		Nut, Push-In
26	<a href="#">8529855</a>		Harness, Wiring
27	<a href="#">W10112633</a>		Switch, Push-To-Start
28	<a href="#">W10034750</a>		Timer Knob Assembly
"	<a href="#">W10034760</a>		Timer Knob Assembly
29	<a href="#">W10034790</a>		Knob, Push-To-Start
"	<a href="#">W10034800</a>		Knob, Push-To-Start
30	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
31	<a href="#">94614</a>		Terminal
32	<a href="#">8271426</a>		Bracket, Control
33	<a href="#">W10115458</a>		Panel, Control
"	<a href="#">W10095980</a>		Panel, Control

