


# Whirlpool 4PWED5905SG1 01 - TOP AND CONSOLE PARTS

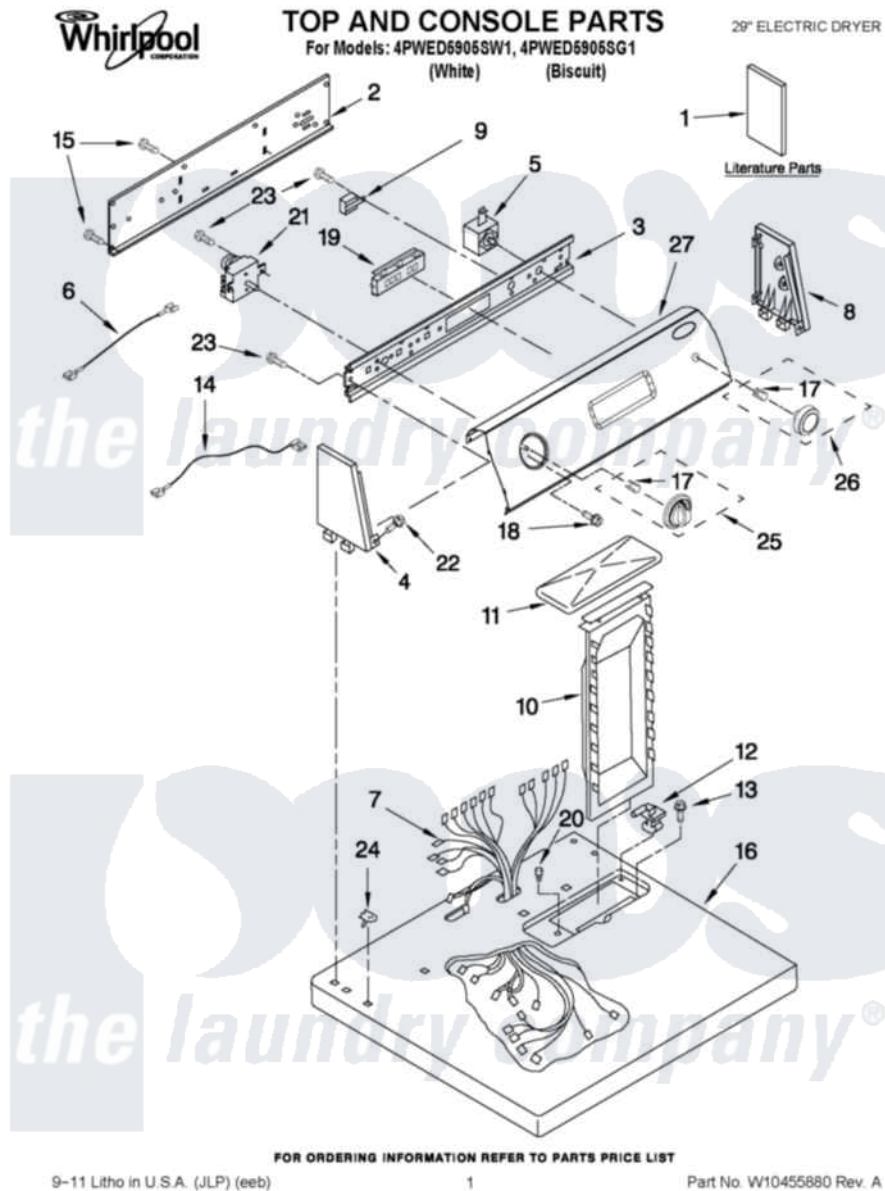

Whirlpool Residential Whirlpool 4PWED5905SG1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10097088		Not Available	GUIDE, USE & CARE
"	W10113035		Not Available	Guide, Use & Care (Export)
"	W10396182		Not Available	WIRING DIAGRAM
"	W10113034		Not Available	Installation Instructions (Export)
"	W10113036		Not Available	Dryer Cycle Sheet
2	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	<a href="#">8271426</a>			Bracket, Control
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">W10112633</a>			Switch, Push-To-Start
6	<a href="#">3401666</a>			Wire Jumper
"	<a href="#">3401684</a>			Jumper, Wire
7	W10386308		Not Available	HARNESS, WIRING
8	8271359	<a href="#">279962</a>		Endcap
"	8271362	<a href="#">279965</a>		Endcap
9	<a href="#">3952439</a>			Buzzer, Mini

10	<a href="#">349639</a>		HANdle And Lint Screen Assembly
11	<a href="#">8283378</a>		Cover, Lint Screen
"	<a href="#">8283380</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3393811</a>		Wire, Jumper
"	<a href="#">3393812</a>		Wire, Jumper
"	<a href="#">3401667</a>		Wire, Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8271390	<a href="#">8521918</a>	Top
"	8271392	<a href="#">8521920</a>	Top
17	<a href="#">8536939</a>		Clip, Knob
18	8533951	<a href="#">3400859</a>	Screw, Grounding
19	<a href="#">W10168177</a>		Switch, Clean Touch
"	<a href="#">W10110501</a>		Switch, Clean Touch
20	297535	<a href="#">17258</a>	Bumper
21	<a href="#">W10111123</a>		Timer Assembly
22	<a href="#">388326</a>		Screw, 8-18 X 1.25
23	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
24	<a href="#">357213</a>		Nut, Push-In
25	<a href="#">W10034750</a>		Timer Knob Assembly
"	<a href="#">W10034760</a>		Timer Knob Assembly
26	<a href="#">W10034790</a>		Knob, Push-To-Start
"	<a href="#">W10034800</a>		Knob, Push-To-Start
27	<a href="#">W10115458</a>		Panel, Control
"	<a href="#">W10095980</a>		Panel, Control

