


Whirlpool 4PWED5905SW1 01 - TOP AND CONSOLE PARTS

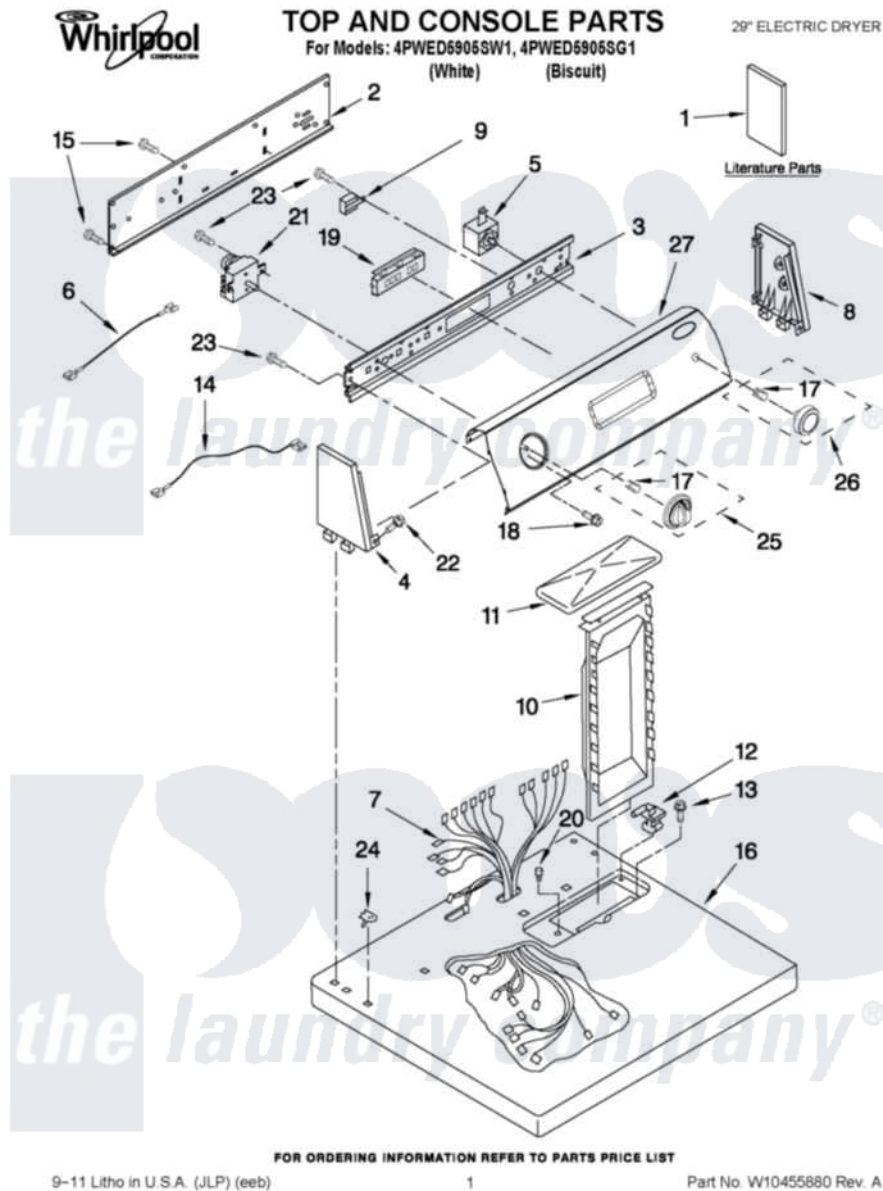

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST
 9-11 Litho in U.S.A. (JLP) (eeb) 1 Part No. W10455880 Rev. A

Whirlpool [Residential Whirlpool 4PWED5905SW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10097088		Not Available	GUIDE, USE & CARE
"	W10113035		Not Available	Guide, Use & Care (Export)
"	W10396182		Not Available	WIRING DIAGRAM
"	W10113034		Not Available	Installation Instructions (Export)
"	W10113036		Not Available	Dryer Cycle Sheet
2	8274261			Do-It-Yourself Repair Manuals
3	8271426			Bracket, Control
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	W10112633			Switch, Push-To-Start
6	3401666			Wire Jumper
"	3401684			Jumper, Wire
7	W10386308		Not Available	HARNESS, WIRING
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3952439			Buzzer, Mini

10	349639		Handle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3393811		Wire, Jumper
"	3393812		Wire, Jumper
"	3401667		Wire, Jumper
15	693995		Screw, Hex Head
16	8271390	8521918	Top
"	8271392	8521920	Top
17	8536939		Clip, Knob
18	8533951	3400859	Screw, Grounding
19	W10168177		Switch, Clean Touch
"	W10110501		Switch, Clean Touch
20	297535	17258	Bumper
21	W10111123		Timer Assembly
22	388326		Screw, 8-18 X 1.25
23	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	357213		Nut, Push-In
25	W10034750		Timer Knob Assembly
"	W10034760		Timer Knob Assembly
26	W10034790		Knob, Push-To-Start
"	W10034800		Knob, Push-To-Start
27	W10115458		Panel, Control
"	W10095980		Panel, Control

